



Component Repair Capabilities

PART NUMBER	DESCRIPTION
70	BATTERY,STAND-BY
71	BATTERY,STAND-BY
213	FILTER
225	INDICATOR,DIAL
282	CHARGER,BATTERY
433	AMMETER
700	FILTER UNIT
832	MOTOR,ACTUATOR
904	AMMETER, AC
993	MOTOR,ELECTRIC
1022	MOTOR,D.C.
1039	CONNECTOR,TAIL
1123	INDICATOR,TEMPERATUR
1189	MOTOR
1245	MOTOR
1501	FILTER,NON-RETURN VA
2405	RELAY,POWER
2420	BOX,CONTROL
2535	RELAY,POWER
2540	RELAY,POWER
2933	SWITCH, LOW TORQUE
2948	ACTUATOR,ROTARY
2978	RELAY,POWER
3001	AUDIO GENERATOR
3890	FILTER,FUEL
3980	BALLAST
4120	CHARGE AMP
4417	BOX,MICROSWITCH
6010	TRANSFORMER.
6342	MODULE,FIRE/OVERHEAT
7015	UNIT,AUDIO WARNING
7016	UNIT,SLAT/FLAP CONTR
8191	ACTUATOR,LINEAR

8260	ACTUATOR
9541	MOTOR,D.C.ACTUATOR
9550	INDICATOR,TURN & SLI
11425	FAN, VANEAXIAL
18555	VALVE,SOLENOID SELEC
19045	PRESSURE INDICATOR
19210	MONITOR
21154	BOX,A.T.R.
21169	FAN,VANEAXIAL
24116	FAN, VANEAXIAL
26949	FAN , ASSY
33638	BLOWER
34722	FAN, VANEAXIAL
34964	FAN, VANEAXIAL
37000	ALTIMETER
39208	FAN
41116	MONITOR,WORKSTATION
50561	INDICATOR,WATER QTY.
50562	INDICATOR,WATER QTY.
50629	TRANSMITTER,HYD.PRES
65640	VALVE,POWER BRAKE CO
65660	VALVE,HYD.SELECTOR
65690	VALVE,SOLENOID SHUT-
65790	VALVE,ENG.BLEED SHUT
70073	VALVE,PRESSURE HOLDI
90200	PANEL,FAILURE WARNIN
90310	PANEL,WARNING
98210	MONITOR,WORKSTATION
108033	VALVE,SOLENOID SELEC
108103	VALVE,SELECTOR
108107	VALVE,SELECTOR
108117	BOX,VALVE
135244	VOLTMETER,DC
135687	BATTERY,SEALED NICAD
137661	INDICATOR,TEMPERATUR
182936	INDICATOR,OXYGEN PRE
182972	INDICATOR,OXYGEN PRE
196716	INDICATOR,BEARING DI
226075	PUMP,BOOSTER
248541	INDICATOR,FLAP POSIT
248697	INDICATOR,DUAL LOADM
248794	INDICATOR,OXYGEN PRE
248836	INDICATOR,DUAL FUEL
253264	INDICATOR,DUAL LOADM
260456	INDICATOR,DC VOLTS

260582	INDICATOR,FLAP POSIT
268121	LOCK,SAFETY
285010	ACTUATOR,MOTOR
285675	VALVE,PRESS.REGULATI
285677	SWITCH,ABSOLUTE PRES
285681	FILTER
285683	VALVE,QUICK DISCONNE
285685	VALVE,CHECK
285687	VALVE,CHECK
285689	VALVE,CHECK
285691	VALVE,CHECK
285695	FILTER
285697	FILTER
285699	VALVE,PRESS.RELIEF
285703	VALVE,PRESS.RELIEF
285707	VALVE,SELECTOR SOLEN
285709	VALVE,DUAL SELECTOR
285711	VALVE,PROPORTIONAL S
285721	CONTACTOR,TWO BREAKE
285723	CONTACTOR,FOUR BREAK
285788	VALVE
287832	VALVE,MINI
287837	BOX,HANDWHEEL CONTRO
287839	VALVE,MECHANICAL SEL
287841	VALVE,HYD.SERVO
287843	BOX,FEEDBACK POTENTI
287862	VALVE,SAFETY
288558	VALVE,RESTRICTOR
384486	GENERATOR,TACHOMETER
404734	SWITCH,ABS.PRESS.ACT
404744	VALVE,DOOR ACTUATOR
421501	K-TYPE THERMOMETER
472074	COMPENSATOR,TEMPERAT
472183	GENERATOR,TACHOMETER
472190	GENERATOR,TACHOMETER
472404	GENERATOR,TACHOMETER
472484	GENERATOR,TACHOMETER
473048	UNIT,FUEL SUMMATION
473049	UNIT,FUEL SUMMATION
473383	UNIT,FUEL SUMMATION
520315	INDICATOR,AIR FLOW
520415	INDICATOR,AC VOLTS
520416	INDICATOR,TEMP.COMPT
520418	INDICATOR,TEMPERATUR
520420	INDICATOR,TEMPERATUR

520423	INDICATOR,DC LOAD
520424	INDICATOR,AC LOAD
520425	INDICATOR,DC VOLTS/A
520445	INDICATOR,ENG.VIB.MO
520525	INDICATOR,OXYGEN PRE
520549	INDICATOR,TURB MOTOR
520575	INDICATOR,FUEL TEMP.
520576	INDICATOR,CSD OIL TE
520580	INDICATOR,N1 APU TAC
520609	INDICATOR,WATER QTY
520610	INDICATOR,WATER QTY
520616	INDICATOR,PRESSURE
520759	INDICATOR,MACH FEEL
520768	INDICATOR,N2 APU TAC
521199	INDICATOR,FUEL TEMP.
521204	INDICATOR,TEMPERATUR
521248	INDICATOR,HYDRAULIC
521349	INDICATOR,AC FREQUEN
521916	INDICATOR,FUEL TEMP.
521918	INDICATOR,FUEL TEMP.
522168	INDICATOR, MACH FEEL
522274	INDICATOR,DUAL TEMP.
522453	IND,ENG.VIB.MONITORI
529020	BOX,ELECTRONIC
587005	FILTER
693214	INDICATOR,OIL TEMP.
701285	POWER SUPPLY
701325	SYSTEM,ANTI-COLLISIO
701363	LIGHT & POWER SUPPLY
701364	LIGHT & POWER SUPPLY
701839	POWER SUPPLY
702242	LIGHT & POWER SUPPLY
704171	TANK UNIT,FUEL
704172	TANK UNIT,FUEL
704173	TRANSMITTER,FUEL GAG
706180	AMPLIFIER,DUAL
706719	AMPLIFIER
706720	AMPLIFIER
716686	INDICATOR,FUEL QTY
716687	INDICATOR,FUEL QTY
718330	BOX,RELAY
728024	SENSOR,CABIN
728025	SENSOR,DUCT
728030	BOX,CONTROL
728133	SENSOR,TEMPERATURE

728483	INDICATOR,TEMPERATUR
780122	SENSOR,DUCT TEMPERAT
782138	AMPLIFIER
782487	AMPLIFIER
784646	PROBE,REGULATION
784647	AMPLIFIER
784688	AMPLIFIER
785004	ACTUATOR
790711	TRANSMITTER,FUEL GAU
790712	TRANSMITTER,FUEL GAU
796740	SELECTOR,REFUELLING
861585	VALVE,DUAL CHECK
Jan-10	BOX,POTENTIOMETER
Feb-10	BOX,POTENTIOMETER
1783860	INDICATOR,AIR NAVIGA
2587567	INDICATOR,GYROSYN CO
3020084	MOTOR,WINDSHIELD WIP
4006018	INDICATOR,HYD.OIL QT
4006019	INDICATOR,HYD.OIL QT
4006020	TANK UNIT,HYD.OIL QT
4006240	INDICATOR,HYD.OIL QT
4006452	TANK UNIT,HYD.OIL
4006454	TANK UNIT
4006534	TANK UNIT
4011257	LIGHT,RETRACTABLE LA
4011287	MOTOR,WINDSHIELD WIP
4020279	HEAD,WINDSHIELD WIPE
4035483	ACTUATOR,ROTARY
4037102	LIGHT,TAXI TURN-OFF
4037132	LIGHT,TAXI TURN-OFF
4047023	MOTOR,WINDSHIELD WIP
4060622	LIGHT,TAXI
4071234	CONTROL,EMERGENCY
4071241	GEAR BOX
4073092	MOTOR,WIPER
4073121	MOTOR,WIPER
4099414	MOTOR W/SHIELD WIPER
4100439	LEVER PARKING BRAKE
4160818	LIGHT, LANDING
4160825	CONVERTER
4173763	LIGHT,RETRACTABLE LA
4175115	ACTUATOR,ROTARY
4189898	LIGHT,TAXI
4189898	LIGHT,TAXI
4189904	LIGHT,WING ICING INS

4189904	WING ICING INSPECTION LIGHT
4189911	LIGHT,WING ICING INS
4189927	LIGHT,ENGINE INSPECT
4189934	LIGHT,ENGINE INSPECT
4191695	LIGHT,RETRACTABLE
4195798	MOTOR
4202171	CONVERTER RH WIPER
4202187	CONVERTER LF WIPER
4209455	LIGHT,WING ICE INSPE
4209462	LIGHT,WING ICE INSPE
4223306	LIGHT,TAXI
4236564	LIGHT,TAXI
4237084	MOTOR W/SHIELD WIPER
4237091	MOTOR W/SHIELD WIPER
4240531	LIGHT,LANDING
4254964	TRANSFORMER
4260425	CONVERTER,MOTOR DRIV
4260432	CONVERTER,MOTOR DRIV
4267568	CONVERTER,MOTOR DRIV
4267575	CONVERTER,MOTOR DRIV
4273511	LIGHT,TAXI TURN-OFF
4273527	LIGHT,TAXI TURN-OFF
4315542	LIGHT,RETRACTABLE
4331772	LIGHT,RETRACTABLE
4333302	LOGO LIGHT
4333318	LOGO LIGHT
4333325	LOGO LIGHT
4333332	LOGO LIGHT
5117026	FILTER
6000480	BOX,ANTI-SKID CONTRO
6664157	WINDSHIELD TEMP. REG
9542653	UNIT,WHEEL DRIVEN
9542654	BOX,ANTI-SKID CONTRO
9542732	VALVE,ANTI-SKID CONT
27141174	VALVE,SHUT-OFF
27141217	VALVE,SHUT-OFF
33638500	BLOWER
4305990071	SENSOR
21059230002	MOTOR,NORMAL
21059230003	MOTOR,NORMAL
21059230004	MOTOR,NORMAL
21059240002	MOTOR,EMERGENCY
21059240003	MOTOR,EMERGENCY
21059240004	MOTOR,EMERGENCY
00033032 -56	LIGHT, LOGO

00033032-55	LIGHT, LOGO
001048-101	UNIT, SWITCHING
0011 22-101	UNIT, SWITCHIN G
00-200-1021	GENERATOR,TACHOMETER
003 -0 01-003	PROBE, FAULT JUNCT I
003 -001 -006	PROBE, FAULT ISOLATI
003 -001-001	PROBE, FAULT JUN CTI
003 -001-002	PROBE, FAULT JUNCTIO
003-001-001	PROBE,FAULT ISOLATIO
003-001-002	PROBE,FAULT ISOLATIO
003-001-003	PROBE,FAULT ISOLATIO
003-001-004	PROBE,FAULT ISOLATIO
003-001-005	PROBE,FAULT ISOLATIO
003-001-006	PROBE,FAULT ISOLATIO
003-001-007	PROBE,FAULT ISOLATIO
003-004-002	PROBE,FAULT ISOLATIO
003-006-001	PROBE,FAULT ISOLATIO
003-007-001	PROBE,FAULT ISOLATIO
008-0004-002	SWITCH, PROXIM ITY
008-0004-005	SWITCH,PROXI M ITY
008-0004-006	SWITCH, PROXI M ITY
0091520200-2	VALVE, VENT ASSY
01 -0770544-00	HORN, GROUND CREW CA
010 -002-013	TANK UNIT
010 2LM 2GE	SENSOR, TOTAL TEM P.
010 4244-003	LIGHT, LOGO FLOOD
010-002-001	TANK UNIT
010-002-002	TANK UNIT
010-002-003	TANK UNIT
010-002-004	TANK UNIT
010-002-005	TANK UNIT
010-002-006	TANK UNIT
010-002-007	TANK UNIT
010-002-008	TANK UNIT
010-002-009	TANK UNIT
010-002-010	TANK UNIT
010-002-011	TANK UNIT
010-002-014	TANK UNIT
0102AW1AF- 1	SENSOR, TOTAL TEMP.
0102TA2AG	SENSOR, TOTAL TEM P.
0104244-001	LIGHT, LOGO FLOOD
0104244-002	LIGHT, LOGO FLOOD
0104244-004	LIGHT, LOGO FLOOD
0104525 -002	LENS, ASSY
01-0770666-00	HORN, APU FIRE WARNI

0108KTU-01	UNIT, FUEL QTY TANK
0108KTU-03	UNIT, FUEL QTY TANK
0108KTU-04	UNIT, FUEL QTY TANK
010-906-001	TANK UNIT
010-906-002	TANK UNIT
010-907-001	TANK UNIT
010-907-001A	TANK UNIT
011-001-001	TANK UNIT
011-001-002	TANK UNIT
011-001-003	TANK UNIT
011-001-004	TANK UNIT
011-001-005	TANK UNIT
011-001-006	TANK UNIT
011-001-007	TANK UNIT
011-001-008	TANK UNIT
011-001-009	TANK UNIT
011100-1	LIGHT, FRWD POSITION
011100-2	LIGHT, FRWD POSITION
0123CH1B	DETECTOR, LOW FLOW
0123FJ	SENSOR, FLUID LEVEL
013015-05	PANEL,CONTROL
013015-09	PANEL,SLATS/FLAPS CO
013015-10	PANEL,STAB.TRIM CONT
013015-12	PANEL,STAB.TRIM CONT
013015-13	PANEL,CONTROL
013015-14	PANEL,STAB.TRIM CONT
013015-15	PANEL,STAB.TRIM CONT
013015-16	PANEL,STAB.TRIM CONT
013016-05	PANEL,SLATS/FLAPS CO
013016-06	PANEL,SLATS/FLAPS CO
013016-10	PANEL,SLATS/FLAPS CO
013016-11	PANEL,SLATS/FLAPS CO
013016-13	PANEL,SLATS/FLAPS CO
013016-15	PANEL,SLATS/FLAPS CO
013016-18	PANEL,SLATS/FLAPS CO
013016-21	PANEL,SLATS/FLAPS CO
013-901-001	TANK UNIT
013-901-002	TANK UNIT
014-025-001	TANK UNIT
015-001-003	TANK UNIT,HYD
015-001-004	TANK UNIT,HYD
0154BE- 2	SENSOR, TEMP.
0154CY	SENSOR, TEMP.
0154DB4	SENSOR, PRESSURE/TOT
0154DN9	SENSOR, ENG. INLET T

0154ED	SENSOR, PRESSURE/TOT
0154ED2	SENSOR, PRESSURE/TOT
0154GLS	SENSOR, TEMP.
0154GT2	SENSOR, PRESSURE/TOT
0154HY	SENSOR, ENGINE INLET
0154JG	SENSOR, ENGINE INLET
0154JU	SENSOR, PRESSURE/TOT
0154LF	SENSOR, TEMP.
016092-02	TRANSMITTER, POSITION
018500AA000NFOA	ELEMENT, FILTER
019-012-001	TRANSMITTER, QTY. RESE
019-012-002	TRANSMITTER, QTY. RESE
019-012-003	TRANSMITTER, QTY. RESE
020-016 -117	TANK UNIT
020-016-001	TANK UNIT
020-016-002	TANK UNIT
020-016-003	TANK UNIT
020-016-004	TANK UNIT
020-016-005	TANK UNIT
020-016-006	TRANSMITTER, FUEL Q
020-016-007	TANK UNIT
020-016-008	TANK UNIT
020-016-009	TANK UNIT
020-016-010	TANK UNIT
020-016-011	TANK UNIT
020-016-012	TRANSMITTER, FUEL QTY
020-016-013	TANK UNIT
020-016-014	TANK UNIT
020-016-015	TANK UNIT
020-016-016	TANK UNIT
020-016-017	TANK UNIT
020-016-018	TANK UNIT
020-016-019	TANK UNIT
020-016-020	TANK UNIT
020-016-021	TANK UNIT
020-016-022	TANK UNIT
020-016-023	TANK UNIT
020-016-024	TANK UNIT
020-016-030	TANK UNIT
020-016-031	TANK UNIT
020-016-032	TANK UNIT
020-016-033	TANK UNIT
020-016-034	TANK UNIT
020-016-035M	TANK UNIT
020-016-036M	TANK UNIT

020-016-037M	TANK UNIT
020-016-038M	TANK UNIT
020-016-040	TANK UNIT
020-016-041	TANK UNIT
020-016-042	TANK UNIT
020-016-043	TANK UNIT
020-016-060	TANK UNIT
020-016-061	TANK UNIT
020-016-062	TANK UNIT
020-016-063	TANK UNIT
020-016-064	TANK UNIT
020-016-070	TANK UNIT
020-016-071	TANK UNIT
020-016-072	TANK UNIT
020-016-073	TANK UNIT
020-016-080	TANK UNIT
020-016-081	TANK UNIT
020-016-082	TANK UNIT
020-016-083	TANK UNIT
020-016-084	TANK UNIT
020-016-085	TANK UNIT
020-016-086	TANK UNIT
020-016-087	TANK UNIT
020-016-088	TANK UNIT
020-016-101	TANK UNIT
020-016-102	TANK UNIT
020-016-103	TANK UNIT
020-016-104	TANK UNIT
020-016-105	TANK UNIT
020-016-106	TANK UNIT
020-016-107	TANK UNIT
020-016-108	TANK UNIT
020-016-109	TANK UNIT
020-016-110	TANK UNIT
020-016-111	TANK UNIT
020-016-112	TANK UNIT
020-016-113	TANK UNIT
020-016-114	TANK UNIT
020-016-115	TANK UNIT
020-016-116	TANK UNIT
020-016-117	TANK UNIT
020-016-121	TANK UNIT
020-016-122	TANK UNIT
020-016-123	TRANSMITIER, FUEL QT
020-016-124	TANK UNIT

0200335-001	LIGHT, AFT ASSY
020-048-001	TANK UNIT
020-070-001	UNIT, FUEL QTY TANK
020-070-002	UNIT, FUEL QTY TANK
020-070-003	UNIT, FUEL QTY TANK
020-070-004	UNIT, FUEL QTY TANK
020-070-005	UNIT, FUEL QTY TANK
020-070-006	UNIT, FUEL QTY TANK
020-070-007	UNIT, FUEL QTY TANK
020-070-008	UNIT, FUEL QTY TANK
020-070-009	UNIT, FUEL QTY TANK
020-070-010	UNIT, FUEL QTY TANK
020-070-011	UNIT, FUEL QTY TANK
020-070-012	UNIT, FUEL QTY TANK
0209K TU-02	UNIT, FUEL QTY TANK
0209KTU/ 01	UNIT, FUEL QTY TANK
0209KTU/ 02	UNIT, FUEL QTY TANK
0209KTU/ 03	UNIT, FUEL QTY TANK
0209KTU/ 06	UNIT, FUEL QTY TANK
0209KTU/ 09	UNIT, FUEL QTY TANK
0209KTU/04	UNIT, FUELQTYTANK
0209KTU/05	UNIT, FUEL QTY TANK
0209KTU/07	UNIT, FUEL QTY TANK
0209KTU/10	UNIT, FUEL QTY TANK
0209KTU-01	UNIT, FUEL QTY TANK
0209KTU-03	UNIT, FUEL QTY TANK
0209KTU-04	UNIT, FUEL QTY TANK
0209KTU10	UNIT, FUEL QTY TANK
0210KTU-01	UNIT, FUEL QTY TANK
021138C01	CONTACTOR
021138C02	CONTACTOR
0212KTU01	PROBE
0212KTU03	PROBE
0212KTU04	PROBE
0212KTU05	PROBE
0212KTU06	PROBE
0212KTU07	PROBE
0212KTU08	PROBE
0212KTU09	PROBE
0212KTU10	PROBE
0212KTU11	PROBE
0212KTU13	PROBE
0212KTU14	PROBE
0212KTU15	PROBE
0212KTU16	PROBE

0212KTU17	PROBE
0212KTU20	PROBE
0212KTU21	PROBE
0270KTU01	UNIT, FUEL QTY TANK
0270KTU02	UNIT, FUEL QTY TANK
029-907-004	TANK UNIT,OIL QTY
03-1600-3101	LIGHT, LOWER ASSY
03-1800-XXXX	LIGHT, ASSY
03-1801-3101	LIGHT, ASSY
03-1801-XXXX	LIGHT, ASSY
034000-1	LIGHT, ANTI-COLLISIO
034000-2	LIGHT, ANTI-COLLISIO
034000-3	LIGHT, ANTI-COLLISIO
034000-4	LIGHT, ANTI-COLLISIO
034000-5	LIGHT, ANTI-COLLISIO
03640-3	BALLAST, LAMP
03640-5	BALLAST, LAMP
03980 -10	BALLAST
03980-10-15	BALLAST
03980-30	BALLAST
04847-40	BALLAST
050-007-001	COMPENSATOR
050-014 001	COMPESATOR
050-014-002	COMPESATOR
050-014-003	COMPESATOR
050-016-001	COMPENSATOR
050-022-001	COMPENSATOR
050-022-002	COMPENSATOR
050-035-001	COMPENSATOR
050-035-002	COMPENSATOR
0510GW2	COND ITIONER, TEMP.
0513AR1	PROCESSOR, ICE PROTE
053-001-001	COMPENSATOR
053-002-001	COMPENSATOR
05814-15	BALLAST, FLOURESCENT
05814-16	BALLAST, FLOURESCENT
05934 -1	BALLAST, FLUORESCENT
05934-11	BALLAST, FLUORESCENT
05934-12	BALLAST, FLUORESCENT
05934-6	BALLAST, FLUORESCENT
05939-10	BALLAST, FLOURESCENT
05939-103	BALLAST, FLOURESCEN
05939-104	BALLAST, FLOURESCENT
05939-105	BALLAST, FLOURESCENT
05939-107	BALLAST, FLOURESCENT

05939-108	BALLAST, FLOURESCENT
05939-109	BALLAST, FLOURESCENT
05939-110	BALLAST, FLOURESCENT
05939-113	BALLAST, FLOURESCENT
05939-114	BALLAST, FLOURESCENT
05939-115	BALLAST, FLOURESCEN
05939-116	BALLAST, FLOURESCENT
05939-13	BALLAST, FLOURESCENT
05939-14	BALLAST, FLOURESCENT
05939-15	BALLAST, FLOURESCENT
05939-16	BALLAST, FLOURESCENT
05939-3	BALLAST, FLOURE SCEN
05939-4	BALLAST, FLOURESCENT
05939-5	BALLAST, FLOURESCENT
05939-7	BALLAST, FLOURESCENT
05939-8	BALLAST, FLOURESCENT
05939-9	BALLAST, FLOURESCENT
10-0067-7	LIGHT,EMERGENCY EXIT
10-0067-9	LIGHT,EMERGENCY EXIT
10031-0000-01	INDICATOR,OIL QTY
10033-0000-01	INDICATOR,HYD.OIL QT
10033-0000-02	INDICATOR,HYD.OIL QT
10034-0000-01	INDICATOR,HYD.OIL QT
10034-0000-02	INDICATOR,HYD.OIL QT
100-43653	VALVE,EMERGENCY SLID
100-43686M1	VALVE,DIFF.CONTROLLE
100-43686M2	VALVE,DIFF.CONTROLLE
100-43686M3	VALVE,DIFF.CONTROLLE
100-43686M4	VALVE,DIFF.CONTROLLE
100-43927	VALVE,SOLENOID
100-43927M1	VALVE,SOLENOID
100-43929	VALVE,SOLENOID
100-43929M1	VALVE,SOLENOID
10051-0000-01	INDICATOR,OIL QTY
10054-0000-01	INDICATOR,OIL QTY
10065-1000-0202	INDICATOR,FUEL QTY
10065-1000-0303	INDICATOR,FUEL QTY
10065-1000-0403	INDICATOR,FUEL QTY
10066-0000-01	INDICATOR,OIL QTY
1008-1	VALVE,ELECTRO
10085-01	INDICATOR,FUEL QTY R
10086-01	INDICATOR,FUEL QTY M
100CC01A	RELAY,HYD.PUMP
100CC01A02	CONTACTOR
100X43927M1	VALVE,SOLENOID

100X43929M1	VALVE,SOLENOID
10-100-1001	BALANCER
10-100-76	MOTOR,WINDSHIELD WIP
101-24239-3	UPLOCK
101-43757	VALVE,RELIEF
101-43927	VALVE,SOLENOID
101-43927M1	VALVE,SOLENOID
101X43927M1	VALVE,SOLENOID
102015-08	VALVE,REDUCING
102021-01	VALVE,DUAL PRESS.RED
10-20T	STRIP,LIGHTING
102-43927	VALVE,SOLENOID
102-43927M1	VALVE,SOLENOID
102-43988	VALVE,PRESSURE RELIE
102X43927M1	VALVE,SOLENOID
103-43988	VALVE,PRESSURE RELIE
1039-1	CONNECTOR,TAIL
1039-2	CONNECTOR,TAIL
104086-09	VALVE,CONTROL
104086-13	VALVE,CONTROL
104086-14	VALVE,CONTROL
10450-31105	ALTIMETER
10450-3190	ALTIMETER
104-86-3	VALVE,CONTROL
104AMS3	INDICATOR,ALT/AIRSPE
105AMS1	INDICATOR,ALT/AIRSPE
106-43-11	BELLCRANK,VARIABLE
106-43-5	BELLCRANK,VARIABLE
106B0W	TANK UNIT,WATER QTY
106B0W1	TANK UNIT,WATER QTY
10-76-100-68A	CONVERTER
108019-13	VALVE,SERVO SELECTOR
108031-09	VALVE,SOLENOID SELEC
108031-11	VALVE,SOLENOID SELEC
108031-12	VALVE,SOLENOID SELEC
108031-13	VALVE,SOLENOID SELEC
108032-04	VALVE,SOLENOID SELEC
108-033-0	VALVE,SOLENOID SELEC
108033-13	VALVE,SOLENOID SELEC
108033-16	VALVE,SOLENOID SELEC
108092-01	DISTRIBUTOR
108092-03	DISTRIBUTOR
108097-03	VALVE,SELECTOR
108103-02	VALVE,SELECTOR
108103-04	VALVE,SELECTOR

108103-05	VALVE,SELECTOR
108117-01	BOX,VALVE
108117-02	BOX,VALVE
108131-02	VALVE,SOLENOID SELEC
108-28-0	VALVE,SERVO
108-29-1	SELECTOR,ELECTRO-HYD
108-31-0	DISTRIBUTOR,ELECTRO
108-31-1	VALVE,SOLENOID
108-31-4	DISTRIBUTOR,ELECTRO
108-33-0	VALVE,SOLENOID SELEC
110-0430-100	ADAPTER,RADIO ALTIME
110-0460-102	ADAPTER,RADIO ALTIME
1-1021-SB	SWITCH,PRESS.WARNING
110-24654	VALVE,RELAY
1-1041-SC	TRANSMITTER,FLUID LE
11-09-20525	INDICATOR,DISCHARGE
11-09-20525-2	INDICATOR,DISCHARGE
11-09-20959	VALVE,DOUBLE CHECK
11-09-20959-1	VALVE,DOUBLE CHECK
1-1106ZB	PRESSURE TRANSMITTER
1-1106-ZB	TRANSMITTER,PRESSURE
1-1118-ZA	TRANSMITTER,OIL PRES
1-1118ZF	TRANSMITTER, HIGH PRESSURE
1-1118-ZF	TRANSMITTER,HIGH PRE
1-1118-ZG	TRANSMITTER,HIGH PRE
1-1213-06	SWITCH,PRESSURE
1-1213-11	SWITCH,PRESSURE
1-1213-16	SWITCH,PRESSURE
1-1213-AH	PRESSURE SWITCH
1-1213-AH	SWITCH,PRESSURE
1-1213-AK	SWITCH,PRESSURE
1-1213-AL	SWITCH,PRESSURE
1122-25	INDICATOR,OXYGEN PRE
1123-8	INDICATOR,TEMPERATUR
1-1306-02	INDICATOR,DUAL FUEL
1-1306-03	INDICATOR,DUAL FUEL
1-1306-04	INDICATOR,DUAL FUEL
1-1306-05	INDICATOR,DUAL FUEL
1-1306-AA	INDICATOR,DUAL FUEL
1-1306-AB	INDICATOR,DUAL FUEL
1-1307-AA	INDICATOR,TEMP & PRE
1-1307-AB	INDICATOR,TEMP & PRE
1-1317-01	TRANSMITTER,FUEL LEV
1-1317-AB	TRANSMITTER,FUEL LEV
1-1317-AC	TRANSMITTER,FUEL LEV

1-1335-AA	INDICATOR,DUAL HYD.Q
1-1336-03	INDICATOR,CABIN PRES
1-1336-AA	INDICATOR,CABIN PRES
1-1337-01	ALTIMETER,CABIN
1-1337-AA	ALTIMETER,CABIN
1-1346-AA	TRANSMITTER,DIFF.PRE
114-029	INDICATOR,POSITION
114-035	INDICATOR,POSITION
1-1445-01	TRANSMITTER,OIL.PRES
115-006	INDICATOR,PRESSURE
1150118-1	TEMP ZONE SENSOR
1153-1	MOTOR
1159-00-9C	VALVE,BLEED AIR SHUT
1159-2	MOTOR
1181-1	MOTOR,DC
12150AAA01-0	VALVE,CHECK
1221EB2	MOTOR,ELECTRIC
1221EH1	MOTOR,ELECTRIC
1223EH1	MOTOR,ELECTRIC
1223EH1B	MOTOR,ELECTRIC
1223EH1C	MOTOR,ELECTRIC
1223EH2	MOTOR,ELECTRIC
12-337-1	SWITCH,LG SELECTOR
12-337-12	SWITCH,LG SELECTOR
12-337-3	SWITCH,LG SELECTOR
12-337-32	SWITCH,LG SELECTOR
12-337-33	SWITCH,LG SELECTOR
124-133	INDICATOR,DC AMPS.
124-514-1	INDICATOR,EGT
124-514-10	INDICATOR,EGT
124-514-12	INDICATOR,EGT
124-514-2	INDICATOR,EGT
124-514-6	INDICATOR,EGT
124-832	VOLTMETER,AC
124-833	INDICATOR,DC VOLTS
124-834	INDICATOR,DC AMPS.
124-835	METER,FREQUENCY
124-836	METER,WATT
124-837	INDICATOR,AC AMPS.
124-838	INDICATOR,OIL TEMPER
1300A	UNIT,COUPLING
1300B	UNIT,COUPLING
1300C	UNIT,COUPLING
1300C-1	UNIT,COUPLING
1300D	UNIT,COUPLING

1300E	UNIT,COUPLING
1300F	UNIT,COUPLING
1300G	UNIT,COUPLING
1305-00-1A	VALVE,BLEED AIR SHUT
13-15-0	PANEL,TAILPLANE/AIRB
13-15-0	TRIM,TAILPLANE AND AIRBRAKE CONTROL PANEL
13-16-1	CONTROL PANEL
13-16-1	PANEL,CONTROL
13-16-4	PANEL,CONTROL
131-835	BATTERY,SEALED NICAD
1319-00-7	VALVE,AIR BLEED
1319-00-8	VALVE,AIR BLEED
13300-010	CONTROLLER,CAB.ALTIT
13300-114	CONTROLLER,CAB.ALTIT
13300-1146	CONTROLLER,CAB.ALTIT
13300-121	CONTROLLER,CAB.ALTIT
13300-122	CONTROLLER,CAB.ALTIT
13300-1246	CONTROLLER,CAB.ALTIT
13300-146	CONTROLLER,CAB.ALTIT
13300-201	CONTROLLER,CAB.ALTIT
13300-202	CONTROLLER,CAB.ALTIT
13300-246	CONTROLLER,CAB.ALTIT
13300-3A	CONTROLLER,CAB.ALTIT
13300-3B	CONTROLLER,CAB.ALTIT
13300-3C	CONTROLLER,CAB.ALTIT
13300-3D	CONTROLLER,CAB.ALTIT
13300-3E	CONTROLLER,CAB.ALTIT
13300-7	CONTROLLER,CAB.ALTIT
13300-7A	CONTROLLER,CAB.ALTIT
13375-1	SWITCH,CABIN ALT.CON
13617-A	INDICATOR,HYD.PRESSU
1404KID-2	INDICATOR,FIVE TANK
1405KID-2	INDICATOR,FIVE TANK
1405KID52	MULTI TANK INDICATOR
1407KID01-02	FUEL QTY. IND.
1407KID02-03	FUEL QTY. IND.
1410KID-01	INDICATOR,MULTI TANK
1410KID51	MULTI TANK INDICATOR
1411KID-01	INDICATOR,MULTI TANK
1411KID51	MULTI TANK INDICATOR
1412KID01-02	FUEL QTY. IND.
1412KID02-03	FUEL QTY. INDICATOR
1414KID-01	INDICATOR,MULTI TANK
1414KID51	MULTI-TANK
1415KID-01	INDICATOR,MULTI TANK

1415KID51	MULTI TANK INDICATOR
1420KID1-1	MULTI TANK INDICATOR
1420KID51-1	MULTI TANK INDICATOR
1421KID1-1	MULTI TANK INDICATOR
1421KID51-1	MULTI TANK INDICATOR
142D8-11	COCK,DRAIN
142D8-12	COCK,DRAIN
142D8-13	COCK,DRAIN
142G12-31	COCK,DRAIN
142G12-32	COCK,DRAIN
142G12-33	COCK,DRAIN
142NZ01Y01	CIRCUIT,TIME DELAY
1432-22B-A1	INDICATOR,AIRSPEED
1432-22B-A-A1	INDICATOR,AIRSPEED
14330-375	BLOWER/VACUUM
14331-17	VALVE,AIR EXHAUST
14331-18	VALVE,AIR EXHAUST
14331-1B	VALVE,AIR EXHAUST CO
14331-1C	VALVE,AIR EXHAUST
14331-1C	VALVE,AIR EXHAUST CO
14331-2	VALVE,AIR EXHAUST CO
14331-2A	VALVE,AIR EXHAUST CO
14331-2B	VALVE,AIR EXHAUST CO
14331-2C	VALVE,AIR EXHAUST
14331-2C	VALVE,AIR EXHAUST CO
14334-1	FILTER
1-4409-1	BOX,POTENTIOMETER
1-4414-1	TRANSMITTER,POSITION
1-4414-2	TRANSMITTER,POSITION
14632-1116	VALVE,SHUT OFF
14632-1117	VALVE,SHUT OFF
14632-112	VALVE,SHUT OFF
14632-112A	VALVE,SHUT OFF
14640-113	VALVE,SHUT OFF
14640-113A	VALVE,SHUT OFF
14640-113A0101	VALVE,SHUT OFF
14640-117	VALVE,SHUT OFF
14640-118	VALVE,SHUT OFF
147B10	INDICATOR,TEMPERATUR
147B13	INDICATOR,TEMPERATUR
147B13A	INDICATOR,TEMPERATUR
147B15A	INDICATOR,TEMPERATUR
147B30	INDICATOR,TEMPERATUR
147B30A	INDICATOR,TEMPERATUR
147B30D	INDICATOR,TEMPERATUR

147B31	INDICATOR,TEMPERATUR
147B31A	INDICATOR,TEMPERATUR
147B31A2	INDICATOR,TEMPERATUR
147B31A3	INDICATOR,TEMPERATUR
147B31B	INDICATOR,TEMPERATUR
147B31C	INDICATOR,TEMPERATUR
147B31F	INDICATOR,TEMPERATUR
147B32	INDICATOR,TEMPERATUR
147B32A	INDICATOR,TEMPERATUR
147B32C	INDICATOR,TEMPERATUR
147B35A	INDICATOR,TEMPERATUR
147B7	INDICATOR,TEMPERATUR
147B7A	INDICATOR,TEMPERATUR
147B8	INDICATOR,TEMPERATUR
147B9	INDICATOR,TEMPERATUR
147B9A	INDICATOR,TEMPERATUR
147D2	INDICATOR,TEMPERATUR
1497672-002	TRANSMITTER,PRESSURE
1497674-001	INDICATOR,HYD.PRESSU
1497674-004	INDICATOR,HYD.PRESSU
1497674-005	INDICATOR,HYD.BRAKE
1497674-008	INDICATOR,HYD.PRESSU
1497674-009	INDICATOR,HYD.QUANTI
15-0007-1	LIGHT,COCKPIT UTILIT
15-0007-101	LIGHT,COCKPIT UTILIT
15-0007-103	LIGHT,COCKPIT UTILIT
15-0007-105	LIGHT,COCKPIT UTILIT
15-0007-107	LIGHT,COCKPIT UTILIT
15-0007-109	LIGHT,COCKPIT UTILIT
15-0007-11	LIGHT,COCKPIT UTILIT
15-0007-111	LIGHT,COCKPIT UTILIT
15-0007-113	LIGHT,COCKPIT UTILIT
15-0007-115	LIGHT,COCKPIT UTILIT
15-0007-117	LIGHT,COCKPIT UTILIT
15-0007-119	LIGHT,COCKPIT UTILIT
15-0007-121	LIGHT,COCKPIT UTILIT
15-0007-123	LIGHT,COCKPIT UTILIT
15-0007-125	LIGHT,COCKPIT UTILIT
15-0007-127	LIGHT,COCKPIT UTILIT
15-0007-13	LIGHT,COCKPIT UTILIT
15-0007-15	LIGHT,COCKPIT UTILIT
15-0007-17	LIGHT,COCKPIT UTILIT
15-0007-19	LIGHT,COCKPIT UTILIT
15-0007-21	LIGHT,COCKPIT UTILTI
15-0007-23	LIGHT,COCKPIT UTILIT

15-0007-25	LIGHT,COCKPIT UTILIT
15-0007-27	LIGHT,COCKPIT UTILIT
15-0007-29	LIGHT,COCKPIT UTILIT
15-0007-3	LIGHT,COCKPIT UTILIT
15-0007-31	LIGHT,COCKPIT UTILIT
15-0007-33	LIGHT,COCKPIT UTILIT
15-0007-35	LIGHT,COCKPIT UTILIT
15-0007-37	LIGHT,COCKPIT UTILIT
15-0007-39	LIGHT,COCKPIT UTILIT
15-0007-41	LIGHT,COCKPIT UTILIT
15-0007-43	LIGHT,COCKPIT UTILIT
15-0007-45	LIGHT,COCKPIT UTILTI
15-0007-47	LIGHT,COCKPIT UTILIT
15-0007-49	LIGHT,COCKPIT UTILIT
15-0007-5	LIGHT,COCKPIT UTILIT
15-0007-51	LIGHT,COCKPIT UTILIT
15-0007-53	LIGHT,COCKPIT UTILIT
15-0007-55	LIGHT,COCKPIT UTILIT
15-0007-57	LIGHT,COCKPIT UTILIT
15-0007-59	LIGHT,COCKPIT UTILIT
15-0007-61	LIGHT,COCKPIT UTILIT
15-0007-63	LIGHT,COCKPIT UTILIT
15-0007-65	LIGHT,COCKPIT UTILIT
15-0007-67	LIGHT,COCKPIT UTILIT
15-0007-69	LIGHT,COCKPIT UTILIT
15-0007-7	LIGHT,COCKPIT UTILIT
15-0007-71	LIGHT,COCKPIT UTILIT
15-0007-73	LIGHT,COCKPIT UTILIT
15-0007-75	LIGHT,COCKPIT UTILIT
15-0007-77	LIGHT,COCKPIT UTILIT
15-0007-79	LIGHT,COCKPIT UTILIT
15-0007-81	LIGHT,COCKPIT UTILIT
15-0007-83	LIGHT,COCKPIT UTILIT
15-0007-85	LIGHT,COCKPIT UTILIT
15-0007-87	LIGHT,COCKPIT UTILIT
15-0007-89	LIGHT,COCKPIT UTILIT
15-0007-9	LIGHT,COCKPIT UTILIT
15-0007-91	LIGHT,COCKPIT UTILIT
15-0007-93	LIGHT,COCKPIT UTILIT
15-0007-95	LIGHT,COCKPIT UTILIT
15-0007-97	LIGHT,COCKPIT UTILIT
15-0007-99	LIGHT,COCKPIT UTILIT
150T346	SWITCH,TEMPERATURE
1518-14	INVERTER
1518-14-A	INVERTER

1518-14-E	INVERTER
1518-8-B	INVERTER
1518-8-C	INVERTER
1518-8-E	INVERTER
1521BU-4-02	ALTIMETER
152BL2	INDICATOR,EGT
152BL2C	INDICATOR,EGT
152BL4	INDICATOR,EGT
152BL5A	INDICATOR,EGT
152BL702	INDICATOR,TEMPERATUR
152BL702A	INDICATOR,TEMPERATUR
152BL702C	INDICATOR,TEMPERATUR
152BL702D	INDICATOR,TEMPERATUR
152BL702E	INDICATOR,TEMPERATUR
152BL703	INDICATOR,TEMPERATUR
152BL704	INDICATOR,TEMPERATUR
152BL704A	INDICATOR,TEMPERATUR
152BL704B	INDICATOR,TEMPERATUR
152BL705A	INDICATOR,TEMPERATUR
152BL705E	INDICATOR,TEMPERATUR
152BL705F	INDICATOR,TEMPERATUR
152BL705G	INDICATOR,TEMPERATUR
152BL705H	INDICATOR,TEMPERATUR
152BL705J	INDICATOR,TEMPERATUR
152BL705L	INDICATOR,TEMPERATUR
152BL705N	INDICATOR,TEMPERATUR
152BL705P	INDICATOR,TEMPERATUR
152BL705R	INDICATOR,TEMPERATUR
152BL705S	INDICATOR,TEMPERATUR
152BL706	INDICATOR,TEMPERATUR
152BL708	INDICATOR,TEMPERATUR
152BL708A	INDICATOR,TEMPERATUR
152BL708B	INDICATOR,TEMPERATUR
152BL708H	INDICATOR,TEMPERATUR
152BL709	INDICATOR,TEMPERATUR
152BL709A	INDICATOR,TEMPERATUR
152BL714A	INDICATOR,TEMPERATUR
152BL801	INDICATOR,TEMPERATUR
152BL801A	INDICATOR,TEMPERATUR
152BL801B	INDICATOR,TEMPERATUR
152BL801C	INDICATOR,TEMPERATUR
152BL801D	INDICATOR,TEMPERATUR
152BL801E	INDICATOR,TEMPERATUR
152BL802A	INDICATOR,TEMPERATUR
152BL802B	INDICATOR,TEMPERATUR

152BL802C	INDICATOR,TEMPERATUR
152BL802D	INDICATOR,TEMPERATUR
152BL803	INDICATOR,TEMPERATUR
152BL803A	INDICATOR,TEMPERATUR
152BL803B	INDICATOR,TEMPERATUR
152C4A	INDICATOR,EGT
152LCV8	VOLTMETER, AC
152LCV8A	VOLTMETER, AC
1548-1-2	PANEL
1550-MH	VALVE,PRESSURE RELIE
1551-1000	VALVE,PRESSURE RELIE
1551-1020	VALVE,PRESSURE RELIE
1551MJ	VALVE
1552-1010	VALVE,PRESSURE RELIE
1558-041040	INDICATOR,OIL PRESSU
1558-041044	INDICATOR,HYD.PRESSU
1558B-041040	INDICATOR,OIL PRESSU
1558C-041040	INDICATOR,OIL PRESSU
1562-A	LEVEL,PRESSURE
1570C-041041	INDICATOR,PRESSURE
161B101	INDICATOR,TEMPERATUR
161BL302	INDICATOR,TEMPERATUR
161BL501	INDICATOR,TEMPERATUR
161ZS01Y01	UNIT,AUDIO WARNING
161ZS01Y011	UNIT,AUDIO WARNING
162B101	INDICATOR,TEMPERATUR
162B2	INDICATOR,TEMPERATUR
162B2D	INDICATOR,TEMPERATUR
162B2G	INDICATOR,TEMPERATUR
162B3	INDICATOR,TEMPERATUR
162B3A	INDICATOR,TEMPERATUR
162B4	INDICATOR,TEMPERATUR
162BCL10	INDICATOR,OIL TEMP.
162BCL10W	INDICATOR,OIL TEMP.
162BCL10WC	INDICATOR,OIL TEMP.
162BCL11	INDICATOR,CABIN TEMP
162BCL11W	INDICATOR,CABIN TEMP
162BCL12	INDICATOR,CABIN TEMP
162BCL12W	INDICATOR,CABIN TEMP
162BCL15	INDICATOR,HYD.OIL TE
162BCL15W	INDICATOR,HYD.TEMP.
162BCL16	INDICATOR,FUEL TEMP.
162BCL16B	INDICATOR,RAM AIR TE
162BCL16W	INDICATOR,FUEL TEMP.
162BCL16WC	INDICATOR,FUEL TEMP.

162BCL17	INDICATOR, RAM AIR TE
162BCL17W	INDICATOR, RAM AIR TE
162BCL33	INDICATOR, FUEL TEMP.
162BCL33W	INDICATOR, FUEL/ENG. T
162BL20	INDICATOR, TEMPERATUR
162BL402	INDICATOR, TEMPERATUR
162BL402A	INDICATOR, TEMPERATUR
162BL403	INDICATOR, TEMPERATUR
162BL403A	INDICATOR, TEMPERATUR
162BL403B	INDICATOR, TEMPERATUR
162BL403C	INDICATOR, TEMPERATUR
162BL501	INDICATOR, TOTAL AIR
162BL502	INDICATOR, RAM AIR TE
162BL503	INDICATOR, TEMPERATUR
162BL504	INDICATOR, DUCT TEMP.
162BL505	INDICATOR, TEMPERATUR
162BL602	INDICATOR, OIL TEMPER
162BL701	INDICATOR, FUEL TEMP.
162BL701A	INDICATOR, FUEL TEMP.
162BL702	INDICATOR, OIL TEMP.
162BL703	INDICATOR, OIL TEMP.
162BL704	INDICATOR, OIL TEMP.
162BL704A	INDICATOR, OIL TEMP.
162BL704C	INDICATOR, OIL TEMP.
162BL704D	INDICATOR, OIL TEMP.
162BL704H	INDICATOR, OIL TEMP.
162BL704K	INDICATOR, AUX. HYD. TE
162BL704L	INDICATOR, HYD. TEMPER
162BL704N	INDICATOR, OIL TEMPER
162BL708	INDICATOR, TEMPERATUR
162BL709	INDICATOR, TEMPERATUR
162BL709A	INDICATOR, TEMPERATUR
162BL709B	INDICATOR, TEMPERATUR
162BL709C	INDICATOR, TEMPERATUR
162BL710	INDICATOR, TEMPERATUR
162BL711	INDICATOR, TEMPERATUR
162BL801	INDICATOR, FUEL TEMP.
162BL802	INDICATOR, OIL TEMP.
162BL802A	INDICATOR, OIL TEMP.
162BL803	INDICATOR, OIL TEMP.
162BL803A	INDICATOR, OIL TEMP.
162BL804A	INDICATOR, OIL TEMP.
162BL901	INDICATOR, TOTAL AIR
162BL902	INDICATOR, TEMPERATUR
162BL903	INDICATOR, TEMPERATUR

162BL906	INDICATOR,FUEL TEMP.
162BL907	INDICATOR,TOTAL AIR
162C38	INDICATOR, FLUID TEM
162C38A	INDICATOR, FLUID TEM
162C40A	INDICATOR, FLUID TEM
162LC550	INDICATOR,HYD.OIL.TE
162LC551	INDICATOR,ENG.OIL.TE
162LC553	INDICATOR,FUEL TEMP.
162LC554	INDICATOR,FUEL TEMP.
162LC555	INDICATOR,NACELLE TE
163BL501	INDICATOR,TEMPERATUR
163BL501C	INDICATOR,TEMPERATUR
163BL506	INDICATOR,TEMPERATUR
163BL507	INDICATOR,TEMPERATUR
163BL507B	INDICATOR,TEMPERATUR
163BL507H	INDICATOR,TEMPERATUR
163BL508	INDICATOR,TEMPERATUR
163BL511A	INDICATOR,TEMPERATUR
163ZS01Y	UNIT,AUDIO WARNING
163ZS01Y01	UNIT,AUDIO WARNING
164ZS01Y	UNIT,AUDIO WARNING
164ZS01Y01	UNIT,AUDIO WARNING
164ZS01Y011	UNIT,AUDIO WARNING
164ZS01Y02	UNIT,AUDIO WARNING
164ZS01Y021	UNIT,AUDIO WARNING
164ZS01Y03	UNIT,AUDIO WARNING
1701BX-8-010	INDICATOR,AIRSPEED
1701BX8-03	INDICATOR,AIRSPEED
1701BX8-04	INDICATOR,AIRSPEED
1701CX8-010	INDICATOR,AIRSPEED
1701CX8-03	INDICATOR,AIRSPEED
1701CX8-04	INDICATOR,AIRSPEED
1701CX8-05	INDICATOR,AIRSPEED
1701DX4-04	INDICATOR,AIRSPEED
1701DX8-04	INDICATOR,AIRSPEED
170ZS01Y2	BOX,AURAL WARNING
17-30-16	TRANSFORMER
17-30-16-1	TRANSFORMER
1776-00-1	VALVE,REGULATED BLEE
1776-00-2	VALVE,REGULATED BLEE
1777213-620	INDICATOR,COMPASS
1777213-622	INDICATOR,COMPASS
1777213-623	INDICATOR,COMPASS
1777213-625	INDICATOR,COMPASS
1777213-XXX	INDICATOR,COMPASS

1777214-600	INDICATOR,COMPASS
1777214-603	INDICATOR,COMPASS
1777214-622	INDICATOR,COMPASS
1777214-625	INDICATOR,COMPASS
1777214-XXX	INDICATOR,COMPASS
1778686-655	INDICATOR,COMPASS
1778686-XXX	INDICATOR,COMPASS
177BCL3	INDICATOR,TEMPERATUR
1782993-XXX	INDICATOR,COMPASS
1783755-615	INDICATOR,RADIO MAGN
1783755-XXX	INDICATOR,COMPASS
1784389-XXX	INDICATOR,COMPASS
18-1105	INDICATOR,HYD.PRESSU
18-1258	INDICATOR,FLAP POSIT
18-1258-2	INDICATOR,FLAP POSIT
18-1258-3	INDICATOR,FLAP POSIT
18-1278	INDICATOR,OIL PRESSU
18-1299	INDICATOR,FLAP POSIT
18-1299-2	INDICATOR,FLAP POSIT
18-1299-3	INDICATOR,FLAP POSIT
18-1299-3-2	INDICATOR,FLAP POSIT
18-1299-4	INDICATOR,FLAP POSIT
18-1299-4-2	INDICATOR,FLAP POSIT
18-1299-5	INDICATOR,FLAP POSIT
18-1299-5-2	INDICATOR,FLAP POSIT
18-1299-6	INDICATOR,FLAP POSIT
18-1299-6-2	INDICATOR,FLAP POSIT
18-1299-7-2	INDICATOR,FLAP POSIT
18-1505	INDICATOR,FLAP POSIT
18-1546	INDICATOR,EPR
18-1570-13	TRANSMITTER,FLAP POS
18-1570-14	TRANSMITTER,FLAP POS
18-1570-15	TRANSMITTER,FLAP POS
18-1683	TRANSMITTER,OIL PRES
18-1704	TRANSMITTER,HYD.PRES
18-1728	INDICATOR,PRESSURE
18-1851	INDICATOR,FLAP POSIT
18195-001	VALVE,SOLENOID SELEC
185-076	AMMETER,AC
18-944	INVERTER,POWER SUPPL
1905-00-1	BUTTERFLY VALVE
1905-00-3	BUTTERFLY VALVE
1914HJ	SWITCH,LOW PRESS.WAR
1936-ZB	TRANSMITTER,POSITION
19-54-5	PANEL,FUEL FILLING

19-54-6	PANEL,FUEL FILLING
196A1Z	INDICATOR,DIAL
1981-01	TRANSMITTER,POSITION
1X2001517-09	LIGHT,LOADING AREA
1X2001517-11	LIGHT,LOADING AREA
1X2002749-00	FLOODLIGHT
1X2002749-00M13	FLOODLIGHT
2000 LBS	INDICATOR
200-002-001	INDICATOR,FUEL QTY.
200-002-002	INDICATOR,FUEL QTY.
200-007-005	INDICATOR,HYD.QTY
200-007-005-1	INDICATOR,HYD.QTY
200-007-006	INDICATOR,HYD.QTY
200-007-007	INDICATOR,HYD.QTY
200-007-008	INDICATOR,HYD.QTY
200-007-009	INDICATOR,HYD.QTY
200-007-010	INDICATOR,HYD.QTY.
200-008-001	INDICATOR,HYD.QTY.RE
200-008-002	INDICATOR,HYD.QTY.RE
200-008-003	INDICATOR,HYD.QTY.RE
200-099-001	INDICATOR,HYD.QTY
200-099-002	INDICATOR,HYD.QTY
200-099-003	INDICATOR,HYD.QTY
200-099-004	INDICATOR,HYD.QTY
200-099-005	INDICATOR,HYD.QTY
200-099-006	INDICATOR,HYD.QTY
20041-0000-01	TRANSMITTER,ENGINE O
20041-0000-03	TRANSMITTER,ENGINE O
20043-0000-01	TANK UNIT
20044-0000-01	TANK UNIT
20079-0000-0101	TRANSMITTER,FUEL QTY
20079-0000-0102	TRANSMITTER,FUEL QTY
20079-0000-0103	TRANSMITTER,FUEL QTY
20079-0000-0104	TRANSMITTER,FUEL QTY
20079-0000-0105	TRANSMITTER,FUEL QTY
20079-0000-0106	TRANSMITTER,FUEL QTY
20079-0000-0107	TRANSMITTER,FUEL QTY
20079-0000-0108	TRANSMITTER,FUEL QTY
20079-0000-0109	TRANSMITTER,FUEL QTY
20079-0000-0110	TRANSMITTER,FUEL QTY
20079-0000-0111	TRANSMITTER,FUEL QTY
20079-0000-0112	TRANSMITTER,FUEL QTY
20079-0000-0113	TRANSMITTER,FUEL QTY
20079-0000-0114	TRANSMITTER,FUEL QTY
20079-0000-0115	TRANSMITTER,FUEL QTY

20079-0000-0116	TRANSMITTER,FUEL QTY
20079-0000-0117	TRANSMITTER,FUEL QTY
20079-0000-0118	TRANSMITTER,FUEL QTY
20079-0000-0119	TRANSMITTER,FUEL QTY
20079-0000-0120	TRANSMITTER,FUEL QTY
20079-0000-0121	TRANSMITTER,FUEL QTY
20079-0000-0122	TRANSMITTER,FUEL QTY
20079-0000-0123	TRANSMITTER,FUEL QTY
20079-0000-0124	TRANSMITTER,FUEL QTY
20079-0000-0125	TRANSMITTER,FUEL QTY
20079-0000-0126	TRANSMITTER,FUEL QTY
20079-0000-0127	TRANSMITTER,FUEL QTY
20079-0000-0128	TRANSMITTER,FUEL QTY
20079-0000-0129	TRANSMITTER,FUEL QTY
20079-0000-0130	TRANSMITTER,FUEL QTY
20079-0000-0131	TRANSMITTER,FUEL QTY
20079-0000-0132	TRANSMITTER,FUEL QTY
20079-0000-0133	TRANSMITTER,FUEL QTY
20079-0000-0134	TRANSMITTER,FUEL QTY
20079-0000-0135	TRANSMITTER,FUEL QTY
20079-0000-0136	TRANSMITTER,FUEL QTY
20079-0000-0137	TRANSMITTER,FUEL QTY
20079-0000-0138	TRANSMITTER,FUEL QTY
20079-0000-0139	TRANSMITTER,FUEL QTY
20081-0000-0101	COMPENSATOR
20081-0000-0102	COMPENSATOR
20081-0000-0201	COMPENSATOR
20081-0000-0202	COMPENSATOR
200-927-002	INDICATOR,N2 TACHOME
20095-01	TANK UNIT
20096-0101	TANK UNIT
20096-0202	TANK UNIT
20096-0203	TANK UNIT
20097-0101	TANK UNIT
20119-0101	TANK UNIT
20128-0101	TANK UNIT
20128-0103	TANK UNIT
20128-0104	TANK UNIT
20128-0105	TANK UNIT
20128-0107	TANK UNIT
20128-0108	TANK UNIT
20128-0109	TANK UNIT
20128-0110	TANK UNIT
20128-0112	TANK UNIT
20128-0113	TANK UNIT

20128-0115	TANK UNIT
20128-0116	TANK UNIT
20128-0117	TANK UNIT
20128-0118	TANK UNIT
20128-0119	TANK UNIT
20128-0120	TANK UNIT
20128-0121	TANK UNIT
20128-0122	TANK UNIT
20128-0123	TANK UNIT
20128-0124	TANK UNIT
20128-0125	TANK UNIT
20128-0127	TANK UNIT
20128-0128	TANK UNIT
20128-0129	TANK UNIT
20128-0130	TANK UNIT
20128-0131	TANK UNIT
20128-0132	TANK UNIT
20130-0101	TANK UNIT
20130-0102	TANK UNIT
20130-0103	TANK UNIT
20130-0104	TANK UNIT
20130-0105	TANK UNIT
20130-0106	TANK UNIT
20130-0107	TANK UNIT
20130-0108	TANK UNIT
20130-0109	TANK UNIT
20130-0110	TANK UNIT
20130-0111	TANK UNIT
20130-0112	TANK UNIT
20130-0113	TANK UNIT
20130-0114	TANK UNIT
20130-0116	TANK UNIT
20130-0119	TANK UNIT
20130-0215	TANK UNIT
20130-0218	TANK UNIT
20138-1000-0101	TANK UNIT
20139-1000-0101	TANK UNIT
20140-1000-0101	TANK UNIT
2017-9	ACTUATOR,ROTARY
203G	AMPLIFIER,CHARGE
203TS04Y	PANEL,CONFIGURATION
203TS04Y01	PANEL,CONFIGURATION
2045-1-6	INDICATOR,EPR
2045-1-8	INDICATOR,EPR
204-905-002	INDICATOR,N1 TACHOME

204-906-002	INDICATOR,ITT
204TS04Y	PANEL,CONFIGURATION
204TS04Y01	PANEL,CONFIGURATION
205-001-004	INDICATOR,FUEL TOTAL
205-001-005	INDICATOR,FUEL TOTAL
205-002-001R	INDICATOR,FUEL TOTAL
205-002-001W	INDICATOR,FUEL TOTAL
205-002-002R	INDICATOR,FUEL TOTAL
205-002-002W	INDICATOR,FUEL TOTAL
205-002-003R	INDICATOR,FUEL TOTAL
205-002-003W	INDICATOR,FUEL TOTAL
205-002-004R	INDICATOR,FUEL TOTAL
205-002-004W	INDICATOR,FUEL TOTAL
205-075-001	INDICATOR,FUEL TOTAL
205TS04Y01	PANEL,CONFIGURATION
206-001-001R	INDICATOR,FUEL QTY
206-001-001W	INDICATOR,FUEL QTY
206-001-002R	INDICATOR,FUEL QTY
206-001-002W	INDICATOR,FUEL QTY
206-001-003R	INDICATOR,FUEL QTY
206-001-003W	INDICATOR,FUEL QTY
206-001-004R	INDICATOR,FUEL QTY
206-001-004W	INDICATOR,FUEL QTY
206-009-001	INDICATOR,FUEL QTY.
206-009-002	INDICATOR,FUEL QTY.
206-009-003	INDICATOR,FUEL QTY.
206-009-004	INDICATOR,FUEL QTY.
206-009-005	INDICATOR,FUEL QTY.
206-009-006	INDICATOR,FUEL QTY.
2060A01	PUMP,FUEL BOOSTER
2060A12	PUMP,FUEL
2060A2	PUMP,FUEL
2060B	PUMP,FUEL
2060B06	PUMP,FUEL
2060F06	PUMP,FUEL
2060F14	PUMP,FUEL
2060F16	PUMP,FUEL
2061-1	VALVE,FLOAT
2061-11-1	INDICATOR,FLAP POSIT
2061-12-1	INDICATOR,FLAP POSIT
2061-13-1	INDICATOR,FLAP POSIT
2061-14-1	INDICATOR,FLAP POSIT
2061-3	VALVE,FLOAT
2061-6	VALVE,FLOAT
2061H	PUMP

2061H02	PUMP
206TS04Y01	PANEL,CONFIGURATION
206TS04Y02	PANEL,CONFIGURATION
2091C010300	VALVE,REGULATING
2091C020300	VALVE,REGULATING
2092D	PUMP,APU FUEL SUPPLY
2093C010300	VALVE,REGULATING
2093C020300	VALVE,REGULATING
2095A010100	VALVE,REGULATING
2095A010400	VALVE,REGULATING
2095C010100	VALVE,REGULATING
2095C010200	VALVE,REGULATING
2095D010100	VALVE,REGULATING
2095D010400	VALVE,REGULATING
2096B010200	VALVE,REGULATING
2096B010500	VALVE,REGULATING
2096E010200	VALVE,REGULATING
2101-01-1	INDICATOR,FUEL QTY.R
2101-01-2	INDICATOR,FUEL QTY.R
21-04	BOX,DIMMER
210BZEQ2	FILTER
211-001-001	INDICATOR,FUEL QTY.R
211-001-002	INDICATOR,FUEL QTY.R
211-008-001	INDICATOR,FUEL QTY.R
211-008-002	INDICATOR,FUEL QTY.R
2120-01	INDICATOR,FUEL QTY
2120-02	INDICATOR,FUEL QTY
2120-03	INDICATOR,FUEL QTY
2120-04	INDICATOR,FUEL QTY
2120-05	INDICATOR,FUEL QTY
2120-06	INDICATOR,FUEL QTY
2120-07	INDICATOR,FUEL QTY
2120-08	INDICATOR,FUEL QTY
2120-09	INDICATOR,FUEL QTY
2120-10	INDICATOR,FUEL QTY
2120-11	INDICATOR,FUEL QTY
2120-12	INDICATOR,FUEL QTY
2120-13	INDICATOR,FUEL QTY
2120-14	INDICATOR,FUEL QTY
2120-15	INDICATOR,FUEL QTY
2120-51	INDICATOR,FUEL QTY
2120-52	INDICATOR,FUEL QTY
2120-53	INDICATOR,FUEL QTY
2120-54	INDICATOR,FUEL QTY
2120-55	INDICATOR,FUEL QTY

2120-56	INDICATOR,FUEL QTY
2120-57	INDICATOR,FUEL QTY
2120-58	INDICATOR,FUEL QTY
2120-59	INDICATOR,FUEL QTY
2120-60	INDICATOR,FUEL QTY
2120-61	INDICATOR,FUEL QTY
2120-62	INDICATOR,FUEL QTY
2120-63	INDICATOR,FUEL QTY
2120-64	INDICATOR,FUEL QTY
2120-65	INDICATOR,FUEL QTY
2136-113-8	VOLTMETER,DC
2136-213-8	VOLTMETER,AC
2136-313-8	AMMETER,DC
2136-423-8	INDICATOR,AC CHARGE
2136-424-8	INDICATOR,AC CHARGE
2136-713-8	METER,400 HZ FREQUEN
2136-713-8A	METER,400 HZ FREQUEN
213B01	FILTER
21-59-23-00-1	MOTOR,NORMAL
21-59-24-00-1	MOTOR,EMERGENCY
2160-3	VALVE,AIR
21-65-0	ACTUATOR,FLAP
21-65-0	CONTROL JACK
21-65-1	RH OUTBRD FLAP ACTUA
21-65-2	FLAP ACTUATOR
21-65-3	FLAP ACTUATOR
2166-25Z	VALVE,NON-RETURN
217-00141	INDICATOR,OIL PRESSU
217-003-001	INDICATOR,MASTER FUE
217-003-002	INDICATOR,MASTER FUE
217-003-003	IND, MASTER FUEL QTY
217-003-003	INDICATOR,MASTER FUE
217-003-005	INDICATOR,MASTER FUE
217-003-005M	INDICATOR,MASTER FUE
217-003-006	INDICATOR,MASTER FUE
217-003-007	INDICATOR,MASTER FUE
217-003-009	INDICATOR,MASTER FUE
217-003-011	INDICATOR,MASTER FUE
217-003-011M	INDICATOR,MASTER FUE
217-003-012	INDICATOR,MASTER FUE
217-003-012M	INDICATOR,MASTER FUE
217-003-013	INDICATOR,MASTER FUE
217-003-014	INDICATOR,MASTER FUE
217-003-015	INDICATOR,MASTER FUE
217-003-016	INDICATOR,MASTER FUE

217-003-017	INDICATOR,MASTER FUE
217-003-017M	INDICATOR,MASTER FUE
217-003-018	INDICATOR,MASTER FUE
217-003-027	INDICATOR,MASTER FUE
217-003-028	INDICATOR,MASTER FUE
217-003-030	INDICATOR,MASTER FUE
217-003-103	INDICATOR,MASTER FUE
217-003-103M	INDICATOR,MASTER FUE
217-003-105	INDICATOR,MASTER FUE
217-003-105M	INDICATOR,MASTER FUE
217-003-106	INDICATOR,MASTER FUE
217-003-106M	INDICATOR,MASTER FUE
217-003-107M	INDICATOR,MASTER FUE
217-003-109	INDICATOR,MASTER FUE
217-003-109M	INDICATOR,MASTER FUE
217-003-111	INDICATOR,MASTER FUE
217-003-111M	INDICATOR,MASTER FUE
217-003-112	INDICATOR,MASTER FUE
217-003-112M	INDICATOR,MASTER FUE
217-003-114	INDICATOR,MASTER FUE
217-003-114M	INDICATOR,MASTER FUE
217-003-116	INDICATOR,MASTER FUE
217-003-116M	INDICATOR,MASTER FUE
217-003-117	INDICATOR,MASTER FUE
217-003-117M	INDICATOR,MASTER FUE
217-003-118	INDICATOR,MASTER FUE
217-003-118M	INDICATOR,MASTER FUE
217-003-126	INDICATOR,MASTER FUE
217-003-126M	INDICATOR,MASTER FUE
217-003-127M	INDICATOR,MASTER FUE
217-003-128M	INDICATOR,MASTER FUE
217-003-130	INDICATOR,MASTER FUE
217-003-130M	INDICATOR,MASTER FUE
217-003-132	INDICATOR,MASTER FUE
217-003-132M	INDICATOR,MASTER FUE
217-003-135M	INDICATOR,MASTER FUE
2177-25Z	VALVE,NON-RETURN
218-012-001	INDICATOR,HYD.QTY.
218-012-002	INDICATOR,HYD.QTY.
218-013-001	INDICATOR,HYD.QTY.
218-013-002	INDICATOR,HYD.QTY.
218-013-003	INDICATOR,HYD.QTY.
218-901-002	INDICATOR,N2 PERCENT
218-907-001B	INDICATOR,N2 RPM
218-908-001B	INDICATOR,N3 RPM

219-003-001	INDICATOR,REPEAT FUE
219-003-002	INDICATOR,REPEAT FUE
219-003-003	INDICATOR,REPEAT FUE
219-007-001	INDICATOR,FUEL LOAD
219-015-001	INDICATOR,REPEAT FUE
2198-25AZ	NON RETURN VALVE.
2198-25AZ	VALVE,NON-RETURN
21-MUL-1062	TEMPERATURE CONTROL
21SN04-104A	PRESSURE SWITCH
21SN04-104B	PRESSURE SWITCH
21SN04-104D	PRESSURE SWITCH
21SN04-104E	PRESSURE SWITCH
21SN04-104F	PRESSURE SWITCH
21SN04-158A	PRESSURE SWITCH
21SN04-158B	PRESSURE SWITCH
21SN04-158C	PRESSURE SWITCH
21SN04-158D	PRESSURE SWITCH
21SN04-159	PRESSURE SWITCH
21SN04-159A	PRESSURE SWITCH
21SN04-159B	PRESSURE SWITCH
21SN04-159C	PRESSURE SWITCH
21SN04-159D	PRESSURE SWITCH
21SN04-23F	PRESSURE SWITCH
21SN04-23G	PRESSURE SWITCH
21SN04-23H	PRESSURE SWITCH
21SN04-23J	PRESSURE SWITCH
21SN04-23K	PRESSURE SWITCH
21SN04-24F	PRESSURE SWITCH
21SN04-24G	PRESSURE SWITCH
21SN04-24H	PRESSURE SWITCH
21SN04-24J	PRESSURE SWITCH
21SN04-24K	PRESSURE SWITCH
21SN04-25F	PRESSURE SWITCH
21SN04-25G	PRESSURE SWITCH
21SN04-25H	PRESSURE SWITCH
21SN04-25J	PRESSURE SWITCH
21SN04-25K	PRESSURE SWITCH
21SN04-26E	PRESSURE SWITCH
21SN04-26F	PRESSURE SWITCH
21SN04-26G	PRESSURE SWITCH
21SN04-26H	PRESSURE SWITCH
21SN04-26J	PRESSURE SWITCH
21SN04-306	PRESSURE SWITCH
21SN04-306A	PRESSURE SWITCH
21SN04-306B	PRESSURE SWITCH

2206CX-4-04	ALTIMETER,PRESSURE
2206X-4-04	ALTIMETER,PRESSURE
22201D030300	SELECTOR,PRESS.REG.A
22201D031500	SELECTOR,PRESS.REG.A
22201D060700	CONTROLLER,PRESS.REG
22201D071700	SELECTOR,PRESS.REG.A
22201D072300	SELECTOR,PRESS.REG.A
22201D100700	CONTROLLER,PRESS.REG
22201D110700	CONTROLLER,PRESS.REG
22201D131700	SELECTOR,PRESS.REG.A
22201D132300	SELECTOR,PRESS.REG.A
22201E020200	SELECTOR,PRESS.REG.A
22201E021500	SELECTOR,PRESS.REG.A
22201E092500	SELECTOR,PRESS.REG.A
22201E092600	SELECTOR,PRESS.REG.A
22201E102500	SELECTOR,PRESS.REG.A
22201E102600	SELECTOR,PRESS.REG.A
22201N021000	SELECTOR,PRESS.REG.A
22201N031000	SELECTOR,PRESS.REG.A
22201N061000	SELECTOR,PRESS.REG.A
22250J020800	CONTROLLER,DIGITAL
22250J030800	CONTROLLER,DIGITAL
224-902-002	INDICATOR,N1 PERCENT
224-910-001B	INDICATOR,N1 RPM
224-911-002B	INDICATOR,ITT
224TS05Y	LAND GEAR CONTROL HA
224TS05Y	SWITCH,LANDING GEAR CONTROL
22620AAE01	VALVE,CHECK
22625AAE01	VALVE,CHECK
22625AAE01	VALVE,CHECK
22625AAJ01	VALVE,CHECK
22632AAB01-0	VALVE,CHECK
22650BAB01	VALVE,NON-RETURN
22650BAB02	VALVE,NON-RETURN
226650-2	PUMP,FUEL
226650-3	PUMP,FUEL
226650-31	PUMP,FUEL
226650-32	PUMP,FUEL
226656-1	MOTOR
226656-2	MOTOR
228-43773	VALVE,HYD.PRESSURIZA
228-43773M1	VALVE,HYD.PRESSURIZA
23056E-GD	VALVE,CROSSFEED
2307-03-1	INDICATOR, FUEL QTY
232N3211-36	BATTERY STANDBY POWE

233N3202-10	PANEL
233N3202-15	ANNUNCIATOR PANEL ASSEMBLY.
233N3202-15	PANEL
233N3202-17	PANEL
233N3202-18	PANEL
233N3202-21	PANEL
233N3202-25	PANEL
233N3202-30	PANEL
233N3202-32	PANEL
233N3202-40	PANEL
233N3202-80	PANEL
233N3202-82	PANEL
233N3209-1012	ELECTRICAL SYSTEM PA
233N3209-1014	ELECTRICAL SYSTEM PA
233N3209-1016	ELECTRICAL SYSTEM PA
233N3209-1018	ELECTRICAL SYSTEM PA
233N3209-1020	ELECTRICAL SYSTEM PA
233N3209-1022	ELECTRICAL SYSTEM PA
233N3209-1034	ELECTRICAL SYSTEM PA
233N3209-12	ELECTRICAL SYSTEM PA
233N3209-1300	ELECTRICAL SYSTEM PA
233N3209-1315	ELECTRICAL SYSTEM PA
233N3209-14	ELECTRICAL SYSTEM PA
233N3209-16	ELECTRICAL SYSTEM PA
233N3209-18	ELECTRICAL SYSTEM PA
233N3209-19	ELECTRICAL SYSTEM PA
233N3209-22	ELECTRICAL SYSTEM PA
233N3209-29	ELECTRICAL SYSTEM PA
233N3209-300	ELECTRICAL SYSTEM PA
233N3209-314	ELECTRICAL SYSTEM PA
233N3209-34	ELECTRICAL SYSTEM PA
233N3211-1008	BATTERY/STANDBY POWE
233N3211-1011	BATTERY/STANDBY POWE
233N3211-1015	BATTERY/STANDBY POWE
233N3211-1019	BATTERY/STANBY POWER
233N3211-1020	BATTERY/STANBY POWER
233N3211-1024	BATTERY/STANDBY POWE
233N3211-1027	BATTERY/STANDBY POWE
233N3211-1029	BATTERY/STANDBY POW
233N3211-1035	BATTERY/STANDBY POWE
233N3211-1042	BATTERY/STANDBY POWE
233N3211-1046	BATTERY/STANDBY POWE
233N3211-11	BATTERY/STANDBY POWE
233N3211-1300	BATTERY/STANDBY POWE
233N3211-1309	BATTERY/STANDBY POWE

233N3211-1311	BATTERY/STANDBY POWE
233N3211-1312	BATTERY/STANDBY POWE
233N3211-1319	BATTERY/STANBY POWER
233N3211-15	BATTERY/STANDBY POWE
233N3211-19	BATTERY/STANDBY POWE
233N3211-20	BATTERY/STANDBY POWE
233N3211-24	BATTERY/STANDBY POWE
233N3211-27	BATTERY/STANDBY POWE
233N3211-29	BATTERY/STANDBY POWE
233N3211-300	BATTERY/STANDBY POWE
233N3211-309	BATTERY/STANDBY POWE
233N3211-311	BATTERY/STANDBY POWE
233N3211-313	BATTERY/STANDBY POWE
233N3211-315	BATTERY/STANDBY POWE
233N3211-317	BATTERY/STANDBY POWE
233N3211-319	BATTERY/STANDBY POWE
233N3211-321	BATTERYSTANDBY POWER
233N3211-35	BATTERY/STANDBY POWE
233N3211-42	BATTERY/STANDBY POWE
233N3211-46	BATTERY STANDBY POWE
233N3211-8	BATTERY/STANDBY POWE
233N3218-6	BATTERY/STANDY POWER
233N36252-10	ELECTRICAL SYSTEM PA
233N6203-SERIES	APV & CARGO FIRE CON
233N6252-16	ELECTRICAL SYSTEM PA
233T3100-134	EMERGENCY LIGHTS PAN
233T3100-137	BATTERY STANDBY POWE
233T3100-144	APV CONTROL PANEL AS
233T3100-149	APV CONTROL PANEL AS
233T3100-153	APV CONTROL PANEL AS
233T3100-156	BATTERY STANDBY POWE
233T3100-157	BATTERY STANDBY POWE
233T3100-216	ELECTRICAL SYSTEM PA
233T3100-217	BATTERY/STANDBY POWE
233T3100-219	BATTERY/STANDBY POWE
233T3100-225	EMERGENCY LIGHTS PAN
233T3100-232	EMERGENCY LIGHTS PAN
233T3100-233	BATTERY STANDBY POWE
233T3100-234	ELECTRICAL SYSTEM PA
233T3100-235	ELECTRICAL SYSTEM PA
233T3100-236	EMERGENCY SYSTEM PAN
233T3100-261	TEMP CONTROL PANEL A
233T3100-270	ELECTRICAL SYSTEM PA
233T3100-273	BATTERY/STANDBY POWE
233T3100-275	ELECTRICAL SYSTEM PA

233T3100-278	TEMPERATURE CONTROL
233T3100-287	BATTERY STANDBY POWE
233T3100-289	EMERGENCY LIGHTS PAN
233T3100-294	TEMPERATURE CONTROL
233T3100-295	ELECTRICAL SYSTEM PA
233T3100-296	BATTERY/STANDBY POWE
233T3100-301	EMERGENCY LIGHTS PAN
233T3100-311	TEMPERATURE CONTROL
233T3100-313	TEMPERATURE CONTROL
233T3100-314	TEMPERATURE CONTROL
233T3100-315	TEMPERATURE CONTROL
233T3100-329	EMERGENCY LIGHTS PA
233T3100-339	TEMPERATURE CONTROL
233T3100-340	TEMPERATURE CONTROL
233T3100-344	TEMPERATURE CONTROL
233T3100-346	TEMPERATURE CONTROL
233T3100-363	TEMP CONTROL PANEL A
233T3100-375	TEMP CONTROL PANEL
233T3100-378	TEMP CONTROL PANEL
233T3100-405	TEMPERATURE CONTROL
233T3100-409	TEMPERATURE CONTROL
233T3100-415	EMERGENCY LIGHT PANE
233T3100-425	TEMPERATURE CONTROL
233T3100-461	APV CONTROL PANEL AS
233T3100-53	APV CONTROL PANEL
233T3100-70	BATTERY/STANDBY POWE
233T3210-24	EMERGENCY LIGHTS PAN
233T3210-25	EMERGENCY LIGHTS PAN
233T3210-27	EMERGENCY LIGHTS PAN
233T3210-300	EMERGENCY LIGHTS PAN
233T3210-307	EMERGENCY LIGHTS PAN
233T3210-31	EMERGENCY LIGHTS PAN
233T3210-33	EMERGENCY LIGHTS PAN
233T3210-35	EMERGENCY LIGHTS PAN
233T3210-37	EMERGENCY LIGHTS PAN
233T3210-38	EMERGENCY LIGHTS PAN
233T3232-1	APV CONTROL PANEL AS
233T3232-11	APV CONTROL PANEL AS
233T3232-13	APV CONTROL PANEL AS
233T3232-16	APV CONTROL PANEL
233T3232-23	APV CONTROL PANEL AS
233T3232-300	APV CONTROL PANEL
233T3232-305	APV CONTROL PANEL
233T3232-5	APV CONTROL PANEL AS
233T3232-6	APV CONTROL PANEL AS

233T3236-1046	TEMPERATURE CONTROL
233T3236-1062	TEMPERATURE CONTROL
233T3236-300	TEMPERATURE CONTROL
233T3236-321	TEMPERATURE CONTROL
233T3236-40	TEMPERATURE CONTROL
233T3236-42	TEMPERATURE CONTROL
233T3236-44	TEMPERATURE CONTROL
233T3236-47	TEMPERATURE CONTROL
233T3236-53	TEMPERATURE CONTROL
233T3236-59	TEMPERATURE CONTROL
233T3236-60	TEMPERATURE CONTROL
233T3236-66	TEMPERATURE CONTROL
233T3236-69	TEMPERATURE CONTROL
233T3236-73	TEMPERATURE CONTROL
233T3236-77	TEMPERATURE CONTROL
233T3236-79	TEMPERATURE CONTROL
233T3236-84	TEMPERATURE CONTROL
233T3236-85	TEMPERATURE CONTROL
233T3236-87	TEMPERATURE CONTROL
233T3236-93	TEMPERATURE CONTROL
233T3236-94	TEMPERATURE CONTROL
233T3236-96	TEMPERATURE CONTROL
233T3236-97	TEMPERATURE CONTROL
2346-011-8	INDICATOR,PRESSURE
234A0101	FILTER,AIR
235TS05Y02	PANEL #1 ENG FIRE SH
235TS05Y03	PANEL #1 ENG.FIRE
237TS05Y02	PANEL #2 EENG FIRE
237TS05Y03	PANEL #2 ENG FIRE SH
2391-22-0	VOLTMETER
2392-16-0	VOLTMETER
2393-011-0	AMMETER
2393-012-0	AMMETER
2393-014-0	AMMETER,REVERSE DC
2393-016-0	AMMETER,REVERSE DC
2393-18-0	AMMETER
2396-112-0	VOLTMETER
2396-118-0	VOLTMETER
2396-213-0	VOLTMETER
2396-313-0	AMMETER
2396-323-0	AMMETER
2396-324-0	AMMETER
2396-326-00-00	AMMETER
2396-503-00-11	INDICATOR,TACHOMETER
2396-504-00-11	INDICATOR,TEMPERATUR

2396-505-00-11	INDICATOR,TEMPERATUR
2396-506-00-10	INDICATOR,TURBINE SP
2396-507-00-10	INDICATOR,NOZZLE TEM
24-01	BOX,DC VARIABLE CONT
24-011	BOX,DIMMER
24-012	BOX,DIMMER
24-014	BOX,DIMMER
2405M	RELAY,POWER
2405MY1	RELAY,POWER
2405Y1	RELAY,POWER
2407G012122	VALVE,PRESS.REDUCING
2407G012125	VALVE,PRESS.REDUCING
2407J010410	VALVE,PRESS.REDUCING
2407ZEQ10	VALVE,PRESS.REDUCING
2407ZR14EQ10	VALVE,PRESS.REDUCING
2407ZR4EQ10	VALVE,PRESS.REDUCING
2407ZR4EQ8	VALVE,PRESS.REDUCING
240ZS01Y05	UNIT,AUDIO WARNING
2410A	RELAY,POWER
2410AM	RELAY,POWER
2410AMN	RELAY,POWER
2410AMY1	RELAY,POWER
2410AY1	RELAY,POWER
2414DD	CLAPPER BOX
2414-DD	BOX,CLAPPER
2415-10	INDICATOR,DIAL
2415-1010	VALVE,BOX
24-160	BOARD,PRINTED CIRCUI
2416-1010	VALVE BOX
24-172	BOARD,PRINTED CIRCUI
24-182	BOARD,PRINTED CIRCUI
24-193	BOARD,PRINTED CIRCUI
24-194	BOARD,PRINTED CIRCUI
24-201	BOARD,PRINTED CIRCUI
24-230	CARD
24-240	BOARD,PRINTED CIRCUI
24-250	CONTROL,PITOT HEATIN
24-251	CONTROL,PITOT HEATIN
24-255	UNIT,HEATING CONTROL
24-256	UNIT,HEATING CONTROL
24-261	BOARD,PRINTED CIRCUI
2426-120-8	AMMETER,DC
2426-523-8	INDICATOR,ACM AIR FL
2426-525-8	INDICATOR,ACM AIR FL
24-270	BOARD,PRINTED CIRCUI

24-400-4	INDICATOR
2-4409-1	BOX,POTENTIOMETER
2-4414-1	TRANSMITTER,POSITION
2-4414-2	TRANSMITTER,POSITION
2-4415-1	TRANSMITTER,POSITION
2-4415-2	TRANSMITTER,POSITION
24-52-2	POWER SUPPLY,ADJUSTA
24-52-4	POWER SUPPLY,ADJUSTA
24-52-6	POWER SUPPLY,ADJUSTA
24-551	BOARD,PRINTED CIRCUI
24-552	BOARD,PRINTED CIRCUI
2504-1	VALVE,FUEL TRANSFER
2504-3	TRANSFER VALVE
2504-926V	VALVE,NON-RETURN
2504-926VS	VALVE,NON-RETURN
2504CD01	VALVE,NON-RETURN
2504M	RELAY,POWER
2504MY1	RELAY,POWER
2504Y1	RELAY,POWER
2506AC01	VALVE,CHECK
25100-A37B-1-B1	INDICATOR,HYD.PRESSU
25122-A27C-1-A1	INDICATOR,FUEL PRESS
25122-A2C-1-A1	INDICATOR,OIL PRESSU
25122-A30E-1-A1	INDICATOR,OIL PRESSU
25122-A37B-1-A1	INDICATOR,HYD.PRESSU
25138-C44B-2-A3	INDICATOR,PRESSURE R
25138-C46C-2-A3	INDICATOR,PRESSURE R
25138-C83A-2-A3	INDICATOR,PRESSURE R
25201-A15B-4-1-A1	INDICATOR,PRESSURE
25-2041	INDICATOR
2525-10M	RELAY,POWER
2525-10MY1	RELAY,POWER
2525A	RELAY,POWER
2525AM	RELAY,POWER
2525AMN	RELAY,POWER
2525AMY1	RELAY,POWER
2525AY1	RELAY,POWER
2535M	RELAY,POWER
2535MN	RELAY,POWER
2535MY1	RELAY,POWER
2535Y1	RELAY,POWER
2540M	RELAY,POWER
2540MN	RELAY,POWER
2540MY1	RELAY,POWER
2540Y1	RELAY,POWER

2591201-902	COUPLER,COMPASS
2591201-912	COUPLER,COMPASS
2591201-922	COUPLER,COMPASS
2591202-902	CONTROLLER,COMPASS
2591202-905	CONTROLLER,COMPASS
2591202-912	CONTROLLER,COMPASS
2593191-702	INDICATOR,RADIO MAGN
2593191-704	INDICATOR,RADIO MAGN
2593191-801	INDICATOR,RADIO MAGN
2593191-806	INDICATOR,RADIO MAGN
2593191-807	INDICATOR,RADIO MAGN
2593191-808	INDICATOR,RADIO MAGN
2593191-810	INDICATOR,RADIO MAGN
2594401-901	GYROSCOPE,DIRECTIONA
2594466-901	INDICATOR,MACH AIRSP
2594466-902	INDICATOR,MACH AIRSP
2594466-905	INDICATOR,MACH AIRSP
2594466-906	INDICATOR,MACH AIRSP
2594468-901	INDICATOR,VERTICAL S
2594468-902	INDICATOR,VERTICAL S
2594617-901	INDICATOR,STATIC AIR
2594617-909	INDICATOR,STATIC AIR
2594618-901	INDICATOR,TRUE AIRSP
2594621-906	INDICATOR,AIRSPEED-M
2594621-907	INDICATOR,AIRSPEED-M
2594621-908	INDICATOR,AIRSPEED-M
2594621-910	INDICATOR,AIRSPEED-M
2594621-913	INDICATOR,AIRSPEED-M
2594621-914	INDICATOR,AIRSPEED-M
2594621-915	INDICATOR,AIRSPEED-M
2594624-902	INDICATOR,SITUATION
2594624-905	INDICATOR,SITUATION
2594624-906	INDICATOR,SITUATION
2594624-909	INDICATOR,SITUATION
2594624-910	INDICATOR,SITUATION
26105C	INDICATOR
2623-225Z	VALVE,NON-RETURN
2630-225Z	VALVE,NON-RETURN
2638-225Z	VALVE,NON-RETURN
2648-225Z	VALVE,NON-RETURN
267-938-001	INDICATOR,FUEL QTY
267-968-001	INDICATOR,OIL QTY
267-968-004	INDICATOR,OIL QTY
268-075-001	INDICATOR,OIL LEVEL
268-076-001	INDICATOR,EGT

2701-9	BLOCK,MOTOR
2701-901	BLOCK,MOTOR
2701-902	BLOCK,MOTOR
2701-903	BLOCK,MOTOR
2701-92	BLOCK,MOTOR
2701-921	BLOCK,MOTOR
2701-922	BLOCK,MOTOR
2701-923	BLOCK,MOTOR
2701-94	BLOCK,MOTOR
2701-941	BLOCK,MOTOR
2701-942	BLOCK,MOTOR
2701-943	BLOCK,MOTOR
2702-90	BLOCK,MOTOR
2702-901	BLOCK,MOTOR
2702-902	BLOCK,MOTOR
2702-903	BLOCK,MOTOR
27141174-01	VALVE,SHUT-OFF
2717-90	ACTUATOR
2717-901	ACTUATOR
2717-902	ACTUATOR
2717-903	ACTUATOR
2752-9	BLOCK,MOTOR
2752-901	BLOCK,MOTOR
2752-902	BLOCK,MOTOR
2752-903	BLOCK,MOTOR
27932-C26A-17-A3	INDICATOR,EPR
280A	RECEPTACLE,POWER DC
280B	RECEPTACLE,POWER DC
280C	RECEPTACLE,POWER DC
2827A01	VALVE,VACUUM RELIEF
2832B01	VALVE,RELIEF/UNDERPR
2832C01	VALVE,RELIEF/UNDERPR
2-835	MOTOR
2854-90	MOTOR UNIT
2854-90-1	MOTOR UNIT
285675-1	VALVE,PRESS.REGULATI
285697-1	FILTER
285705-1	UPLOCK
285705-2	UPLOCK
285707-0-1	VALVE,SELECTOR SOLEN
285707-0-2	VALVE,SELECTOR SOLEN
285709-0-1	VALVE,DUAL SELECTOR
285723-1	CONTACTOR,FOUR BREAK
285876B	VALVE,RESTRICTOR
2863-901	ACTUATOR,MOTORIZED

286598B	VALVE,RESTRICTOR
286600B	VALVE,RESTRICTOR
2872-2	ACTUATOR,MOTORIZED
2872-90	ACTUATOR,MOTORIZED
2872-90-1	ACTUATOR,MOTORIZED
287837-1	BOX,HANDWHEEL CONTRO
287841-0-1	VALVE,HYD.SERVO
287843-1	BOX,FEEDBACK POTENTI
288388B	RESTRICTOR
288389B	RESTRICTOR
288451B	RESTRICTOR
288453B	VALVE,RESTRICTOR
288455B	VALVE,RESTRICTOR
290AS3	INDICATOR,AIRSPPEED
294562-1	SRL TESTER
2978-0	RELAY,POWER
2978M	RELAY,POWER
2978M0	RELAY,POWER
2BC21M8A	MOTOR,DIRECT CURRENT
2CM9AAH4	GENERATOR,TACHOMETER
2CM9AAH6	GENERATOR,TACHOMETER
2CM9AAV6	GENERATOR,TACHOMETER
2CM9AAZ6	GENERATOR,TACHOMETER
2CM9ABH7	GENERATOR,TACHOMETER
2CM9ABY7	GENERATOR,TACHOMETER
2CM9ACE7	GENERATOR,TACHOMETER
2CM9ACF8	GENERATOR,TACHOMETER
2CM9ADB8	GENERATOR,TACHOMETER
2CM9ADB9	GENERATOR,TACHOMETER
2CM9ADE8	GENERATOR,TACHOMETER
2LA002427-02	LIGHT,LH WING TIP
2LA002427-03	LIGHT,RH WING TIP
2LA002606-01	LIGHT,APU INSPECTION
2LA002606-08	LIGHT,APU INSPECTION
2LA002607-00	LIGHT,CARGO COMPARTM
2LA002607-02	LIGHT,CARGO COMPARTM
2LA002607-03	LIGHT,CARGO COMPARTM
2LA002607-10	LIGHT,CARGO COMPARTM
2LA002607-12	LIGHT,CARGO COMPARTM
2LA002607-15	LIGHT,CARGO COMPARTM
2LA002607-30	LIGHT,CARGO COMPARTM
2LA002607-35	LIGHT,CARGO COMPARTM
2LA003926-00	LIGHT,TAIL POSITION
2LA003926-01	LIGHT,TAIL POSITION
2LA003954-00	LIGHT,WING STROBE

2LA003954-00M00	LIGHT,WING STROBE
2LA003954-00M01	LIGHT,WING STROBE
2LA003954-05	LIGHT,WING STROBE
2LA003965-00	LIGHT
2LA003968-00	LIGHT,STROBE
2LA003968-40	LIGHT,RED STROBE
2LA004116-00	LIGHT,RECOGNITION
2LA004116-05	LIGHT,RECOGNITION
2LA004626-00	LIGHT,FLIGHT CREW RE
2LA004626-00M00	LIGHT,FLIGHT CREW RE
2LA004626-00M01	LIGHT,FLIGHT CREW RE
2LA004626-00M02	LIGHT,FLIGHT CREW RE
2LA004626-00M03	LIGHT,FLIGHT CREW RE
2LA004794-00	LIGHT,TAIL POSITION
2LA004794-01	LIGHT,TAIL POSITION
2LA005075-00	LIGHT,FLIGHT CREW RE
2LA005075-00M00	LIGHT,FLIGHT CREW RE
2LA005075-00M01	LIGHT,FLIGHT CREW RE
2LA005075-00M02	LIGHT,FLIGHT CREW RE
2LA005576-00	LIGHT
2LA006597-00	LIGHT,WARNING RED
2LA006724-00	LIGHT,WARNING CABIN
2LA006725-00	LIGHT,WARNING CARGO
2LA006725-10	LIGHT,WARNING CARGO
2LA007306-00	LIGHT,WARNING RED
2LA402515-00	LIGHT,STROBE
2LA402515-40	LIGHT,STROBE
2LA455010-00	LIGHT,STROBE
30-0002-1	LIGHT,WINGTIP
30-0005	LIGHT,TAIL
30-0005-1	LIGHT,TAIL
30-0005A	LIGHT,TAIL
300029-01001	COMPENSATOR,FUEL QTY
30042-0000-0202	UNIT,CONTROL
30042-0000-0301	UNIT,CONTROL
30042-0000-0302	UNIT,CONTROL
30042-0000-0401	UNIT,CONTROL
30-0536-13	LIGHT,AIRCRAFT WING
30-0536-13M	LIGHT,AIRCRAFT WING
30-0536-13M2	LIGHT,AIRCRAFT WING
30-0536-14	LIGHT,AIRCRAFT WING
30-0536-14M	LIGHT,AIRCRAFT WING
30-0536-14M2	LIGHT,AIRCRAFT WING
30-0627-1	LIGHT,NAV.A/C WING P
30-0627-2	LIGHT,NAV.A/C WING P

30-0627-3	LIGHT,NAV.A/C WING P
30-0627-3M	LIGHT,NAV.A/C WING P
30-0627-4	LIGHT,NAV.A/C WING P
30-0627-4M	LIGHT,NAV.A/C WING P
30-0627-5	LIGHT,NAV.A/C WING P
30-0627-6	LIGHT,NAV.A/C WING P
30-0801-1	LIGHT,NAVIGATIONAL
30-0801-3	LIGHT,NAVIGATIONAL
30-0801-5	LIGHT,NAVIGATIONAL
30-0801-6	LIGHT,NAVIGATIONAL
30-0837-1	LIGHT,ANTI-COLLISION
30-0837-11	LIGHT,ANTI-COLLISION
30-0837-13	LIGHT,ANTI-COLLISION
30-0837-15	LIGHT,ANTI-COLLISION
30-0837-17	LIGHT,ANTI-COLLISION
30-0837-19	LIGHT,ANTI-COLLISION
30-0837-21	LIGHT,ANTI-COLLISION
30-0837-23	LIGHT,ANTI-COLLISION
30-0837-25	LIGHT,ANTI-COLLISION
30-0837-27	LIGHT,ANTI-COLLISION
30-0837-29	LIGHT,ANTI-COLLISION
30-0837-3	LIGHT,ANTI-COLLISION
30-0837-31	LIGHT,ANTI-COLLISION
30-0837-33	LIGHT,ANTI-COLLISION
30-0837-35	LIGHT,ANTI-COLLISION
30-0837-37	LIGHT,ANTI-COLLISION
30-0837-39	LIGHT,ANTI-COLLISION
30-0837-41	LIGHT,ANTI-COLLISION
30-0837-43	LIGHT,ANTI-COLLISION
30-0837-45	LIGHT,ANTI-COLLISION
30-0837-5	LIGHT,ANTI-COLLISION
30-0837-7	LIGHT,ANTI-COLLISION
30-0837-9	LIGHT,ANTI-COLLISION
30-0906-1	LIGHT,RECOGNITION
30-0906-10	LIGHT,RECOGNITION
30-0906-101	LIGHT,RECOGNITION
30-0906-103	LIGHT,RECOGNITION
30-0906-104	LIGHT,RECOGNITION
30-0906-105	LIGHT,RECOGNITION
30-0906-106	LIGHT,RECOGNITION
30-0906-107	LIGHT,RECOGNITION
30-0906-109	LIGHT,RECOGNITION
30-0906-11	LIGHT,RECOGNITION
30-0906-110	LIGHT,RECOGNITION
30-0906-111	LIGHT,RECOGNITION

30-0906-113	LIGHT,RECOGNITION
30-0906-115	LIGHT,RECOGNITION
30-0906-116	LIGHT,RECOGNITION
30-0906-117	LIGHT,RECOGNITION
30-0906-118	LIGHT,RECOGNITION
30-0906-119	LIGHT,RECOGNITION
30-0906-121	LIGHT,RECOGNITION
30-0906-122	LIGHT,RECOGNITION
30-0906-123	LIGHT,RECOGNITION
30-0906-124	LIGHT,RECOGNITION
30-0906-125	LIGHT,RECOGNITION
30-0906-126	LIGHT,RECOGNITION
30-0906-128	LIGHT,RECOGNITION
30-0906-129	LIGHT,RECOGNITION
30-0906-13	LIGHT,RECOGNITION
30-0906-15	LIGHT,RECOGNITION
30-0906-16	LIGHT,RECOGNITION
30-0906-17	LIGHT,RECOGNITION
30-0906-18	LIGHT,RECOGNITION
30-0906-19	LIGHT,RECOGNITION
30-0906-21	LIGHT,RECOGNITION
30-0906-22	LIGHT,RECOGNITION
30-0906-23	LIGHT,RECOGNITION
30-0906-24	LIGHT,RECOGNITION
30-0906-25	LIGHT,RECOGNITION
30-0906-26	LIGHT,RECOGNITION
30-0906-3	LIGHT,RECOGNITION
30-0906-4	LIGHT,RECOGNITION
30-0906-5	LIGHT,RECOGNITION
30-0906-6	LIGHT,RECOGNITION
30-0906-7	LIGHT,RECOGNITION
30-0906-9	LIGHT,RECOGNITION
30-1136-1	LIGHT,NAVIGATIONAL S
30-1136-11	LIGHT,NAVIGATIONAL S
30-1136-13	LIGHT,NAVIGATIONAL S
30-1136-15	LIGHT,NAVIGATIONAL S
30-1136-3	LIGHT,NAVIGATIONAL S
30-1136-5	LIGHT,NAVIGATIONAL S
30-1136-7	LIGHT,NAVIGATIONAL S
30-1136-9	LIGHT,NAVIGATIONAL S
30-1521-3	REAR POSITION NAV LIGHT
30-1521-4	REAR POSITION NAV LIGHT
30-1521-5	REAR POSITION NAV LIGHT
30-1521-6	REAR POSITION NAV LIGHT
3020MY1	RELAY,POWER

30-326-1	AMPLIFIER,CONTROL
30-326-7	AMPLIFIER,CONTROL
30-326E-1	AMPLIFIER,CONTROL
30-326E-7	AMPLIFIER,CONTROL
308-002-001	INDICATOR,TOTALIZER
308-002-002	INDICATOR,TOTALIZER
308-003-003	INDICATOR,TOTALIZER
308-003-005	INDICATOR,TOTALIZER
308-003-007	INDICATOR,TOTALIZER
308-1	VALVE,CHECK
31060-1114	INDICATOR,CABIN ALT.
313Y	LIGHT,AIRBRAKE WARNI
3188-000	VALVE,SHUT OFF
3214300-1	VALVE,PRESSURE REGUL
3214300-2	VALVE,PRESSURE REGUL
3214300-3	VALVE,PRESSURE REGUL
3214300-6	VALVE,PRESSURE REGUL
3214-41	EMERGENCY POWER SUPP
326C32-1	VALVE,HOT AIR
326D20-2	VALVE,ELECTRIC GATE
32-96-5	LIGHT
33135-3	INDICATOR,CABIN PRES
33140-02	INDICATOR,RATE OF CL
33140-3	INDICATOR,RATE OF CL
34102-C1C-4-1C1	INDICATOR,TACHOMETER
3-468-001	SWITCH,PRESSURE
35-11	LIGHT, COCKPIT PORTA
352-061-001	UNIT,CONTROL
352-061-002	UNIT,CONTROL
35-43	LIGHT,DOME
35-53	LIGHT, DOME
35-57-1	LIGHT, COMPARTMENT
35-58-2	LIGHT,DOME
3571111-9001	INDICATOR,PRESSURE
3571111-9002	INDICATOR,PRESSURE
3571111-9003	INDICATOR,PRESSURE
3571111-9004	INDICATOR,TEMP.CONTR
3571111-9005	INDICATOR,PRESSURE
3571210-2001	INDICATOR,EPR
3571210-2002	INDICATOR,EPR
3571210-2003	INDICATOR,EPR
3571211-3001	INDICATOR,EPR
3571213-4001	INDICATOR,HYD.PRESSU
3571213-4002	INDICATOR,HYD.PRESSU
3571213-4003	INDICATOR,HYD.BRAKE

3571213-4004	INDICATOR,HYD.PRESSU
3571213-4005	INDICATOR,HYD.PRESSU
3571213-4008	INDICATOR,HYD.PRESSU
360-012-003	POWER SUPPLY
360-100-001	POWER SUPPLY
360-930-001	DEVICE,INTERMEDIATE
360-967-001	DEVICE,INTERMEDIATE
360-967-004	DEVICE,INTERMEDIATE
362-00135-000	UNIT,DISPLAY
366-002-001	SELECTOR,FUEL LOAD
366-002-002	SELECTOR,FUEL LOAD
37000-10	ALTIMETER
37000-3	ALTIMETER
372-001-001	INDICATOR,FUEL QTY.
372-001-002	INDICATOR,FUEL QTY.
380TS06Y02	PANEL,HYDRAULIC CONT
380TS06Y03	PANEL,HYDRAULIC CONT
384453-001	DEVICE,VOLUMETRIC TO
384453-002	DEVICE,VOLUMETRIC TO
389GC01Y02	CONTROL BATT. CHARGE
389GC01Y03	CONTROL BATT. CHRGE
391001-153	TANK UNIT
391001-155	TANK UNIT
391001-159	TANK UNIT
391001-161	TANK UNIT
391001-163	TANK UNIT
391001-167	TANK UNIT
391001-169	TANK UNIT
391001-171	TANK UNIT
391001-173	TANK UNIT
391001-177	TANK UNIT
391001-179	TANK UNIT
391001-181	TANK UNIT
391001-183	TANK UNIT
391001-185	TANK UNIT
391001-187	TANK UNIT
391001-189	TANK UNIT
391001-191	TANK UNIT
391001-193	TANK UNIT
391001-343	TANK UNIT
391001-344	TANK UNIT
391001-345	TANK UNIT
391001-346	TANK UNIT
391001-347	TANK UNIT
391001-348	TANK UNIT

391001-349	TANK UNIT
391001-350	TANK UNIT
391001-351	TANK UNIT
391001-352	TANK UNIT
391001-353	TANK UNIT
391001-354	TANK UNIT
391001-355	TANK UNIT
391001-356	TANK UNIT
391001-357	TANK UNIT
391001-358	TANK UNIT
391001-359	TANK UNIT
391001-360	TANK UNIT
391003-001	TANK UNIT
391004-001	TANK UNIT
391004-002	TANK UNIT
391012-01001	TRANSMITTER,LIQUID Q
391013-101	TANK UNIT
391013-103	TANK UNIT
391013-105	TANK UNIT
391013-107	TANK UNIT
391013-109	TANK UNIT
391013-111	TANK UNIT
391013-113	TANK UNIT
391013-115	TANK UNIT
391041-009	COMPENSATOR,FUEL QTY
391041-020	COMPENSATOR,FUEL QTY
391041-021	COMPENSATOR,FUEL QTY
391041-022	COMPENSATOR,FUEL QTY
391041-023	COMPENSATOR
391041-024	COMPENSATOR,FUEL QTY
391041-025	COMPENSATOR,FUEL QTY
391041-026	COMPENSATOR
391041-027	COMPENSATOR
391041-05007	COMPENSATOR,FUEL QTY
391041-06008	COMPENSATOR,FUEL QTY
391046-01428	TANK UNIT
391046-01429	TANK UNIT
391046-04128	TANK UNIT
391046-04129	TANK UNIT
391046-04130	TANK UNIT
391046-04131	TANK UNIT
391046-04132	TANK UNIT
391046-04133	TANK UNIT
391046-04134	TANK UNIT
391046-04135	TANK UNIT

391046-04136	TANK UNIT
391046-04137	TANK UNIT
391046-04138	TANK UNIT
391046-04159	TANK UNIT
391046-04160	TANK UNIT
391046-04161	TANK UNIT
391046-04162	TANK UNIT
391046-04165	TANK UNIT
391046-05128	TANK UNIT
391046-05129	TANK UNIT
391046-05130	TANK UNIT
391046-05131	TANK UNIT
391046-05132	TANK UNIT
391046-05133	TANK UNIT
391046-05134	TANK UNIT
391046-05135	TANK UNIT
391046-05136	TANK UNIT
391046-05137	TANK UNIT
391046-05138	TANK UNIT
391046-085	TANK UNIT
391046-166	TANK UNIT
391046-167	TANK UNIT
391046-168	TANK UNIT
391046-169	TANK UNIT
391046-170	TANK UNIT
391046-171	TANK UNIT
391046-172	TANK UNIT
391046-173	TANK UNIT
391046-174	TANK UNIT
391046-175	TANK UNIT
391046-176	TANK UNIT
391046-177	TANK UNIT
391046-178	TANK UNIT
391046-179	TANK UNIT
391046-180	TANK UNIT
391046-181	TANK UNIT
391046-182	TANK UNIT
391046-183	TANK UNIT
391046-184	TANK UNIT
391046-250	TANK UNIT
391046-251	TANK UNIT
391046-252	TANK UNIT
391046-253	TANK UNIT
391046-254	TANK UNIT
391046-282	TANK UNIT

391046-283	TANK UNIT
391046-284	TANK UNIT
391046-285	TANK UNIT
391046-286	TANK UNIT
391046-287	TANK UNIT
391046-298	TANK UNIT
391046-299	TANK UNIT
391046-300	TANK UNIT
391046-477	TANK UNIT
391046-478	TANK UNIT
391046-479	TANK UNIT
391046-480	TANK UNIT
391046-481	TANK UNIT
391046-482	TANK UNIT
391046-483	TANK UNIT
391046-484	TANK UNIT
391046-485	TANK UNIT
391046-486	TANK UNIT
391080-08096	TANK UNIT,OIL
391097-16001	TANK UNIT
391097-16002	TANK UNIT
391097-16003	TANK UNIT
391097-16004	TANK UNIT
391097-16005	TANK UNIT
391097-16006	TANK UNIT
391097-16007	TANK UNIT
391097-16008	TANK UNIT
391097-16009	TANK UNIT
391097-16010	TANK UNIT
391097-16011	TANK UNIT
391097-16012	TANK UNIT
391097-16013	TANK UNIT
391097-16014	TANK UNIT
391097-16015	TANK UNIT
391097-16016	TANK UNIT
391097-16017	TANK UNIT
3919-1AA-A1-1	INDICATOR,TURN & BAN
3919-1AA-A1-2	INDICATOR,TURN & BAN
3919-1AE-B1-1	INDICATOR,TURN & BAN
3919-1AE-B1-2	INDICATOR,TURN & BAN
3919-1AJ-B1-2	INDICATOR,TURN & BAN
3919-1AJ-C1-1	INDICATOR,TURN & BAN
3919-1AJ-C1-2	INDICATOR,TURN & BAN
'39208	FAN
39208A	FAN

3922-1AG-B1-2	INDICATOR,TURN & BAN
3922-1AG-D1-2	INDICATOR,TURN & BAN
3927-1AG-B1-1	INDICATOR,TURN & BAN
3927-1AG-E1-1	INDICATOR,TURN & BAN
3927-2M-C2-1	INDICATOR,TURN & BAN
39-28-21	LIGHT,ANTI-COLLISION
3929-1AG-B1-1	INDICATOR,TURN & BAN
3929-1AG-C1-1	INDICATOR,TURN & BAN
3929-1AG-D1-1	INDICATOR,TURN & BAN
3929-1AG-E1-1	INDICATOR,TURN & BAN
393020-003	INDICATOR,OIL QTY
393020-004	INDICATOR,OIL QTY
393020-012	INDICATOR,OIL QTY
393020-01789	INDICATOR,OIL QTY
393026-001	INDICATOR,FUEL QTY
393026-002	INDICATOR,FUEL QTY
393026-003	INDICATOR,FUEL QTY
393026-006	INDICATOR,FUEL QTY
393026-01837	INDICATOR,FUEL QTY
393026-01838	INDICATOR,FUEL QTY
393026-01840	INDICATOR,FUEL QTY
393026-01841	INDICATOR,FUEL QTY
393026-01880	INDICATOR,FUEL QTY
393026-03235	INDICATOR,FUEL QTY
393026-03236	INDICATOR,FUEL QTY
393026-03334	INDICATOR,FUEL QTY
393026-03335	INDICATOR,FUEL QTY
393026-034	INDICATOR,FUEL QTY
393026-035	INDICATOR,FUEL QTY
393026-03508	INDICATOR,FUEL QTY
393026-03569	INDICATOR,FUEL QTY
393026-036	INDICATOR,FUEL QTY
393026-037	INDICATOR,FUEL QTY
393026-038	INDICATOR,FUEL QTY
393026-039	INDICATOR,FUEL QTY
393026-040	INDICATOR,FUEL QTY
393026-042	INDICATOR,FUEL QTY
393026-04237	INDICATOR,FUEL QTY
393026-043	INDICATOR,FUEL QTY
393026-04337	INDICATOR,FUEL QTY
393026-044	INDICATOR,FUEL QTY
393026-04510	INDICATOR,FUEL QTY
393026-04568	INDICATOR,FUEL QTY
393026-047	INDICATOR,FUEL QTY
393026-048	INDICATOR,FUEL QTY

393026-049	INDICATOR,FUEL QTY
393026-050	INDICATOR,FUEL QTY
393026-051	INDICATOR,FUEL QTY
393026-052	INDICATOR,FUEL QTY
393026-053	INDICATOR,FUEL QTY
393026-054	INDICATOR,FUEL QTY
393026-063	INDICATOR,FUEL QTY
393026-064	INDICATOR,FUEL QTY
393026-065	INDICATOR,FUEL QTY
393026-071	INDICATOR,FUEL QTY
393026-072	INDICATOR,FUEL QTY
393026-073	INDICATOR,FUEL QTY
393026-074	INDICATOR,FUEL QTY
393026-075	INDICATOR,FUEL QTY.
393026-076	INDICATOR,FUEL QTY
393026-077	INDICATOR,FUEL QTY
393026-079	INDICATOR,FUEL QTY
393026-080	INDICATOR,FUEL QTY
393026-081	INDICATOR,FUEL QTY
393026-082	INDICATOR,FUEL QTY
393026-083	INDICATOR,FUEL QTY
393026-084	INDICATOR,FUEL QTY
393026-085	INDICATOR,FUEL QTY
393026-086	INDICATOR,FUEL QTY
393026-087	INDICATOR,FUEL QTY
393026-088	INDICATOR,FUEL QTY
393026-089	INDICATOR,FUEL QTY
393026-090	INDICATOR,FUEL QTY
393026-091	INDICATOR,FUEL QTY
393026-092	INDICATOR,FUEL QTY
393026-093	INDICATOR,FUEL QTY
393026-094	INDICATOR,FUEL QTY
393026-095	INDICATOR,FUEL QTY
393026-096	INDICATOR,FUEL QTY
393026-097	INDICATOR,FUEL QTY
393026-098	INDICATOR,FUEL QTY
393026-099	INDICATOR,FUEL QTY
393026-100	INDICATOR,FUEL QTY
393026-101	INDICATOR,FUEL QTY
393026-102	INDICATOR,FUEL QTY
393027-002	INDICATOR,FUEL QTY
393027-003	INDICATOR,FUEL QTY
393027-007	INDICATOR,FUEL QTY
393027-009	INDICATOR,FUEL QTY
393027-010	INDICATOR,FUEL QTY

393027-012	INDICATOR,FUEL QTY
393027-04378	INDICATOR,FUEL QTY.T
393027-04547	INDICATOR,FUEL QTY.T
393080-003	INDICATOR,FUEL & V.R
393080-051	INDICATOR,TOTAL FUEL
393080-103	INDICATOR,TOTAL FUEL
393080-104	INDICATOR,TOTAL FUEL
393080-105	INDICATOR,TOTAL FUEL
393080-113	INDICATOR,TOTAL FUEL
393080-114	INDICATOR,TOTAL FUEL
393080-115	INDICATOR,FUEL QTY.T
393080-116	INDICATOR,FUEL QTY.T
393080-117	INDICATOR,TOTAL FUEL
393080-118	INDICATOR,TOTAL FUEL
393080-121	INDICATOR,TOTAL FUEL
393080-122	INDICATOR,TOTAL & V-
393080-123	INDICATOR,TOTAL & V-
393081-103	INDICATOR,FUEL QTY T
393081-105	INDICATOR,FUEL QTY T
393081-107	INDICATOR,FUEL QTY T
393081-109	INDICATOR,FUEL QTY T
393081-111	INDICATOR,FUEL QTY T
393081-113	INDICATOR,FUEL QTY T
393081-115	INDICATOR,FUEL QTY T
393082-101	INDICATOR,FUEL QTY R
393082-103	INDICATOR,FUEL QTY R
393082-105	INDICATOR,FUEL QTY R
393082-107	INDICATOR,FUEL QTY R
393082-109	INDICATOR,FUEL QTY R
393082-111	INDICATOR,FUEL QTY R
393082-113	INDICATOR,FUEL QTY R
393084-04359	INDICATOR,OIL QTY.
393084-04408	INDICATOR,OIL QTY.
393084-04596	INDICATOR,OIL QTY.
393084-11358	INDICATOR,FUEL QTY.
393086-01235	INDICATOR,FUEL QTY.
393086-01236	INDICATOR,FUEL QTY.
393086-01334	INDICATOR,FUEL QTY.
393086-01335	INDICATOR,FUEL QTY.
393086-01508	INDICATOR,FUEL QTY.
393086-01569	INDICATOR,FUEL QTY.
393086-02237	INDICATOR,FUEL QTY.
393086-02337	INDICATOR,FUEL QTY.
393086-02510	INDICATOR,FUEL QTY.
393086-02568	INDICATOR,FUEL QTY.

393090-101	INDICATOR,FUEL QTY
393090-103	INDICATOR,FUEL QTY
393090-105	INDICATOR,FUEL QTY R
393090-107	INDICATOR,FUEL QTY R
393090-109	INDICATOR,FUEL QTY
393090-111	INDICATOR,FUEL QTY
393090-113	INDICATOR,FUEL QTY
393090-115	INDICATOR,FUEL QTY
393090-117	INDICATOR,FUEL QTY
393093-02378	INDICATOR,FUEL QTY.T
393093-02547	INDICATOR,FUEL QTY.T
393103-001	INDICATOR,EPR
393103-002	INDICATOR,TOTAL AIR
393103-105	INDICATOR,EPR
393103-107	INDICATOR,EPR
393103-109	INDICATOR,EPR
393103-111	INDICATOR,EPR
39-42-1	POWER SUPPLY,STROBE
39-44-31	POWER SUPPLY,STROBE
394473-101	TRIMMER,CAPACITANCE
394473-121	CONDITIONER,SIGNAL
394473-123	CONDITIONER,SIGNAL
394473-125	CONDITIONER,SIGNAL
394473-127	CONDITIONER,SIGNAL
394473-129	CONDITIONER,SIGNAL
394473-131	TRIMMER,CAPACITANCE
394473-137	CONDITIONER,SIGNAL
394473-139	CONDITIONER,SIGNAL
394473-149	CONDITIONER,SIGNAL
394473-151	CONDITIONER,SIGNAL
394473-153	CONDITIONER,SIGNAL
394473-155	CONDITIONER,SIGNAL
394TS05Y	PANEL,HYDRAULIC
39-54-1	LIGHT,ANTI-COLLISION
396-00740	INDICATOR,OIL PRESSU
396-01740	INDICATOR,OIL PRESSU
396-100S1	INDICATOR,OIL PRESSU
396-100S1-D1	INDICATOR,OIL PRESSU
40-0149-3	LIGHT,ANTICOLLISION
40-0150-7	LIGHT,ANTICOLLISION
4003ZE	VALVE,INWARD
4005123-901	ALTIMETER
4005123-902	ALTIMETER
4005123-903	ALTIMETER
4005123-906	ALTIMETER

4005123-907	ALTIMETER
40057800-901	MACH AIR SPEED IND.
4013013-901	INDICATOR,VERTICAL S
4013013-902	INDICATOR,VERTICAL S
4013013-907	INDICATOR,VERTICAL S
4013013-909	INDICATOR,VERTICAL S
4016-B-BA	COCK,DRAIN
4019953-904	INDICATOR,ALTITUDE
4019953-905	INDICATOR,ALTITUDE
4025767-901	PANEL,TEMPERATURE SE
4025767-902	PANEL,TEMPERATURE SE
40-302-1	INDICATOR,TOTAL AIR
40-302-3	INDICATOR,TOTAL AIR
40-302-4	INDICATOR,TOTAL AIR
4032-A-BA	COCK,DRAIN
4051-A-AA	COCK,DRAIN
4051-A-BA	COCK,DRAIN
40557800-906	MACH AIR SPEED IND.
4055AA	UNIT,DEFUEL/REFUEL
4055BAA	UNIT,DEFUEL/REFUEL
4057800-901	INDICATOR,MACH AIRSP
4057800-902	INDICATOR,MACH AIRSP
4057800-904	INDICATOR,MACH AIRSP
4057800-905	INDICATOR,MACH AIRSP
4057800-906	INDICATOR,MACH AIRSP
4067241-801	VSI
4067241-802	VSI
4067241-803	VSI
4067241-804	VSI
4067241-805	VSI
4067241-806	VSI
4067241-840	VSI
4067241-841	VSI
4067241-842	VSI
4067241-843	VSI
4067241-844	VSI
4067241-845	VSI
4067241-860	VSI
4067241-861	VSI
4067241-862	VSI
4067241-863	VSI
4067241-864	VSI
4067241-865	VSI
4067241-880	VSI
4067241-881	VSI

4067241-882	VSI
4067241-883	VSI
4067241-884	VSI
4067241--884	VSI
4067241-885	VSI
4067241-890	VSI
4067241-891	VSI
4067241-892	VSI
4067241-893	VSI
4067241-894	VSI
4067241-895	VSI
40AD14	INDICATOR,OIL TEMP.R
40AD22	INDICATOR,DUAL TEMP.
410A	INDICATOR, TEMP
41166-1	INDICATOR,VERTICAL S
41166-2	INDICATOR,VERTICAL S
41166-3	INDICATOR,VERTICAL S
414TS05Y	PANEL,HYD.BRAKING CO
418-00044	TRANSMITTER,OIL PRES
418-26044	TRANSMITTER,OIL PRES
418-27044	TRANSMITTER,OIL PRES
4203-023-8	INDICATOR,FLAPS POSI
4203-045-80-12	INDICATOR,FLAPS POSI
4203-26-8	INDICATOR,FLAPS POSI
4203-30-8	INDICATOR,FLAPS POSI
4203-34-80-00	INDICATOR,FLAPS POSI
4203-34-80-11	INDICATOR,FLAPS POSI
'4209455	RH,WING SCAN LIGHT
4218A	SWITCH,PITOT SYSTEM
4218AW	SWITCH,PITOT SYSTEM
4219F010201	SWITCH,AIRSPEED
4219F010301	SWITCH,AIRSPEED
4219F010402	SWITCH,AIRSPEED
4219G010201	SWITCH,AIRSPEED
4219G010301	SWITCH,AIRSPEED
422-18152-108	MODULE,DEFECT CORREC
422-18152-110	MODULE,DEFECT CORREC
422-18152-111	MODULE,DEFECT CORREC
422-18152-123	MODULE,DEFECT CORREC
422-18152-124	MODULE,DEFECT CORREC
422-18152-208	MODULE,DEFECT CORREC
422-18152-210	MODULE,DEFECT CORREC
422-18152-211	MODULE,DEFECT CORREC
422-18152-223	MODULE,DEFECT CORREC
422-18152-224	MODULE,DEFECT CORREC

422-18152-308	MODULE,DEFECT CORREC
422-18152-310	MODULE,DEFECT CORREC
422-18152-311	MODULE,DEFECT CORREC
422-18152-323	MODULE,DEFECT CORREC
422-18152-324	MODULE,DEFECT CORREC
422-18152-408	MODULE,DEFECT CORREC
422-18152-410	MODULE,DEFECT CORREC
422-18152-411	MODULE,DEFECT CORREC
422-18152-423	MODULE,DEFECT CORREC
422-18152-424	MODULE,DEFECT CORREC
4224ZR21	SWITCH,ALTITUDE
4224ZR6	SWITCH,ALTITUDE
4227A010100	SWITCH,ALT.SENSITIVE
4232ZR5	SWITCH,ALTITUDE
4238Z010101	SWITCH,PRESSURE
427-00163-000	AMPLIFIER,SYNCHRO
'4305990071	PRESSURE SENSOR
'4315542	LIGHT,RETRACTABLE LANDING
43988-105	VALVE,PRESSURE RELIE
4408-1	BOX,MICROSWITCH
45-0123-3	LIGHT,LANDING
45-0263-1	LIGHT,RETRACTABLE LA
45-1610	STRIPPER,WIRE
4563-13	INDICATOR,DUAL FLAPS
4563-14	INDICATOR,DUAL FLAPS
4563-15	INDICATOR,DUAL FLAPS
4563-19-81-00	INDICATOR,DUAL FLAPS
457400EA0301	INDICATOR,RA/TA VSI-
457400EA0310	INDICATOR,RA/TA VSI-
457400EA0311	INDICATOR,RA/TA VSI-
457400EB0311	INDICATOR,RA/TA VSI-
457400FA0310	INDICATOR,RA/TA VSI-
457400FA0311	INDICATOR,RA/TA VSI-
457400FA0312	TCAS INDICATOR
457400FB0311	INDICATOR,RA/TA VSI-
457400FB0312	VSI
457400GA0002	INDICATOR,RA/TA VSI-
457400GA0011	INDICATOR,RA/TA VSI-
457400GA0602	INDICATOR,RA/TA VSI-
457400GA0901	INDICATOR,RA/TA VSI-
457400GA0911	INDICATOR,RA/TA VSI-
457400GA1100	INDICATOR,RA/TA VSI-
457400GA1311	INDICATOR,RA/TA VSI-
457400GA1312	INDICATOR,RA/TA VSI-
457400GA1500	INDICATOR,RA/TA VSI-

457400GA1501	INDICATOR,RA/TA VSI-
457400GA1502	INDICATOR,RA/TA VSI-
457400GA1900	INDICATOR,RA/TA VSI-
457400GB0011	INDICATOR,RA/TA VSI-
457400GB0911	INDICATOR,RA/TA VSI-
457400GB1100	INDICATOR,RA/TA VSI-
457400GB1311	INDICATOR,RA/TA VSI-
457400GB1312	INDICATOR,RA/TA VSI-
457400GB1502	INDICATOR,RA/TA VSI-
457400GB1900	INDICATOR,RA/TA VSI-
457400GB1901	VSI
457400GB2000	INDICATOR,RA/TA VSI-
457400KA0601	INDICATOR,RA/TA VSI-
457400KA0602	INDICATOR,RA/TA VSI-
457400KA1300	INDICATOR,RA/TA VSI-
457400KA1311	INDICATOR,RA/TA VSI-
457400KA1900	INDICATOR,RA/TA VSI-
457400KA1901	VSI
457400KB1311	INDICATOR,RA/TA VSI-
457400KB1900	INDICATOR,RA/TA VSI-
457400KB1901	VSI
457400MA0602	INDICATOR,RA/TA VSI-
457400MA1311	INDICATOR,RA/TA VSI-
457400MA1500	INDICATOR,RA/TA VSI-
457400MA1501	INDICATOR,RA/TA VSI-
457400MA1502	INDICATOR,RA/TA VSI-
457400MA1901	VSI
457400MB1311	INDICATOR,RA/TA VSI-
457400MB1502	INDICATOR,RA/TA VSI-
457400MB1901	VSI
457400PA1900	INDICATOR,RA/TA VSI-
457400PB1900	INDICATOR,RA/TA VSI-
457400PB1901	VSI
457400RA0702	INDICATOR,RA/TA VSI-
457400RA0711	INDICATOR,RA/TA VSI-
457400RB0711	INDICATOR,RA/TA VSI-
457400RB0712	VSI
457400SA0702	INDICATOR,RA/TA VSI-
457400SA0711	INDICATOR,RA/TA VSI-
457400SA0712	VSI
457400SB0711	INDICATOR,RA/TA VSI-
457400SB0712	VSI
457400TB0801	INDICATOR,RA/TA VSI-
457400TB0811	INDICATOR,RA/TA VSI-
457400TB0812	VSI

457400TC0811	INDICATOR,RA/TA VSI-
457400TC0812	VSI
457400UA1311	INDICATOR,RA/TA VSI-
457400UA1900	INDICATOR,RA/TA VSI-
457400UB1311	INDICATOR,RA/TA VSI-
457400UB1900	INDICATOR,RA/TA VSI-
457400UB1901	VSI
457400WA0811	INDICATOR,RA/TA VSI-
457400WA0812	VSI
457400WB0811	INDICATOR,RA/TA VSI-
457400WB0812	VSI
457400ZA1502	TCAS INDICATOR
46650-001	INDICATOR,FUEL FLOW/
46650-002	INDICATOR,FUEL FLOW/
47080-1	MOTOR,ELECTRIC
47080-2	MOTOR,ELECTRIC
47180-2	MOTOR,ELECTRIC
472511-105	PANEL,CONTROL
472511-107	PANEL,CONTROL
472511-109	PANEL,CONTROL
472511-111	PANEL,CONTROL
472511-113	PANEL,CONTROL
472711-101	SENSOR,LEVEL
472951-001	INDICATOR,FUEL QTY
472951-002	INDICATOR,FUEL QTY
472951-003	INDICATOR,FUEL QTY
472951-004	INDICATOR,FUEL QTY
472951-005	INDICATOR,FUEL QTY
472951-006	INDICATOR,FUEL QTY
473073-101	INDICATOR,EPR
4830A	UNIT,VALVE FAIL WARN
4830B	UNIT,VALVE FAIL WARN
4830C	UNIT,VALVE FAIL WARN
4863-13	INDICATOR,AIL/RUD/ST
4863-14	INDICATOR,AIL/RUD/ST
4863-15	INDICATOR,AIL/RUD/ST
4863-15-81	INDICATOR,AIL/RUD/ST
4863-18	INDICATOR,TRIM
4863-19	INDICATOR,AILERON/RU
4863-52-8	INDICATOR,AIL/RUDD/S
4863-550-80-12	INDICATOR,AIL/RUDD/S
4863-557-80-13	INDICATOR,TRIM
4L96-065	VALVE,HEAD
5000A	RECEPTACLE,ELECT.SHA
50-0122-1	LIGHT, TAXI/TAKE OFF

500-2100-006	CONTROL UNIT,NAV-DME
500-2100-009	UNIT,VOR-DME CONTROL
5003T95P03	FILTER,FUEL
5003T95P04	FILTER,FUEL
5003T95P04D	FILTER,FUEL
501-1036-01	INDICATOR,ATTITUDE G
501-1036-02	INDICATOR,ATTITUDE G
501-1036-03	INDICATOR,ATTITUDE G
501-1036-04	INDICATOR,ATTITUDE G
501-1036-05	INDICATOR,ATTITUDE G
501-1036-06	INDICATOR,ATTITUDE G
501-1036-07	INDICATOR,ATTITUDE G
501-1075-01	POWER SUPPLY,EMERGEN
501-1075-02	POWER SUPPLY,EMERGEN
501-1075-03	POWER SUPPLY,EMERGEN
501-1075-04	POWER SUPPLY,EMERGEN
501-1075-05	POWER SUPPLY,EMERGEN
501-1075-06	POWER SUPPLY,EMERGEN
501-1075-07	POWER SUPPLY,EMERGEN
501-1075-08	POWER SUPPLY,EMERGEN
501-1075-09	POWER SUPPLY,EMERGEN
501-1075-10	POWER SUPPLY,EMERGEN
501-1075-11	POWER SUPPLY,EMERGEN
501-1075-12	POWER SUPPLY,EMERGEN
501-1075-13	POWER SUPPLY,EMERGEN
501-1075-14	POWER SUPPLY,EMERGEN
501-1075-15	POWER SUPPLY,EMERGEN
501-1075-16	POWER SUPPLY,EMERGEN
501-1105-01	INDICATOR,ATTITUDE G
501-1105-02	INDICATOR,ATTITUDE G
501-1105-03	INDICATOR,ATTITUDE G
501-1105-04	INDICATOR,ATTITUDE G
501-1105-05	INDICATOR,ATTITUDE G
501-1105-06	INDICATOR,ATTITUDE G
501-1105-07	INDICATOR,ATTITUDE G
501-1105-08	INDICATOR,ATTITUDE G
501-1105-09	INDICATOR,ATTITUDE G
501-1105-10	INDICATOR,ATTITUDE G
501-1197-01	INDICATOR,ATTITUDE G
501-1197-02	INDICATOR,ATTITUDE G
501-1197-03	INDICATOR,ATTITUDE G
501-1197-04	INDICATOR,ATTITUDE G
501-1197-05	INDICATOR,ATTITUDE G
501-1197-06	INDICATOR,ATTITUDE G
501-1197-07	INDICATOR,ATTITUDE G

501-1197-08	INDICATOR,ATTITUDE G
501-1197-09	INDICATOR,ATTITUDE G
501-1197-10	INDICATOR,ATTITUDE G
501-1197-11	INDICATOR,ATTITUDE G
501-1197-12	INDICATOR,ATTITUDE G
501-1197-14	INDICATOR,ATTITUDE G
501-1228-01	POWER SUPPLY,EMERGEN
501-1228-02	POWER SUPPLY,EMERGEN
501-1228-03	POWER SUPPLY,EMERGEN
501-1228-04	POWER SUPPLY,EMERGEN
501-1228-05	POWER SUPPLY,EMERGEN
501-1228-06	POWER SUPPLY,EMERGEN
501-1240-01	INVERTER,STATIC
501-1240-02	INVERTER,STATIC
501-1295-01	INDICATOR,ATTITUDE G
501-1296-01	INDICATOR,ATTITUDE G
501-1296-02	INDICATOR,ATTITUDE G
501-1296-03	INDICATOR,ATTITUDE G
501-1296-04	INDICATOR,ATTITUDE G
501-1321-01	CHARGER,BATTERY
50234-1	TRANSMITTER,HYD.PRES
502BL10	INDICATOR,TIT/EGT
50-30-0	AMPLIFIER,YAW DAMPER
50-30-1	AMPLIFIER,YAW DAMPER
50483-31	INDICATOR,PRESSURE
50483-35	INDICATOR,PRESSURE
50580-2	WATER SENSOR
510-16410-1	INDICATOR,STATIC AIR
510784-1	INDICATOR,EPR
510784-5-1	INDICATOR,EPR
5111-5	TRANSMITTER,OIL PRES
5111-5C	TRANSMITTER,OIL PRES
518-16007-250	ALTIMETER,ENCODING
518-16007-261	ALTIMETER,ENCODING
518-16007-262	ALTIMETER,ENCODING
518-16007-264	ALTIMETER,ENCODING
518-16007-408	ALTIMETER,ENCODING
518-16007-508	ALTIMETER,ENCODING
518-16007-708	ALTIMETER,ENCODING
518-16007-761	ALTIMETER,ENCODING
518-16007-762	ALTIMETER,ENCODING
518-16007-763	ALTIMETER,ENCODING
518-16007-764	ALTIMETER,ENCODING
518-16007-808	ALTIMETER,ENCODING
518-28007-201	ALTIMETER,ENCODING

518-28007-204	ALTIMETER,ENCODING
518-28007-208	ALTIMETER,ENCODING
518-28007-261	ALTIMETER,ENCODING
518-28007-262	ALTIMETER,ENCODING
518-28007-263	ALTIMETER,ENCODING
518-28007-265	ALTIMETER,ENCODING
518-28007-271	ALTIMETER,ENCODING
518-28007-272	ALTIMETER,ENCODING
518-28007-708	ALTIMETER,ENCODING
518-28007-719	ALTIMETER,ENCODING
518-28007-808	ALTIMETER,ENCODING
518-28007-819	ALTIMETER,ENCODING
518-28007-921	ALTIMETER,ENCODING
518-29007-708	ALTIMETER,ENCODING
518-29007-808	ALTIMETER,ENCODING
5220A	AMPLIFIER
522-2782-004	INDICATOR,COURSE
522-2782-014	INDICATOR,COURSE
522-2782-024	INDICATOR,COURSE
522-2782-034	INDICATOR,COURSE
522-2782-037	INDICATOR,COURSE
522-3122-012	INDICATOR,FLIGHT DIR
522-3122-013	INDICATOR,FLIGHT DIR
522-3206-004	INDICATOR,FLIGHT DIR
522-3206-005	INDICATOR,FLIGHT DIR
522-3206-006	INDICATOR,FLIGHT DIR
522-3206-007	INDICATOR,FLIGHT DIR
522-3206-008	INDICATOR,FLIGHT DIR
522-3206-009	INDICATOR,FLIGHT DIR
522-3877-002	INDICATOR,FLIGHT DIR
522-4114-001	INDICATOR,RADIO ALTI
522-4114-002	INDICATOR,RADIO ALTI
522-4114-003	INDICATOR,RADIO ALTI
522-4114-004	INDICATOR,RADIO ALTI
522-4114-006	INDICATOR,RADIO ALTI
522-4114-008	INDICATOR,RADIO ALTI
522-4529-001	INDICATOR,FLIGHT DIR
522-4529-002	INDICATOR,FLIGHT DIR
522-4529-004	INDICATOR,FLIGHT DIR
522-4825-002	INDICATOR,RADIO ALTI
522-4825-004	INDICATOR,RADIO ALTI
522-4825-006	INDICATOR,RADIO ALTI
522-4825-007	INDICATOR,RADIO ALTI
522-4825-008	INDICATOR,RADIO ALTI
522-4825-011	INDICATOR,RADIO ALTI

52-2840-004	FILTER,FUEL
52-2848-004	FILTER,FUEL
5318-201-80-10	INDICATOR,FUEL TEMP.
532-38105-202	INDICATOR,AIRSPEED
5346-210-8	INDICATOR,PRESSURE
53540-928-3	BOARD, VOR INPUT
53603-390-1	BOARD,POWER SUPPLY
53603-400-1	BOARD,POWER SUPPLY
53603-410-1	BOARD,POWER SUPPLY
53603-420-1	BOARD,DISPLAY
53603-435-01	BOARD,MICROPROCESSOR
53603-440-03	BOARD,MICROPROCESSOR
53603-441-01	BOARD,MICROPROCESSOR
53603-540-2	BOARD,INPUT
53603-620-1	BOARD,OUTPUT
53603-620-2	BOARD,OUTPUT
53771-9029	ACTUATOR,ROTARY
53930-8	VALVE,SHUT OFF
5396-216-0	INDICATOR,FUEL TEMP.
540-23989-001	ALERTER,ALTITUDE
540-23989-002	ALERTER,ALTITUDE
540-23989-003	ALERTER,ALTITUDE
540-23989-004	ALERTER,ALTITUDE
540-23989-005	ALERTER,ALTITUDE
540-23989-006	ALERTER,ALTITUDE
540-23989-007	ALERTER,ALTITUDE
540-23989-008	ALERTER,ALTITUDE
540-23989-009	ALERTER,ALTITUDE
540-23989-010	ALERTER,ALTITUDE
540-23989-011	ALERTER,ALTITUDE
540-23989-012	ALERTER,ALTITUDE
540-23989-013	ALERTER,ALTITUDE
540-23989-015	ALERTER,ALTITUDE
540-23989-021	ALERTER,ALTITUDE
540-23989-022	ALERTER,ALTITUDE
540-23989-028	ALERTER,ALTITUDE
540-23989-101	ALERTER,ALTITUDE
540-23989-102	ALERTER,ALTITUDE
540-23989-103	ALERTER,ALTITUDE
540-23989-104	ALERTER,ALTITUDE
540-23989-301	ALERTER,ALTITUDE
540-23989-302	ALERTER,ALTITUDE
540-23989-311	ALERTER,ALTITUDE
540-23989-312	ALERTER,ALTITUDE
540-23989-314	ALERTER,ALTITUDE

540-23989-601	ALERTER,ALTITUDE
540-23989-602	ALERTER,ALTITUDE
540-23989-611	ALERTER,ALTITUDE
540-23989-612	ALERTER,ALTITUDE
540-23989-901	ALERTER,ALTITUDE
540-23989-902	ALERTER,ALTITUDE
540-23989-903	ALERTER,ALTITUDE
540-23989-904	ALERTER,ALTITUDE
540-23989-905	ALERTER,ALTITUDE
540-23989-906	ALERTER,ALTITUDE
540-23989-907	ALERTER,ALTITUDE
540-23989-908	ALERTER,ALTITUDE
540-23989-909	ALERTER,ALTITUDE
540-23989-910	ALERTER,ALTITUDE
540-23989-911	ALERTER,ALTITUDE
540-23989-912	ALERTER,ALTITUDE
540-23989-951	ALERTER,ALTITUDE
540-23989-952	ALERTER,ALTITUDE
540-23989-953	ALERTER,ALTITUDE
540-23989-954	ALERTER,ALTITUDE
540-25100-021	ALERTER,ALTITUDE
540-25100-022	ALERTER,ALTITUDE
5423-701-80-10	INDICATOR,N2 RPM
5423-708-80-10	INDICATOR,N2 RPM
5426-234-8	INDICATOR,CSD OIL TE
5426-241-8	INDICATOR,CSD OIL TE
5426-252-8	INDICATOR,CSD OIL TE
5427-389-8	INDICATOR,DUAL
5428-553-80-10	INDICATOR,ITT
5428-555-80-10	INDICATOR,ITT
5428-559-80-10	INDICATOR,ITT
5428-701-80-10	INDICATOR,N1 RPM
5428-706-80-10	INDICATOR,N1 RPM
550-18013B-001	INDICATOR,VERTICAL S
550-18013B-002	INDICATOR,VERTICAL S
550-18013B-003	INDICATOR,VERTICAL S
550-18013B-004	INDICATOR,VERTICAL S
550-18013B-011	INDICATOR,VERTICAL S
550-18013B-012	INDICATOR,VERTICAL S
550-18013B-013	INDICATOR,VERTICAL S
550-18013B-014	INDICATOR,VERTICAL S
550-18013B-021	INDICATOR,VERTICAL S
550-18013B-022	INDICATOR,VERTICAL S
550-18013B-023	INDICATOR,VERTICAL S
550-18013B-024	INDICATOR,VERTICAL S

550-18013B-031	INDICATOR,VERTICAL S
550-18013B-032	INDICATOR,VERTICAL S
550-18013B-033	INDICATOR,VERTICAL S
550-18013B-034	INDICATOR,VERTICAL S
550-18013B-1	INDICATOR,VERTICAL S
550-18013B-103	INDICATOR,VERTICAL S
550-18013B-2	INDICATOR,VERTICAL S
550-18013B-3	INDICATOR,VERTICAL S
550-18013B-4	INDICATOR,VERTICAL S
550-18013B-921	INDICATOR,VERTICAL S
550-18013B-922	INDICATOR,VERTICAL S
550-18013B-923	INDICATOR,VERTICAL S
550-18013B-924	INDICATOR,VERTICAL S
550-18013B-951	INDICATOR,VERTICAL S
550-18013B-952	INDICATOR,VERTICAL S
550-18013B-953	INDICATOR,VERTICAL S
550-18013B-954	INDICATOR,VERTICAL S
550-18013B-961	INDICATOR,VERTICAL S
550-18013B-962	INDICATOR,VERTICAL S
550-18013B-963	INDICATOR,VERTICAL S
550-18013B-964	INDICATOR,VERTICAL S
5502-360-8	INDICATOR,HYD.QTY/PR
5502-366-8	INDICATOR,DUAL HYDRA
5502-367-80-10	INDICATOR,DUAL HYDRA
5502-368-80-00	INDICATOR,DUAL HYDRA
5502-380-80-10	INDICATOR,DUAL HYDRA
5502-382-80-12	INDICATOR,DUAL HYDRA
55-0510-2	INVERTER
55-0511-2	INVERTER
55-0520-4	INVERTER
55-0520-4-3	INVERTER
55-0521-4	INVERTER
55-0522-4	INVERTER
55-0530-6	INVERTER
55-0531-6	INVERTER
55-0531-6-5	INVERTER
55-0532-6	INVERTER
55-0533-6	INVERTER
5558-10	INDICATOR,TOTAL TEMP
5558-11	INDICATOR,TOTAL TEMP
5558-12	INDICATOR,TOTAL TEMP
5558-13	INDICATOR,TOTAL TEMP
5558-13-81	INDICATOR,TOTAL TEMP
5558-13-81-00	INDICATOR,TOTAL TEMP
55692-500-1	MODULE, POWER SUPPLY

55692-500-2	MODULE, POWER SUPPLY
55692-500-3	MODULE, POWER SUPPLY
55692-500-4	MODULE, POWER SUPPLY
5612-386-8	INDICATOR,OIL PRESS/
570-23932-002	ALTIMETER,PNEUMATIC
570-23932-005	ALTIMETER,PNEUMATIC
570-23932-006	ALTIMETER,PNEUMATIC
570-23932-008	ALTIMETER,PNEUMATIC
570-23932-012	ALTIMETER,PNEUMATIC
570-23932-901	ALTIMETER,PNEUMATIC
570-23932-902	ALTIMETER,PNEUMATIC
570-23932-903	ALTIMETER,PNEUMATIC
570-24929-013	ALTIMETER,ENCODING
570-24929-501	ALTIMETER,ENCODING
570-40400-101	ALTIMETER
570-487	METER,FREQUENCY
573TS04Y	PANEL,DEVIATION DETE
573TS04Y01	PANEL,DEVIATION DETE
573TS04Y0A	PANEL,DEVIATION DETE
573TS04Y0B	PANEL,DEVIATION DETE
575-24030-215	INDICATOR,AIRSPEED M
575-24030-219	INDICATOR,AIRSPEED M
575-24030-241	INDICATOR,AIRSPEED M
575-24030-267	INDICATOR,AIRSPEED M
575-24030-310	INDICATOR,AIRSPEED M
575-24030-3123	INDICATOR,AIRSPEED M
575-24030-315	INDICATOR,AIRSPEED M
575-24030-319	INDICATOR,AIRSPEED M
575-24030-341	INDICATOR,AIRSPEED M
575-24030-367	INDICATOR,AIRSPEED M
575-24030-641	INDICATOR,AIRSPEED M
575-24030-741	INDICATOR,AIRSPEED M
575-25850-272	INDICATOR,AIRSPEED M
575-26320-310	INDICATOR,AIRSPEED
57530-20	VALVE,BRAKE METERING
57530-21	VALVE,BRAKE METERING
587-00107-001	SWITCH,PRESSURE
587-00501-000	SWITCH,PRESSURE
5897-651-8	CONTROL,AIR CONDITIO
5897-655-80-13	BOX,HEATING CONTROL
5897-701-80-10	PANEL,TEMP.REGULATIN
5897-702-80-10	PANEL,TEMP.REGULATIN
5916784-1	FIXTURE ASSY-STATIC
599-7039	UNIVERSAL INDICATOR
6002614-2	BOX,CONTROL

6002614-3	BOX,CONTROL
6007-1E-7-A	INDICATOR,DUAL PRESS
60-1321-1	POWER SUPPLY
60-1321-1LB	POWER SUPPLY
60-1321-5	POWER SUPPLY
60-1321-5LB	POWER SUPPLY
60-1321-7	POWER SUPPLY
60-1321-7LB	POWER SUPPLY
6014-1	MOTOR,FLAP
6014-2	MOTOR,FLAP
6014-4	MOTOR,FLAP
6014-5	MOTOR ASSEMBLY
6014-6	MOTOR ASSEMBLY
6014-7	MOTOR ASSEMBLY
6014-8	MOTOR ASSEMBLY
60-1750-3	POWER SUPPLY
60-1750-7	POWER SUPPLY
60-2038	POWER SUPPLY,TRIPLE
60-2388-1	POWER SUPPLY
60-2502-1	BATTERY PACK
60-2502-5	BATTERY PACK
6025-300	VALVE,PRESSURE RELIE
60-2667-1	POWER SUPPLY,STROBE
60-2667-3	POWER SUPPLY,STROBE
60-2667-5	POWER SUPPLY,STROBE
60-2667-7	POWER SUPPLY,STROBE
60-2794-1	POWER SUPPLY,STROBE
60-4411-1	POWER SUPPLY
60-4411-3	POWER SUPPLY
60-4411-5	POWER SUPPLY
60651-001-1	SENSOR,AIRSPEED
60B00132-162	INDICATOR,RPM TACHOM
60B00132-26	INDICATOR,RPM TACHOM
60B00132-27	INDICATOR,RPM TACHOM
60B00132-28	INDICATOR,RPM TACHOM
60B00132-29	INDICATOR,RPM TACHOM
60B00300-103	INDICATOR,RPM TACHOM
60B00300-104	INDICATOR,RPM TACHOM
60B00300-105	INDICATOR,RPM TACHOM
60B00300-106	INDICATOR,RPM TACHOM
60B00300-107	INDICATOR,RPM TACHOM
60B00300-42	INDICATOR,RPM TACHOM
60B00300-43	INDICATOR,RPM TACHOM
60B00300-44	INDICATOR,RPM TACHOM
60B00300-52	INDICATOR,RPM TACHOM

60B00300-53	INDICATOR,RPM TACHOM
60B00300-54	INDICATOR,RPM TACHOM
60B00300-62	INDICATOR,RPM TACHOM
60B00300-63	INDICATOR,RPM TACHOM
60B00300-64	INDICATOR,RPM TACHOM
61013-397-2	INDICATOR,EGT
610BL24B	INDICATOR,TEMPERATUR
610BL29	INDICATOR,TEMPERATUR
610BL3	INDICATOR,TEMPERATUR
610BL3B	INDICATOR,TEMPERATUR
610BL4	INDICATOR,TEMPERATUR
610BL4B	INDICATOR,TEMPERATUR
610BL4D	INDICATOR,TEMPERATUR
610BL4E	INDICATOR,TEMPERATUR
610BL4H	INDICATOR,TEMPERATUR
610BL9	INDICATOR,TEMPERATUR
61471-109-2	INDICATOR,N1 TACH.
61471-109-3	INDICATOR,N1 TACH.
61471-110-2	INDICATOR,N2 TACH.
61471-110-3	INDICATOR,N2 TACH.
61531-000-1	INDICATOR,COMP.& DUC
61531-005-1	INDICATOR,COMP.& DUC
61531-006-1	INDICATOR,COMP.& DUC
61531-007-1	INDICATOR,COMP.& DUC
61551-101-2	INDICATOR,SLATS & FL
61551-102-1	INDICATOR,SLATS & FL
617-01441	INDICATOR,OIL PRESSU
620TS01Y02	INDICATOR,CONFIGURAT
620TS01Y03	INDICATOR,CONFIGURAT
622-1204-002	INDICATOR,RADIO ALTI
622-1204-008	INDICATOR,RADIO ALTI
622-2292-001	ALTIMETER,BAROMETRIC
622-2292-002	ALTIMETER,BAROMETRIC
622-2292-003	ALTIMETER,BAROMETRIC
622-2292-004	ALTIMETER,BAROMETRIC
622-2292-005	ALTIMETER,BAROMETRIC
622-2292-006	ALTIMETER,BAROMETRIC
622-2292-007	ALTIMETER,BAROMETRIC
622-2292-008	ALTIMETER,BAROMETRIC
622-2701-001	ALTIMETER,BAROMETRIC
622-3975-001	ALTIMETER,BAROMETRIC
622-3975-002	ALTIMETER,BAROMETRIC
622-3975-003	ALTIMETER,BAROMETRIC
622-3975-004	ALTIMETER,BAROMETRIC
622-3975-005	ALTIMETER,BAROMETRIC

622-3975-006	ALTIMETER,BAROMETRIC
622-3975-007	ALTIMETER,BAROMETRIC
622-3975-008	ALTIMETER,BAROMETRIC
622-4424-001	VERTICAL REFERENCE
622-4425-001	ALTIMETER,BAROMETRIC
622-4425-002	ALTIMETER,BAROMETRIC
622-4425-003	ALTIMETER,BAROMETRIC
622-4425-004	ALTIMETER,BAROMETRIC
622-4425-005	ALTIMETER,BAROMETRIC
622-4425-006	ALTIMETER,BAROMETRIC
622-4425-007	ALTIMETER,BAROMETRIC
622-4425-008	ALTIMETER,BAROMETRIC
622-4488-001	VERTICAL REFERENCE
622-4563-004	INDICATOR,RADIO ALTI
622-4563-006	INDICATOR,RADIO ALTI
622-4563-011	INDICATOR,RADIO ALTI
622-6238-001	ALTIMETER,BAROMETRIC
622-6238-002	ALTIMETER,BAROMETRIC
622-6238-003	ALTIMETER,BAROMETRIC
622-6238-004	ALTIMETER,BAROMETRIC
622-6238-005	ALTIMETER,BAROMETRIC
622-6238-006	ALTIMETER,BAROMETRIC
622-6238-007	ALTIMETER,BAROMETRIC
622-6238-008	ALTIMETER,BAROMETRIC
629917-1	ALTIMETER,PRESSURE
630-37070-223	COMPUTER,SAT/TAS/TAT
6342-01	MODULE,FIRE/OVERHEAT
63540-031-2	INDICATOR,RMI/ADF
63540-040-1	INDICATOR,RMI/ADF
63540-041-2	INDICATOR,RMI/ADF
63540-170-2	INDICATOR,DDRMI
63540-170-3	INDICATOR,DDRMI
63540-250-2	INDICATOR,DDRMI
63600-050-2	INDICATOR,FF/FU
63600-051-2	INDICATOR,FF/FU
63600-051-3	INDICATOR,FF/FU
63600-250-2	INDICATOR,EGT
63600-251-2	INDICATOR,EGT
63600-252-2	INDICATOR,EGT
63600-253-2	INDICATOR,EGT
63600-254-1	INDICATOR,EGT
63600-255-1	INDICATOR,EGT
63600-257-1	INDICATOR,EGT
63600-258-1	INDICATOR,EGT
63600-259-1	INDICATOR,EGT

63600-260-1	INDICATOR,EGT
63600-261-1	INDICATOR,EGT
63600-270-1	INDICATOR,EGT
63600-270-2	INDICATOR,EGT
63600-271-1	INDICATOR,EGT
63600-280-1	INDICATOR,EGT
63600-450-2	N1 INDICATOR
63600-451-2	N2 INDICATOR
63600-454-1	N2 INDICATOR
63600-454-2	N2 INDICATOR
63600-455-1	N2 INDICATOR
63600-456-2	N1 INDICATOR
63600-457-1	N1 INDICATOR
63600-458-1	INDICATOR,N2
63600-459-1	N2 INDICATOR
63601-450-2	INDICATOR,N1
63601-451-1	INDICATOR,N1
63601-460-1	INDICATOR,N1
63601-650-2	INDICATOR,EPR
63601-651-1	INDICATOR,EPR
64032-229-1	INDICATOR,AIRSPEED/M
64040-860-1	INDICATOR,AIRSPEED
64040-861-1	INDICATOR,AIRSPEED
64040-862-1	INDICATOR,AIRSPEED
64040-863-1	INDICATOR,AIRSPEED
64050-860-1	INDICATOR,AIRSPEED
64050-861-1	INDICATOR,AIRSPEED
64050-862-1	INDICATOR,AIRSPEED
640TS01Y01	PANEL,ANTI-SKID CONT
64111-960-1	ALTIMETER
64111-992-1	ALTIMETER
64140-421-1	ALTIMETER
64141-520-1	ALTIMETER,COUNTER/PO
64141-530-1	ALTIMETER,COUNTER/PO
64141-560-1	ALTIMETER
64141-564-1	ALTIMETER
64141-570-1	ALTIMETER
64141-571-1	ALTIMETER
64250-005-1	TRANSMITTER,HYD.PRES
64250-005-2	TRANSMITTER,HYD.PRES
64250-025-1	TRANSMITTER,PRESSURE
64250-025-2	TRANSMITTER,PRESSURE
64250-043-1	TRANSMITTER,HYD.PRES
64251-417-1	TRANSMITTER,PRESSURE
64251-417-2	TRANSMITTER,PRESSURE

64292-000-2	TRANSMITTER,PRESSURE
64302-004-1	SWITCH,PRESSURE
64751-003-2	TRANSMITTER,FUEL QTY
64752-003-1	TRANSMITTER,HYD.GAUG
64752-004-1	TRANSMITTER,HYD.GAUG
64752-005-2	TRANSMITTER,HYD.GAUG
64752-006-1	TRANSMITTER,HYD.GAUG
64752-007-1	TRANSMITTER,HYD.GAUG
64752-008-2	TRANSMITTER,HYD.GAUG
64752-015-1	TRANSMITTER,HYD.GAUG
64752-016-1	TRANSMITTER,HYD.GAUG
64752-017-1	TRANSMITTER,HYD.GAUG
64752-019-1	TRANSMITTER,HYD.GAUG
64752-020-1	TRANSMITTER,HYD.GAUG
64752-023-1	TRANSMITTER,HYD.GAUG
64752-026-1	TRANSMITTER,HYD.GAUG
64820-410-1	INDICATOR,FUEL PRESS
64822-424-1	INDICATOR,OIL QUANTI
64822-425-1	INDICATOR,TACHOMETER
64822-426-1	INDICATOR,TEMPERATUR
64857-412-1	INDICATOR,DUAL
64880-415-1	INDICATOR,DUAL OIL Q
64880-418-1	OIL/ PRESS QTY INDICATOR
64880-420-1	INDICATOR,DUAL COMBI
64882-202-1	INDICATOR,TRIPLE PRE
64882-203-1	INDICATOR,TRIPLE PRE
64882-206-1	TRIPLE PRESSURE IND
64902-052-1	INDICATOR,HYDRAULIC
64902-053-1	INDICATOR,HYDRAULIC
64902-054-1	INDICATOR,HYDRAULIC
64902-055-1	INDICATOR,HYDRAULIC
64902-056-1	INDICATOR,HYDRAULIC
64902-057-1	INDICATOR,HYDRAULIC
64902-100-1	INDICATOR,HYD.QTY.RE
64902-101-1	INDICATOR,HYD.QTY.RE
64952-001-1	INDICATOR,TEMPERATUR
65-0911-5	PANEL,ANNUNCIATOR
65-0911-7	PANEL,ANNUNCIATOR
65-0911-9	PANEL,ANNUNCIATOR
65-1027-1	PANEL,ANNUNCIATOR
65-1027-10	PANEL,ANNUNCIATOR
65-1027-11	PANEL,ANNUNCIATOR
65-1027-12	PANEL,ANNUNCIATOR
65-1027-13	PANEL,ANNUNCIATOR
65-1027-14	PANEL,ANNUNCIATOR

65-1027-15	PANEL,ANNUNCIATOR
65-1027-16	PANEL,ANNUNCIATOR
65-1027-17	PANEL,ANNUNCIATOR
65-1027-2	PANEL,ANNUNCIATOR
65-1027-3	PANEL,ANNUNCIATOR
65-1027-4	PANEL,ANNUNCIATOR
65-1027-5	PANEL,ANNUNCIATOR
65-1027-6	PANEL,ANNUNCIATOR
65-1027-7	PANEL,ANNUNCIATOR
65-1027-8	PANEL,ANNUNCIATOR
65-1027-9	PANEL,ANNUNCIATOR
65-1049-1	PANEL,LIGHT ANNUNCIA
65-1049-11	PANEL,LIGHT ANNUNCIA
65-1049-13	PANEL,LIGHT ANNUNCIA
65-1049-3	PANEL,LIGHT ANNUNCIA
65-1049-5	PANEL,LIGHT ANNUNCIA
65-1049-7	PANEL,LIGHT ANNUNCIA
65-1049-9	PANEL,LIGHT ANNUNCIA
65205-211-2	INDICATOR,ALTITUDE
65205-211-3	INDICATOR,ALTITUDE
65205-211-4	INDICATOR,ALTITUDE
65205-230-1	INDICATOR,ALTITUDE
65205-230-2	INDICATOR,ALTITUDE
65205-230-3	INDICATOR,ALTITUDE
65205-235-1	INDICATOR,ALTITUDE
65205-240-1	INDICATOR,ALTITUDE
65285-220-2	INDICATOR,VERTICAL S
65285-230-1	INDICATOR,VERTICAL S
652TS01Y01	PANEL,FAILURE WARNIN
65660-1	VALVE,HYD.SELECTOR
65670-1	VALVE,HYD.SELECTOR
65691-005-1	IND,FUEL RATE OF FLO
65691-006-1	IND,FUEL RATE OF FLO
65691-255-1	INDICATOR,ENGINE SPE
65691-256-1	INDICATOR,ENGINE SPE
65691-257-1	INDICATOR,ENGINE SPE
6664157-1	WINDSHIELD TEMP. REG
671BK-010	ALTIMETER
671BK-011	ALTIMETER
671BK-03	ALTIMETER
671BK-07	ALTIMETER
671BX-010D	ALTIMETER
691-1201	ALTIMETER
6911B010100	VALVE,ANTI-ICING
694TS03Y01	PANEL,HYDRAULIC

694TS03Y01SE	PANEL,HYDRAULIC
6X831	REFRIGERANT PRESS.GA
6X832	REFRIGERANT PRESS.GA
7006-1	UNIT,SLAT/FLAP CONTR
701-3100	VALVE,PRESSURE RELIE
701557-1	LIGHT,DUAL TAIL
701557-2	LIGHT,DUAL TAIL
701557-5	LIGHT,DUAL TAIL
701557-6	LIGHT,DUAL TAIL
7015C	UNIT,AUDIO WARNING
7015Y02	UNIT,AUDIO WARNING
7015Y021	UNIT,AUDIO WARNING
7015Y04	UNIT,AUDIO WARNING
7015Y041	UNIT,AUDIO WARNING
7015Y05	UNIT,AUDIO WARNING
7015Y051	UNIT,AUDIO WARNING
7015Y08	UNIT,AUDIO WARNING
7015Y081	UNIT,AUDIO WARNING
701839-1	POWER SUPPLY
702085-12	LIGHT,DUAL WINGTIP
702085-8	LIGHT,DUAL WINGTIP
7023W1L1	VALVE,PRESSURE REDUC
7023W1L11	VALVE,PRESSURE REDUC
7026U1K1	VALVE,PRESSURE REDUC
703340-2	TANK UNIT,FUEL
703341-1	TANK UNIT,FUEL
703342-1	TANK UNIT,FUEL
703342-2	TANK UNIT,FUEL
703350-1	TRANSMITTER,FUEL GAG
703350-2	TRANSMITTER,FUEL GAG
703350-3	TRANSMITTER,FUEL GAG
703350-3A	TRANSMITTER,FUEL GAG
703350-4	TRANSMITTER,FUEL GAG
703-350-4	PROBE FUEL TANK.
704-771-3	TANK UNIT
704-771-4	TANK UNIT
704-772-3	TANK UNIT
704-772-4	TANK UNIT
704-773-3	TANK UNIT
704-773-4	TANK UNIT
704-774-3	TANK UNIT
704-774-4	TANK UNIT
704-775-3	TANK UNIT
704-775-4	TANK UNIT
704-776-3	TANK UNIT

704-776-4	TANK UNIT
704-777-3	TANK UNIT
704-777-4	TANK UNIT
704-777-5	TANK UNIT
704-778-3	TANK UNIT
704-778-4	TANK UNIT
704-779-3	TANK UNIT
704-779-4	TANK UNIT
704-780-3	TANK UNIT
704-780-4	TANK UNIT
704-781-3	TANK UNIT
704-781-4	TANK UNIT
704-782-3	TANK UNIT
704-782-4	TANK UNIT
705-7V91M1	INDICATOR,GYRO HORIZ
705-7V9M1	INDICATOR,GYRO HORIZ
706043-1	AMPLIFIER
706043-2	AMPLIFIER
706043-3	AMPLIFIER
706043-4	AMPLIFIER
706043-5	AMPLIFIER
7060-C20	INDICATOR,RATE OF CL
706180-1	AMPLIFIER,DUAL
706719-1	AMPLIFIER
706720-1	AMPLIFIER
70Y1	BATTERY,STAND-BY
710-13300-114	CONTROLLER,CAB.ALTIT
710-13300-201	CONTROLLER,CAB.ALTIT
711-14331-1	VALVE,AIR EXHAUST CO
711-14331-1A	VALVE,AIR EXHAUST CO
711-14331-1B	VALVE,AIR EXHAUST CO
711-14331-1C	VALVE,AIR EXHAUST CO
711-14331-2	VALVE,AIR EXHAUST CO
711-14331-2A	VALVE,AIR EXHAUST CO
711-14331-2B	VALVE,AIR EXHAUST CO
711-14331-2C	VALVE,AIR EXHAUST CO
711-16698-10	VALVE,AIR EXHAUST CO
711-16698-5	VALVE,AIR EXHAUST CO
711-16698-51	VALVE,AIR EXHAUST CO
711-16698-6	VALVE,AIR EXHAUST CO
711-16698-9	VALVE,AIR EXHAUST CO
713-14334-1	FILTER
714-13375-1	SWITCH
716147-1	INDICATOR,FUEL QTY
716555-2	INDICATOR,FUEL QTY.

716BK-8-036	INDICATOR,VERTICAL S
716BU-4-052	INDICATOR,VERTICAL S
716BU-8-036	INDICATOR,VERTICAL S
718-054-1	UNIT,LEVEL SENSING
718-055-1	UNIT,LEVEL SENSING
718-330	FUEL RELAY BOX.
718-557	UNIT,LEVEL SENSING
718791-2	UNIT,INTERFACE
718-886	UNIT,LEVEL SENSING
718-990	AMPLIFIER,LEVEL SWIT
71Y1	BATTERY,STAND-BY
720-15900-413	INDICATOR,CAB.ALT.PR
720-15900-904	INDICATOR,CAB.ALT.PR
720-15900-912	INDICATOR,CAB.ALT.PR
721868-1	BOX,RELAY
721868-1A	BOX,RELAY
722-031	AMPLIFIER,LEVEL SWIT
722087-2	BOX,RELAY
722105-2	DETECTOR,LEVEL
722-113	AMPLIFIER,LEVEL SWIT
722-113-1	AMPLIFIER,LEVEL SWIT
722-143-1	AMPLIFIER,LEVEL SWIT
722233-1	BOX,RELAY
722-262-1	AMPLIFIER,LEVEL SWIT
722-295-2	AMPLIFIER,LEVEL SWIT
722-295-3	AMPLIFIER,LEVEL SWIT
722-378	AMPLIFIER,LEVEL SWIT
722702-1-0	LEVEL SENSING UNIT
722703-1-0	LEVEL SENSING UNIT
722704-1-0	LEVEL SENSING UNIT
723-159-7	FUEL FLOW XMITTER
723161-1	INDICATOR,AMPLIFIER
723161-2	INDICATOR,AMPLIFIER
724CU-4-012	INDICATOR,AIRSPEED
724DU-4-012	INDICATOR,AIRSPEED
724DX-4-012	INDICATOR,AIRSPEED
72-500B	ANTI SKID CONTROL BO
728026-2	AMPLIFIER
728026-3	AMPLIFIER
728027M1	VALVE,ELECTRICAL
728027M2	VALVE,ELECTRICAL
728027M3	VALVE,ELECTRICAL
728027M31	VALVE,ELECTRICAL
728027M33	VALVE,ELECTRICAL
728027M4	VALVE,ELECTRICAL

728027M41	VALVE,ELECTRICAL
728027M5	VALVE,ELECTRICAL
728027M51	VALVE,ELECTRICAL
728027M52	VALVE,ELECTRICAL
728027M53	VALVE,ELECTRICAL
728027M71	VALVE,ELECTRICAL
728027M81	VALVE,ELECTRICAL
728027M82	VALVE,ELECTRICAL
728027M83	VALVE,ELECTRICAL
730-3D	POWER SUPPLY
73-110-2	TANK UNIT
736327-1	AMPLIFIER
736328-2	AMPLIFIER
748326-2	INDICATOR,FUEL QTY
748469-1	INDICATOR,FUEL QTY
7500-30-A5-1A	TRANSMITTER,PRESSURE
75-0035-1	PANEL,LG ANNUNCIATOR
75-0035-3	PANEL,LG ANNUNCIATOR
75-0035-5	PANEL,LG ANNUNCIATOR
75-0035-7	PANEL,LG ANNUNCIATOR
75-0036-1	PANEL,LE FLAP ANNUNC
75-0036-3	PANEL,LE FLAP ANNUNC
75-0036-5	PANEL,LE FLAP ANNUNC
75-0037-1	PANEL,FLIGHT CONTROL
75-0037-3	PANEL,FLIGHT CONTROL
75-0037-5	PANEL,FLIGHT CONTROL
75-0038-1	PANEL,DOOR WARNING
75-0038-11	PANEL,DOOR WARNING
75-0038-13	PANEL,DOOR WARNING
75-0038-15	PANEL,DOOR WARNING
75-0038-17	PANEL,DOOR WARNING
75-0038-19	PANEL,DOOR WARNING
75-0038-21	PANEL,DOOR WARNING
75-0038-23	PANEL,DOOR WARNING
75-0038-25	PANEL,DOOR WARNING
75-0038-27	PANEL,DOOR WARNING
75-0038-29	PANEL,DOOR WARNING
75-0038-3	PANEL,DOOR WARNING
75-0038-5	PANEL,DOOR WARNING
75-0038-7	PANEL,DOOR WARNING
75-0038-9	PANEL,DOOR WARNING
75-0039-1	PANEL,GENERATOR ANNU
75-0039-3	PANEL,GENERATOR ANNU
75-0039-5	PANEL,GENERATOR ANNU
75-0039-7	PANEL,GENERATOR ANNU

75-0039-9	PANEL,GENERATOR ANNU
75-0316-1	PANEL,FIRE DETECTION
75-0316-3	PANEL,FIRE DETECTION
75-0336-1	PANEL,WARNING
75-0336-3	PANEL,WARNING
75-0336-7	PANEL,WARNING
75-0341-1	LIGHT,INDICATOR
75-0341-13	LIGHT,INDICATOR
75-0341-15	LIGHT,INDICATOR
75-0341-17	LIGHT,INDICATOR
75-0341-19	LIGHT,INDICATOR
75-0341-21	LIGHT,INDICATOR
75-0341-23	LIGHT,INDICATOR
75-0341-25	LIGHT,INDICATOR
75-0341-27	LIGHT,INDICATOR
75-0341-29	LIGHT,INDICATOR
75-0341-3	LIGHT,INDICATOR
75-0341-5	LIGHT,INDICATOR
75-0341-7	LIGHT,INDICATOR
75-0341-9	LIGHT,INDICATOR
75-0361-1	PANEL,FIRE DETECTION
75-0361-3	PANEL,FIRE DETECTION
7609-37-D5-2	TRANSMITTER,PRESSURE
7609-37-E5-1	TRANSMITTER,PRESSURE
7609-37-M5-2	TRANSMITTER,PRESSURE
766189-4	TANK UNIT
766190-1	TANK UNIT
766192-4	TANK UNIT
766193-3	TANK UNIT
766195-2	TANK UNIT
766-323-1	TANK UNIT
766-324-2	TANK UNIT
766-325-1	TANK UNIT
766-326-1	TANK UNIT
766-327-2	TANK UNIT
766-328-1	TANK UNIT
766-329-1	TANK UNIT
766-330-1	TANK UNIT
766-331-1	TANK UNIT
766-531	TANK UNIT
766-532	TANK UNIT
766608-1	TANK UNIT
768-380	TANK UNIT
768657-1	FUEL PROBE
770-490-1	RELAY,CURRENT

7706-15-A5-1	TRANSMITTER,DIFF.PRE
7707-2-C5-1	TRANSMITTER,PRESSURE
7707-30-D5-1	TRANSMITTER,PRESSURE
7709-15-B5-1	TRANSMITTER,PRESSURE
7709-15-G5-1	TRANSMITTER,PRESSURE
772-5025-001	INDICATOR,HORIZ.SITU
772-5025-002	INDICATOR,HORIZ.SITU
772-5025-004	INDICATOR,HORIZ.SITU
772-5025-006	INDICATOR,HORIZ.SITU
772-5025-008	INDICATOR,HORIZ.SITU
772-5025-009	INDICATOR,HORIZ.SITU
772-5025-010	INDICATOR,HORIZ.SITU
772-5025-011	INDICATOR,HORIZ.SITU
772-5025-012	INDICATOR,HORIZ.SITU
772-5025-013	INDICATOR,HORIZ.SITU
772-5025-014	INDICATOR,HORIZ.SITU
772-5370-003	INDICATOR,COURSE
777-1224-001	INDICATOR,FLIGHT DIR
777-1224-002	INDICATOR,FLIGHT DIR
777-1224-003	INDICATOR,FLIGHT DIR
777-1224-004	INDICATOR,FLIGHT DIR
777-1397-001	INDICATOR,HORIZONTAL
777-1397-002	INDICATOR,HORIZONTAL
777-1397-003	INDICATOR,HORIZONTAL
777-1397-004	INDICATOR,HORIZONTAL
777-1397-008	INDICATOR,HORIZONTAL
777-1397-010	INDICATOR,HORIZONTAL
77B59	INDICATOR,TEMPERATUR
77B8	INDICATOR,TEMPERATUR
780-121-2	SENSOR,CABIN TEMPERA
780-125-1	BOX,TEMPERATURE CONT
780137-3	VALVE,ELECTRO
780137-4	VALVE,ELECTRO
784723-1	VALVE,ELECTRIC GATE
784756-1	PROBE,THERMOSTATIC
786-010-1	PROTECTOR,FUEL VENT
786-010-2	PROTECTOR,FUEL VENT
786-010-3	PROTECTOR,FUEL VENT
786-010-4	PROTECTOR,FUEL VENT
786-010-5	PROTECTOR,FUEL VENT
786-010-6	PROTECTOR,FUEL VENT
786-032-1	PROTECTOR,FUEL VENT
786-052	PROTECTOR,FUEL VENT
786-058	PROTECTOR,FUEL VENT
790-209	TANK UNIT

790-209-1	TANK UNIT
790-210	TANK UNIT
790-210-1	TANK UNIT
790-211	TANK UNIT
790-211-1	TANK UNIT
792366-1	TANK UNIT
792367-2	TANK UNIT
792368-2	TANK UNIT
792370-1	TANK UNIT
792371-1	TANK UNIT
792-6694-001	VERTICAL REFERENCE
792-6694-002	VERTICAL REFERENCE
792794-1	TANK UNIT
792794-2	TANK UNIT
792795-1	TANK UNIT
794-357	TANK UNIT
794-357-1	TANK UNIT
794-358	TANK UNIT
794-358-1	TANK UNIT
794-359	TANK UNIT
794-359-1	TANK UNIT
794-360	TANK UNIT
794-360-1	TANK UNIT
794-361	TANK UNIT
794-361-1	TANK UNIT
794-362	TANK UNIT
794-362-1	TANK UNIT
794-531-2	TANK UNIT
794-532-1	TANK UNIT
794-533-1	TANK UNIT
794-534-1	TANK UNIT
794-535-1	TANK UNIT
794-536-2	TANK UNIT
794-537-2	TANK UNIT
794-538-1	TANK UNIT
794-540-1	TANK UNIT
794-541-2	TANK UNIT
794-542-1	TANK UNIT
794-543-1	TANK UNIT
794-543-2	TANK UNIT
794-544-1	TANK UNIT
794-777	TANK UNIT
794-777-1	TANK UNIT
794-818	TANK UNIT
794-819	TANK UNIT

794-936	TANK UNIT
794-937	TANK UNIT
794-938	TANK UNIT
794-992	TANK UNIT
796-354-1	DETECTOR,ATTITUDE
796-371-2	PRESELECTOR
796-458-2	AMPLIFIER
796-458-3	AMPLIFIER
796-624-1	PRESELECTOR
796815-01-02	PRESELECTOR
796815-02-03	PRESELECTOR
796-815C1-01	PRESELECTOR
798021-01-02	PRESELECTOR
798021-02-03	PRESELECTOR
7G418	SWITCH,PRESSURE
7G612	SWITCH,PRESSURE
7G663	SWITCH,PRESSURE
7G663-1	SWITCH,PRESSURE
7G862	SWITCH,PRESSURE
8022-91	ACTUATOR,ELECTRIC
8059-2B	INDICATOR,AIRSPEED
8107-132-00-10	SENSOR,HYDRAULIC PRE
8107-134-00-12	TRANSMITTER,PRESSURE
811B	CLOCK
82010B030500	CONTROLLER,CABIN PRE
82010B040901	CABIN PRESSURE CONTR
82010C020700	CONTROLLER,CABIN PRE
82010C030800	CONTROLLER,CABIN PRE
82010C050800	CONTROLLER,CABIN PRE
82010C051100	CONTROLLER,CABIN PRE
8-240-02	INDICATOR,PROXIMITY
8260-760	MOTOR,D.C.
83000-05603	WINDOW HEAT CONTROL
83000-05604	WINDOW HEAT CONTROL
83002B0101	INDICATOR,POSITION
83002C0102	INDICATOR,VALVE POSI
832-1	MOTOR,ACTUATOR
83500A0101	GENERATOR,PULSE
8378M1	PUMP,AIR COMPRESSOR
8378M11	PUMP,AIR COMPRESSOR
840B14-11	VALVE,DRAIN
840B20-2	VALVE,BALL
840B20-5	VALVE,BALL
8-527-03	PROXIMITY SWITCH
855A20-2	VALVE,METERING

87000-1111	CLOCK,AIRCRAFT
872TS06Y	ANNUNCIATOR,TRAFFIC
87500-1136	CLOCK,MECHANICAL
87500-1138	CLOCK,MECHANICAL
87500-1140	CLOCK,MECHANICAL
879-2525-006	UNIT,CONTROL
879-2525-007	UNIT,CONTROL
879-2525-012	UNIT,CONTROL
879-2525-013	UNIT,CONTROL
879-2525-014	UNIT,CONTROL
879-2525-015	UNIT,CONTROL
879-2525-016	UNIT,CONTROL
879B14-11	VALVE,FILLER & VENT
879B14-13	VALVE,FILLER & VENT
88000-4102	CLOCK,AIRCRAFT 8 DAY
88000-4103	CLOCK,AIRCRAFT 8 DAY
88000-4104	CLOCK,AIRCRAFT 8 DAY
889-2323-004	UNIT,CONTROL
889-2323-006	UNIT,CONTROL
889-2323-007	UNIT,CONTROL
889-2625-004	UNIT,CONTROL
8920A	VOLTMETER
899-2223-004	CONTROL UNIT DME
899-2223-008	CONTROL UNIT DME
899-2323-004	UNIT,CONTROL
899-2323-006	UNIT,CONTROL
899-2323-008	UNIT,CONTROL
8AW43AAA205	AMMETER,AC
8AW59FAA1	METER,FREQUENCY
8AW59HAH1	METER,WATT/VAR
8AW60LFE1	METER,FREQUENCY
8AW60LFZ1	METER,FREQUENCY
8AW61LAA1	AMMETER,AC
8AW61LAA210	AMMETER,AC
8AW61LAB1	AMMETER,AC
8AW61LAH1	AMMETER,AC
8AW61LAH214	AMMETER,AC
8AW61LAH215	AMMETER,AC
8AW61LAH216	AMMETER,AC
8AW61LAS1	AMMETER,AC
8AW61LAZ1	AMMETER,AC
8AW61LVA1	VOLTMETER,AC
8AW61LVF1	VOLTMETER,AC
8DJ100WAA1	INDICATOR,TEMPERATUR
8DJ100WAA2	INDICATOR,TEMPERATUR

8DJ125LAA2	INDICATOR, FLOWMETER
8DJ125LAA3	INDICATOR, FLOWMETER
8DJ125LAA4	INDICATOR, FLOWMETER
8DJ125LAB2	INDICATOR, FLOWMETER
8DJ125LAB3	INDICATOR, FLOWMETER
8DJ125LAB4	INDICATOR, FLOWMETER
8DJ125LWA1	INDICATOR, FLOWMETER
8DJ125LWB1	INDICATOR, FLOWMETER
8DJ125LWB2	INDICATOR, FLOWMETER
8DJ125LWB3	INDICATOR, FLOWMETER
8DJ125LWB4	INDICATOR, FLOWMETER
8DJ125LWC2	INDICATOR, FLOWMETER
8DJ125LWC3	INDICATOR, FLOWMETER
8DJ125LWC4	INDICATOR, FLOWMETER
8DJ125LWE2	INDICATOR, FLOWMETER
8DJ125LWE3	INDICATOR, FLOWMETER
8DJ125LWE4	INDICATOR, FLOWMETER
8DJ125LWF2	INDICATOR, FLOWMETER
8DJ125LWF3	INDICATOR, FLOWMETER
8DJ125LWF4	INDICATOR, FLOWMETER
8DJ125LWG1	INDICATOR, FLOWMETER
8DJ125LWG2	INDICATOR, FLOWMETER
8DJ125LWG3	INDICATOR, FLOWMETER
8DJ125LWG4	INDICATOR, FLOWMETER
8DJ125LWH1	INDICATOR, FLOWMETER
8DJ125LWH2	INDICATOR, FLOWMETER
8DJ125LWH3	INDICATOR, FLOWMETER
8DJ125LWK3	INDICATOR, FLOWMETER
8DJ125LWR3	INDICATOR, FLOWMETER
8DJ125LWR4	INDICATOR, FLOWMETER
8DJ125LWS3	INDICATOR, FLOWMETER
8DJ125LWS4	INDICATOR, FLOWMETER
8DJ125LWT3	INDICATOR, FLOWMETER
8DJ125LWT4	INDICATOR, FLOWMETER
8DJ125LWV3	INDICATOR, FLOWMETER
8DJ125LWV4	INDICATOR, FLOWMETER
8DJ125LWX3	INDICATOR, FLOWMETER
8DJ125LWX4	INDICATOR, FLOWMETER
8DJ125LWY3	INDICATOR, FLOWMETER
8DJ125LWY4	INDICATOR, FLOWMETER
8DJ125LXB3	INDICATOR, FLOWMETER
8DJ125LXB4	INDICATOR, FLOWMETER
8DJ125LXC3	INDICATOR, FLOWMETER
8DJ125LXC4	INDICATOR, FLOWMETER
8DJ125LXD4	INDICATOR, FLOWMETER

8DJ125LXE4	INDICATOR, FLOWMETER
8DJ125LXF4	INDICATOR, FLOWMETER
8DJ125LXG4	INDICATOR, FLOWMETER
8DJ125LXK3	INDICATOR, FLOWMETER
8DJ125LXK4	INDICATOR, FLOWMETER
8DJ125LXP3	INDICATOR, FLOWMETER
8DJ125LXV5	INDICATOR, FLOWMETER
8DJ125LXW5	INDICATOR, FLOWMETER
8DJ125LXX5	INDICATOR, FLOWMETER
8DJ125LXY5	INDICATOR, FLOWMETER
8DJ130GAR1	INDICATOR, OIL QTY.
8DJ130LAC1	INDICATOR, OIL QTY.
8DJ130LWA1	INDICATOR, OIL QTY.
8DJ130LWM1	INDICATOR, OIL QTY.
8DJ130LWP1	INDICATOR, OIL QTY.
8DJ130LWS1	INDICATOR, OIL QTY.
8DJ130LWT1	INDICATOR, OIL QTY.
8DJ130LWX1	INDICATOR, OIL QTY.
8DJ13LWA1	INDICATOR, TACHOMETER
8DJ143LWA1	INDICATOR, FAN SPEED
8DJ143LWC1	INDICATOR, FAN SPEED
8DJ162LWL2	INDICATOR, TACHOMETER
8DJ162LWM2	INDICATOR, TACHOMETER
8DJ162LWY2	INDICATOR, TACHOMETER
8DJ162LXE2	INDICATOR, TACHOMETER
8DJ162LXF2	INDICATOR, TACHOMETER
8DJ162LXG2	INDICATOR, TACHOMETER
8DJ162LXH2	INDICATOR, TACHOMETER
8DJ162LXK2	INDICATOR, TACHOMETER
8DJ162LXL2	INDICATOR, TACHOMETER
8DJ162LXM2	INDICATOR, TACHOMETER
8DJ162LXN2	INDICATOR, TACHOMETER
8DJ162LXP2	INDICATOR, TACHOMETER
8DJ162LXR2	INDICATOR, TACHOMETER
8DJ162LXT2	INDICATOR, TACHOMETER
8DJ162LXV2	INDICATOR, TACHOMETER
8DJ162LYC2	INDICATOR, TACHOMETER
8DJ162LYD2	INDICATOR, TACHOMETER
8DJ162LYE2	INDICATOR, TACHOMETER
8DJ162LYL2	INDICATOR, TACHOMETER
8DJ162LYM2	INDICATOR, TACHOMETER
8DJ162LYS2	INDICATOR, TACHOMETER
8DJ162LYZ2	INDICATOR, TACHOMETER
8DJ162LZB2	INDICATOR, TACHOMETER
8DJ162LZD2	INDICATOR, TACHOMETER

8DJ162LZE1	INDICATOR,TACHOMETER
8DJ162LZE2	INDICATOR,TACHOMETER
8DJ162LZK2	INDICATOR,TACHOMETER
8DJ162LZL2	INDICATOR,TACHOMETER
8DJ162LZP2	INDICATOR,TACHOMETER
8DJ162LZR2	INDICATOR,TACHOMETER
8DJ162LZT2	INDICATOR,TACHOMETER
8DJ162LZV2	INDICATOR,TACHOMETER
8DJ162LZW2	INDICATOR,TACHOMETER
8DJ162LZX2	INDICATOR,TACHOMETER
8DJ162WAA2	INDICATOR,TACHOMETER
8DJ162WAD2	INDICATOR,TACHOMETER
8DJ163LWT2	INDICATOR,GAS TEMPER
8DJ163LWV2	INDICATOR,GAS TEMPER
8DJ163LWY2	INDICATOR,GAS TEMPER
8DJ163LWY3	INDICATOR,EGT
8DJ163LWY4	INDICATOR,EGT
8DJ163LWZ2	INDICATOR,GAS TEMPER
8DJ163LWZ3	INDICATOR,EGT
8DJ163LXB2	INDICATOR,GAS TEMPER
8DJ163LXB3	INDICATOR,EGT
8DJ163LXB4	INDICATOR,EGT
8DJ163LXC2	INDICATOR,GAS TEMPER
8DJ163LXC3	INDICATOR,EGT
8DJ163LXD2	INDICATOR,GAS TEMPER
8DJ163LXD3	INDICATOR,EGT
8DJ163LXD4	INDICATOR,EGT
8DJ163LXE2	INDICATOR,GAS TEMPER
8DJ163LXE3	INDICATOR,EGT
8DJ163LXE4	INDICATOR,EGT
8DJ163LXF2	INDICATOR,GAS TEMPER
8DJ163LXF3	INDICATOR,EGT
8DJ163LXF4	INDICATOR,EGT
8DJ163LXG2	INDICATOR,GAS TEMPER
8DJ163LXG3	INDICATOR,EGT
8DJ163LXG4	INDICATOR,EGT
8DJ163LXH4	INDICATOR,GAS TEMPER
8DJ163LXP4	INDICATOR,GAS TEMPER
8DJ163LXR4	INDICATOR,GAS TEMPER
8DJ163LXZ4	INDICATOR,GAS TEMPER
8DJ163LYA4	INDICATOR,GAS TEMPER
8DJ163LYC4	INDICATOR,GAS TEMPER
8DJ163LYD4	INDICATOR,GAS TEMPER
8DJ163LYH4	INDICATOR,GAS TEMPER
8DJ163LYK4	INDICATOR,GAS TEMPER

8DJ163LYL4	INDICATOR,GAS TEMPER
8DJ163LYN4	INDICATOR,EGT
8DJ163LYP4	INDICATOR,GAS TEMPER
8DJ163LYR4	INDICATOR,GAS TEMPER
8DJ163LYS4	INDICATOR,GAS TEMPER
8DJ163LYT4	INDICATOR,EGT
8DJ163LYV4	INDICATOR,GAS TEMPER
8DJ163LYW4	INDICATOR,GAS TEMPER
8DJ163LYX4	INDICATOR,GAS TEMPER
8DJ163LYY4	INDICATOR,GAS TEMPER
8DJ163LYZ4	INDICATOR,EGT
8DJ164LWA2	INDICATOR,FUEL FLOW
8DJ164LWG2	INDICATOR,FUEL FLOW
8DJ164LWM2	INDICATOR,FUEL FLOW
8DJ164LWN2	INDICATOR,FUEL FLOW
8DJ164LWP2	INDICATOR,FUEL FLOW
8DJ164LWR2	INDICATOR,FUEL FLOW
8DJ164LWS2	INDICATOR,FUEL FLOW
8DJ164LWT2	INDICATOR,FUEL FLOW
8DJ164LWT3	INDICATOR,FUEL FLOW
8DJ164LWV2	INDICATOR,FUEL FLOW
8DJ164LWX2	INDICATOR,FUEL FLOW
8DJ164LWX3	INDICATOR,FUEL FLOW
8DJ170LWA1	INDICATOR,FUEL FLOW
8DJ170LWG1	INDICATOR,FUEL FLOW
8DJ171LWA2	INDICATOR,FUEL CONSU
8DJ171LWA3	INDICATOR,FUEL CONSU
8DJ171LWD2	INDICATOR,FUEL CONSU
8DJ171LWD3	INDICATOR,FUEL CONSU
8DJ172LWA1	INDICATOR,OIL QTY
8DJ172LWD1	INDICATOR,OIL QTY
8DJ172LWE1	INDICATOR,OIL QTY
8DJ172LWK1	INDICATOR,OIL QTY
8DJ172LWL1	INDICATOR,OIL QTY
8DJ172LWP1	INDICATOR,OIL QTY
8DJ172LWR1	INDICATOR,OIL QTY
8DJ172LWY1	INDICATOR,OIL QTY
8DJ173LWA1	INDICATOR, OIL QUANT
8DJ173LWC1	INDICATOR, OIL QUANT
8DJ173LWD1	INDICATOR, OIL QUANT
8DJ173LWE1	INDICATOR, OIL QUANT
8DJ173LWF1	INDICATOR,OIL QTY
8DJ173LWG1	INDICATOR,OIL QTY
8DJ173LWH1	INDICATOR,OIL QTY
8DJ173LWN1	INDICATOR,OIL QTY

8DJ173LWP1	INDICATOR,OIL QTY
8DJ173LWR1	INDICATOR,OIL QTY
8DJ174LWA1	INDICATOR,EPR
8DJ174LWM1	INDICATOR,EPR
8DJ174LWP1	INDICATOR,EPR
8DJ175LWK2	INDICATOR,EGT
8DJ175LWK2-T	INDICATOR,EGT
8DJ175LWL1	INDICATOR,EGT
8DJ175LWM2	INDICATOR,EGT
8DJ175LWP2	INDICATOR,EGT
8DJ175LWR1	INDICATOR,EGT
8DJ175LWS2	INDICATOR,EGT
8DJ175LWT2	INDICATOR,EGT
8DJ175LWX1	INDICATOR,EGT
8DJ175LXA1	INDICATOR,EGT
8DJ175LXB2	INDICATOR,EGT
8DJ175LXF2	INDICATOR,EGT
8DJ175LXG2	INDICATOR,EGT
8DJ175LXH1	INDICATOR,EGT
8DJ175LXK1	INDICATOR,EGT
8DJ175LXN2	INDICATOR,EGT
8DJ175LXP2	INDICATOR,EGT
8DJ175LXR2	INDICATOR,EGT
8DJ175LXS2	INDICATOR,EGT
8DJ175LXT1	INDICATOR,EGT
8DJ175LXV1	INDICATOR,EGT
8DJ176LWA1	INDICATOR,ENGINE SPE
8DJ176LWB1	INDICATOR,ENGINE SPE
8DJ176LWG2	INDICATOR,ENG.CORE S
8DJ176LWR2	INDICATOR,ENG.FAN SP
8DJ176LWS2	INDICATOR,ENG.FAN SP
8DJ176LWT2	INDICATOR,ENG.FAN SP
8DJ176LWV2	INDICATOR,ENG.CORE S
8DJ176LWX1	INDICATOR,ENGINE SPE
8DJ176LWY1	INDICATOR,ENGINE SPE
8DJ176LWZ2	INDICATOR,ENG.FAN SP
8DJ176LXA1	INDICATOR,ENGINE SPE
8DJ176LXE1	INDICATOR,ENGINE SPE
8DJ176LXEY1	INDICATOR,ENGINE SPE
8DJ176LXG1	INDICATOR,ENGINE SPE
8DJ176LXH1	INDICATOR,ENGINE SPE
8DJ176LXK1	INDICATOR,ENGINE SPE
8DJ176LXL1	INDICATOR,ENGINE SPE
8DJ176LXN1	INDICATOR,ENGINE SPE
8DJ176LXS1	INDICATOR,ENGINE SPE

8DJ176LXT1	INDICATOR,ENGINE SPE
8DJ176LXV1	INDICATOR,ENGINE SPE
8DJ176LXW1	INDICATOR,ENGINE SPE
8DJ176LXZ1	INDICATOR,N2 TACHOME
8DJ176LZA3	INDICATOR,ENG.CORE S
8DJ176LZB1	INDICATOR,ENGINE SPE
8DJ176LZC1	INDICATOR,ENGINE SPE
8DJ176LZD2	INDICATOR,ENG.FAN SP
8DJ176LZF2	INDICATOR,ENG.CORE S
8DJ176LZK2	INDICATOR,ENG.FAN SP
8DJ176LZN2	INDICATOR,ENG.FAN SP
8DJ176LZP1	INDICATOR,ENGINE SPE
8DJ176LZR1	INDICATOR,ENGINE SPE
8DJ176LZS2	INDICATOR,ENG.CORE S
8DJ176LZT2	INDICATOR,ENG.FAN SP
8DJ176LZV3	INDICATOR,ENG.CORE S
8DJ176LZX2	INDICATOR,TACHOMETER
8DJ176LZY1	INDICATOR,ENGINE SPE
8DJ176LZZ1	INDICATOR,ENGINE SPE
8DJ176WAC2	INDICATOR,TACHOMETER
8DJ176WAD1	INDICATOR,N1 TACHOME
8DJ176WAE1	INDICATOR,N3 TACHOME
8DJ176WAH3	INDICATOR,ENG.CORE S
8DJ176WAK3	INDICATOR,ENG.CORE S
8DJ176WAP2	INDICATOR,ENG.FAN SP
8DJ176WAR2	INDICATOR,ENG.CORE S
8DJ176WAV1	INDICATOR,N3 TACHOME
8DJ176WAZ2	INDICATOR,N1 TACHOME
8DJ176WBF1	INDICATOR,N2 TACHOME
8DJ176WBG1	INDICATOR,N1 TACHOME
8DJ176WBH1	INDICATOR,N3 TACHOME
8DJ176WBN1	INDICATOR,N3 TACHOME
8DJ176WBP1	INDICATOR,N3 TACHOME
8DJ176WBR1	INDICATOR,N2 TACHOME
8DJ177LWA1	INDICATOR,TEMPERATUR
8DJ177LWC1	INDICATOR,TEMPERATUR
8DJ177LWN1	INDICATOR,FUEL TEMP.
8DJ177LWP1	INDICATOR,OIL TEMP.
8DJ177LWR1	INDICATOR,OIL TEMP.
8DJ177LWS1	INDICATOR,OIL TEMP.
8DJ177LWV1	INDICATOR,OIL TEMP.
8DJ177LWW1	INDICATOR,OIL TEMP.
8DJ177LWX1	INDICATOR,OIL TEMP.
8DJ179WAD1	INDICATOR,TEMPERATUR
8DJ179WAD4	INDICATOR,TEMPERATUR

8DJ185LWB1	INDICATOR,EGT
8DJ185LWC1	INDICATOR,EGT
8DJ185LWE1	INDICATOR,TGT
8DJ185LWEY1	INDICATOR,TGT
8DJ185LWF1	INDICATOR,TGT
8DJ185LWFY1	INDICATOR,TGT
8DJ185LWG1	INDICATOR,TGT
8DJ185LWH1	INDICATOR,TGT
8DJ185LWL1	INDICATOR,TGT
8DJ185LWM1	INDICATOR,EGT
8DJ185LWN1	INDICATOR,TGT
8DJ185LWP1	INDICATOR,TGT
8DJ185LWR1	INDICATOR,EGT
8DJ185LWT1	INDICATOR,TGT
8DJ185LWV1	INDICATOR,TGT
8DJ185WAA1	INDICATOR,EGT
8DJ186LWC1	INDICATOR,N1 TACHOME
8DJ186LWD1	INDICATOR,N1 TACHOME
8DJ186LWE1	INDICATOR,N1 TACHOME
8DJ186LWF1	INDICATOR,N1 ENGINE
8DJ186LWG1	INDICATOR,N1 ENGINE
8DJ186LWH1	INDICATOR,N1 ENGINE
8DJ186LWK1	INDICATOR,N1 ENGINE
8DJ186LWL1	INDICATOR,N1 ENGINE
8DJ186LWM1	INDICATOR,N1 ENGINE
8DJ186LWN1	INDICATOR,N1 ENGINE
8DJ186LWS1	INDICATOR,N1 ENGINE
8DJ186LWT1	INDICATOR,N1 ENGINE
8DJ186LWV1	INDICATOR,N1 TACHOME
8DJ186LWW1	INDICATOR,N1 ENGINE
8DJ186LWZ1	INDICATOR,N1 ENGINE
8DJ186LXA1	INDICATOR,N1 ENGINE
8DJ186LXB1	INDICATOR,N1 ENGINE
8DJ186LXC1	INDICATOR,N1 ENGINE
8DJ186LXD1	INDICATOR,N1 ENGINE
8DJ215WAT1	INDICATOR,N2 ROTOR S
8DJ215WAT1A	INDICATOR,N2 ROTOR S
8DJ215WAT1C	INDICATOR,N2 ROTOR S
8DJ215WBT1	INDICATOR,APU TACHOM
8DJ225WAB1	INDICATOR,FLAP POSIT
8DJ225WAD2	INDICATOR,FLAP POSIT
8DJ225WAE2	INDICATOR,FLAP POSIT
8DJ225WAJ2	INDICATOR,FLAP POSIT
8DJ276WAB1	INDICATOR,EPR
8DJ278WAC1	INDICATOR,N1 ENGINE

8DJ278WAC1A	INDICATOR,N1 ENGINE
8DJ315WAC1	INDICATOR,FUEL FLOW
8DJ324WAC1	INDICATOR,N1 FAN SPE
8DJ324WAE1	INDICATOR,N2 CORE SP
8DJ324WAG1	INDICATOR,N2 CORE SP
8DJ48FAL1	INDICATOR,FLAP POSIT
8DJ48FAL2	INDICATOR,FLAP POSIT
8DJ48FAR2	INDICATOR,POSITION
8DJ48FBV2	INDICATOR,FLAP POSIT
8DJ49GAW2	INDICATOR,POSITION
8DJ49GAY2	INDICATOR,POSITION
8DJ49GBV2	INDICATOR,POSITION
8DJ49GER2	INDICATOR,POSITION
8DJ49GET2	INDICATOR,POSITION
8DJ64GAA1	INDICATOR,FUEL FLOW
8DJ64GAF1	INDICATOR,FUEL FLOW
8DJ64GAN1	INDICATOR,FUEL FLOW
8DJ64GBC1	INDICATOR,FUEL FLOW
8DJ64GBH1	INDICATOR,FUEL FLOW
8DJ71GAB1	INDICATOR,FUEL FLOW
8DJ72GAB1	INDICATOR,FUEL SUMMA
8DJ77LAC1	INDICATOR,FUEL FLOW
8DJ77LAC2	INDICATOR,FUEL FLOW
8DJ77LAE1	INDICATOR,FUEL FLOW
8DJ77LAE2	INDICATOR,FUEL FLOW
8DJ77LAF1	INDICATOR,FUEL FLOW
8DJ77LAF2	INDICATOR,FUEL FLOW
8DJ77LWB2	INDICATOR,FUEL FLOW
8DJ77LWC	INDICATOR,FUEL FLOW
8DJ77LWE2	INDICATOR,FUEL FLOW
8DJ77LWF2	INDICATOR,FUEL FLOW
8DJ77LWH2	INDICATOR,FUEL FLOW
8DJ77LWK2	INDICATOR,FUEL FLOW
8DJ81CAA1	INDICATOR,TACHOMETER
8DJ81CAA2	INDICATOR,TACHOMETER
8DJ81CAA4	INDICATOR,TACHOMETER
8DJ81CAN4	INDICATOR,TACHOMETER
8DJ81CBD1	INDICATOR,TACHOMETER
8DJ81CBD4	INDICATOR,TACHOMETER
8DJ81LAD1	INDICATOR,TACHOMETER
8DJ81LAD2	INDICATOR,TACHOMETER
8DJ81LAE1	INDICATOR,TACHOMETER
8DJ81LAE2	INDICATOR,TACHOMETER
8DJ81LAK1	INDICATOR,TACHOMETER
8DJ81LAK2	INDICATOR,TACHOMETER

8DJ81LBC2	INDICATOR,TACHOMETER
8DJ81LBD2	INDICATOR,TACHOMETER
8DJ81LBE2	INDICATOR,TACHOMETER
8DJ81LBF2	INDICATOR,TACHOMETER
8DJ81LBS2	INDICATOR,TACHOMETER
8DJ81LBX2	INDICATOR,TACHOMETER
8DJ81LCB2	INDICATOR,TACHOMETER
8DJ81LSC4	INDICATOR,N2 TACHOME
8DJ81LSC4U	INDICATOR,N2 TACHOME
8DJ81LVB4	INDICATOR,TACHOMETER
8DJ81LVB4U	INDICATOR,TACHOMETER
8DJ81LVL4	INDICATOR,TACHOMETER
8DJ81LVL4U	INDICATOR,TACHOMETER
8DJ81LWC2	INDICATOR,TACHOMETER
8DJ81LWC4	INDICATOR,TACHOMETER
8DJ81LWM2	INDICATOR,TACHOMETER
8DJ81LWM2U	INDICATOR,TACHOMETER
8DJ81LWN2	INDICATOR,TACHOMETER
8DJ81LWR2	INDICATOR,TACHOMETER
8DJ81LWR4	INDICATOR,TACHOMETER
8DJ81LWS2	INDICATOR,TACHOMETER
8DJ81LWS4	INDICATOR,TACHOMETER
8DJ81LWT2	INDICATOR,TACHOMETER
8DJ81LWT4	INDICATOR,TACHOMETER
8DJ81LWT4U	INDICATOR,TACHOMETER
8DJ81LWV2	INDICATOR,TACHOMETER
8DJ81LWY2	INDICATOR,TACHOMETER
8DJ81LWY4	INDICATOR,TACHOMETER
8DJ81LWZ2	INDICATOR,TACHOMETER
8DJ81LWZ4	INDICATOR,TACHOMETER
8DJ81LXC2	INDICATOR,TACHOMETER
8DJ81LXD2	INDICATOR,TACHOMETER
8DJ81LXE2	INDICATOR,TACHOMETER
8DJ81LXF2	INDICATOR,TACHOMETER
8DJ81LXF4	INDICATOR,TACHOMETER
8DJ81LXF4U	INDICATOR,TACHOMETER
8DJ81LXG2	INDICATOR,TACHOMETER
8DJ81LXG4	INDICATOR,N1 TACHOME
8DJ81LXG4U	INDICATOR,N1 TACHOME
8DJ81LXH2	INDICATOR,TACHOMETER
8DJ81LXH4	INDICATOR,N2 TACHOME
8DJ81LXH4U	INDICATOR,N2 TACHOME
8DJ81LXK2	INDICATOR,TACHOMETER
8DJ81LXK4	INDICATOR,TACHOMETER
8DJ81LXP2	INDICATOR,TACHOMETER

8DJ81LYT2	INDICATOR,TACHOMETER
8DJ81LYT4	INDICATOR,TACHOMETER
8DJ81LYT4U	INDICATOR,TACHOMETER
8DJ81LYV2	INDICATOR,TACHOMETER
8DJ81LYV4	INDICATOR,TACHOMETER
8DJ81LYV4U	INDICATOR,TACHOMETER
8DJ81LYW2	INDICATOR,TACHOMETER
8DJ81LZC2	INDICATOR,TACHOMETER
8DJ81LZC4	INDICATOR,TACHOMETER
8DJ81WAG2	INDICATOR,TACHOMETER
8DJ81WAG4	INDICATOR,TACHOMETER
8DJ81WAG4U	INDICATOR,TACHOMETER
8DJ81WAL4	INDICATOR,TACHOMETER
8DJ81WBF4	INDICATOR,N2 TACHOME
8DJ81WBF4U	INDICATOR,N2 TACHOME
8DJ81WBG4	INDICATOR,N2 TACHOME
8DJ81WBG4U	INDICATOR,N2 TACHOME
8DJ81WCF4	INDICATOR,TACHOMETER
8DJ81WCF4U	INDICATOR,TACHOMETER
8DJ81WCG4	INDICATOR,TACHOMETER
8DJ81WCG4U	INDICATOR,TACHOMETER
8DJ81WCT4	INDICATOR,N2 TACHOME
8DJ81WCT4U	INDICATOR,N2 TACHOME
8DJ81WCW4	INDICATOR,N1 TACHOME
8DJ81WCW4U	INDICATOR,N1 TACHOME
8DJ86LAA1	INDICATOR,FUEL FLOW
8DJ86LAH1	INDICATOR,FUEL FLOW
8DJ88GAC1	INDICATOR,FUEL FLOW
8DJ88LAB1	INDICATOR,FUEL FLOW
8DJ88LAB2	INDICATOR,FUEL FLOW
8DJ88LAB3	INDICATOR,FUEL FLOW
8DJ88LWB1	INDICATOR,FUEL FLOW
8DJ88LWC2	INDICATOR,FUEL FLOW
8DJ88LWC3	INDICATOR,FUEL FLOW
8DJ88LWD2	INDICATOR,FUEL FLOW
8DJ88LWD3	INDICATOR,FUEL FLOW
8DJ88LWE3	INDICATOR,FUEL FLOW
8DJ88LWF1	INDICATOR,FUEL FLOW
8DJ88LWF2	INDICATOR,FUEL FLOW
8DJ88LWF3	INDICATOR,FUEL FLOW
8DJ88LWH3	INDICATOR,FUEL FLOW
8DJ88LWM3	INDICATOR,FUEL FLOW
8DJ88LWN3	INDICATOR,FUEL FLOW
8DJ88LWS3	INDICATOR,FUEL FLOW
8DJ88LWX3	INDICATOR,FUEL FLOW

8DJ88LWY3	INDICATOR,FUEL FLOW
8DJ91LAA1	INDICATOR,POSITION
8DJ91LAD1	INDICATOR,POSITION
8DJ91LAK1	INDICATOR,POSITION
8DJ91LWD1	INDICATOR,POSITION
8DJ96LAD1	INDICATOR,FUEL FLOW
8DJ98AAA1	INDICATOR,TEMPERATUR
8DJ98AAC1	INDICATOR,TEMPERATUR
8DW84A1AA1	AMMETER,DC
8DW84A2AA1	AMMETER,DC
8DW84A4AA1	AMMETER,DC
8DW84LAA1	AMMETER,DC
8DW84LAA210	AMMETER,DC
8DW84LAA215	AMMETER,DC
8DW84LAA216	AMMETER,DC
8DW84LAC1	AMMETER,DC
8DW84LAC211	AMMETER,DC
8DW84LAN1	AMMETER,DC ANTI-ICE
8DW84LAT1	AMMETER,DC
8DW84LAY60	VOLTMETER,DC
8DW84LBA1	VOLTMETER,DC
8DW84LVA1	VOLTMETER,DC
8DW84LVA218	VOLTMETER,DC
8DW84LVA221	VOLTMETER,DC
8DW84LVD211	VOLTMETER,DC
8DW84LVZ1	VOLTMETER,DC
8DW84V1AA1	VOLTMETER,DC
8DW84V3AA1	VOLTMETER,DC
8ES003761-00	BOX,ENERGY
8ES003761-00M00	BOX,ENERGY
8ES003761-00M01	BOX,ENERGY
8ES003974-00	BOX,ENERGY
8ES003974-00M00	BOX,ENERGY
8ES455011-00	POWER SUPPLY
8G1126-1	SWITCH,PRESSURE
8G1126-2	SWITCH,PRESSURE
8G1199-1	SWITCH,PRESSURE
8G1199-2	SWITCH,PRESSURE
8G1256	SWITCH,PRESSURE
8G1256-1	SWITCH,PRESSURE
8G1259	SWITCH,PRESSURE
8G1340	SWITCH,PRESSURE
8G1340-1	SWITCH,PRESSURE
8G921	SWITCH,PRESSURE
8G921-1	SWITCH,PRESSURE

8G921-2	SWITCH,PRESSURE
8TJ146AAP1	OIL LEVEL TRANSMITTE
8TJ51GAA1	POWER SUPPLY
8TJ51GAA2	POWER SUPPLY
8TJ51GAA4	POWER SUPPLY
8TJ51GBB5	POWER SUPPLY
8TJ80GAA1	POWER SUPPLY
8TJ80GAA2	POWER SUPPLY
8TJ88GAC1	POWER SUPPLY
8TJ88GAF1	POWER SUPPLY
8TJ88GAN1	POWER SUPPLY
8TJ88GAN3	POWER SUPPLY
8TJ88GAN4	POWER SUPPLY
8TJ88GAP1	POWER SUPPLY
8TJ88GAP3	POWER SUPPLY
8TJ88GAP4	POWER SUPPLY
8TJ88GAR1	POWER SUPPLY
8TJ88GAR1A	POWER SUPPLY
8TJ88GAT1	POWER SUPPLY
8TJ88GBN1	POWER SUPPLY
8TJ88GBN3	POWER SUPPLY
8TJ92GAA2	TRANSMITTER,LIQUID Q
8TJ92GAD2	TRANSMITTER,LIQUID Q
8TJ95GAA1	POWER SUPPLY,FLOWMET
8TJ95GAA2	POWER SUPPLY,FLOWMET
8TJ95GAA3	POWER SUPPLY,FLOWMET
8TJ95GAA4	POWER SUPPLY,FLOWMET
8TJ95GAB1	POWER SUPPLY,FLOWMET
8TJ95GAB2	POWER SUPPLY,FLOWMET
8TJ95GAB2A	POWER SUPPLY,FLOWMET
8TJ95GAB3	POWER SUPPLY,FLOWMET
8TJ95GAB4	POWER SUPPLY,FLOWMET
8TJ95GAC4	POWER SUPPLY,FLOWMET
8TJ99GAF1	TRANSMITTER,LIQUID L
8TJ99GAF2	TRANSMITTER,LIQUID L
8TJ99GAT1	TRANSMITTER,LIQUID L
8TJ99GAT2	TRANSMITTER,LIQUID L
8TJ99GBH1	TRANSMITTER,LIQUID L
8TJ99GBU2	TRANSMITTER,LIQUID L
8TJ99GGB3	TRANSMITTER,LIQUID L
8TJ99GGB4	TRANSMITTER,OIL QTY.
8TJ99GGE1	TRANSMITTER,LIQUID L
90050-3	PANEL,FAILURE WARNIN
90050-4	PANEL,FAILURE WARNIN
90200-1	PANEL,FAILURE WARNIN

90200-2	PANEL,FAILURE WARNIN
90300-4	PANEL,WARNING
90350-1	PANEL,FIRE
9070-13	CONDITIONER,FREQUENC
90G196-1	SWITCH,PRESSURE
90G196-2	SWITCH,PRESSURE
90G198	SWITCH,PRESSURE
90G198-1	SWITCH,PRESSURE
90G221	SWITCH,PRESSURE
90G229	SWITCH,PRESSURE
910N-6D2	PUMP,CARGO DOOR HAND
9-116-01	INDICATOR,FUEL USED
9-116-02	INDICATOR,FUEL USED
9-118-03	INDICATOR,FUEL FLOW
9-118-04	INDICATOR,FUEL FLOW
9-118-14	INDICATOR,FUEL FLOW
9-118-15	INDICATOR,FUEL FLOW
9-118-29	INDICATOR,FUEL FLOW
911A0301	BOX,MANUAL PRESS.CON
912A0101	REGULATOR,PRESSURE
912K0101	REGULATOR,PRESSURE
914A01	VALVE,DUAL
9150F03	ACTUATOR
9150F0301	ACTUATOR
919ZEQ4	VALVE,3 WAY
929ZEQ3	VALVE,SHUT-OFF
9-328-01	INDICATOR,FUEL FLOW
9-328-13	INDICATOR,FUEL FLOW
941AZEQ7	VALVE,BY-PASS
941C0107Z	VALVE,BY-PASS
941G0127	VALVE,BY-PASS
9457-1	MOTOR,ACTUATOR
9-464-14	INDICATOR,FUEL FLOW
9-464-30	INDICATOR,FUEL FLOW
946A030101	VALVE,ANTI-ICING
9542653-1	UNIT,WHEEL DRIVEN
9542654-2	BOX,ANTI-SKID CONTRO
9542654-3	BOX,ANTI-SKID CONTRO
9542654MR	BOX,ANTI-SKID CONTRO
9542654MR1	BOX,ANTI-SKID CONTRO
9542732-2	VALVE,ANTI-SKID CONT
958-1	PANEL,FIRE WARNING
958-11	PANEL,FIRE WARNING
958-12	PANEL,FIRE WARNING
958-121	PANEL,FIRE WARNING

9601-02-04	XMITTER,FLAP HANDLE
9601-02-06	TRANSMITTER,FLAP POS
9601-02-08	TRANSMITTER,FLAP POS
9601-02-10	XMITTER,FLAP HANDLE
9601-02-11	XMITTER,FLAP HANDLE
9601-02-12	TRANSMITTER,FLAP POS
9601-02-13	TRANSMITTER,FLAP POS
9601-02-14	TRANSMITTER,FLAP POS
973-1	PANEL,LG POS.INDICAT
973-2	PANEL,LG POS.INDICAT
973-3	PANEL,LG POS.INDICAT
9807-47	INDICATOR,HYD.OIL QT
980N-1	ALTIMETER TEST SET
9817-01	INDICATOR,TEMPERATUR
983-2	PANEL,DEVICE INDICAT
98505-44147	SWITCH,ABS.PRESSURE
985C63-21	VALVE,PRESSURE RELIE
993E	MOTOR,ELECTRIC
999-3	PANEL,FAILURE WARNIN
999-5	PANEL,FAILURE WARNIN
999-6	PANEL,FAILURE WARNIN
9A375	INDICATOR,EGT
9A400	INDICATOR,EGT
A100-24208	VALVE,NON-RETURN
A100-24210	VALVE,CHECK
A100-24212	VALVE,CHECK
A100-24239-3	UPLOCK
A100-24239-3V1	UPLOCK
A100-24239-3V1A	UPLOCK
A100-24239M1	UPLOCK
A100-24239M1A	UPLOCK
A100-24239M1V1	UPLOCK
A100-24239M1V1A	UPLOCK
A100-24239M2	UPLOCK
A100-24239M2V1	UPLOCK
A100-24239M2V1A	UPLOCK
A100-24244	FILTER
A100-24244M1	FILTER
A100-24371	VALVE,2 POS.SELECTOR
A100-24451	VALVE,SOLENOID
A100-24451M1	VALVE,SOLENOID
A100-24451M1V1	VALVE,SOLENOID
A100-24451V1	VALVE,SOLENOID
A100-24638	RESERVOIR,BRAKE FLUI
A100-24653M1	TRANSMITTER,BRAKE PR

A100-24661	VALVE,3 POS.SELECTOR
A100-24661V1	VALVE,3 POS.SELECTOR
A100X24239	UPLOCK
A100X24661	VALVE,3 POS.SELECTOR
A101-24239-3	UPLOCK
A101-24239-3V1	UPLOCK
A101-24239-3V1A	UPLOCK
A101-24239M1	UPLOCK
A101-24239M1A	UPLOCK
A101-24239M1V1	UPLOCK
A101-24239M1V1A	UPLOCK
A101-24239M2	UPLOCK
A101-24239M2V1	UPLOCK
A101-24239M2V1A	UPLOCK
A102-24654-4	VALVE,RELAY
A102-24654M1	VALVE,RELAY
A102-24654M2	VALVE,RELAY
A102-24654M3	VALVE,RELAY
A103-24654-4	VALVE,RELAY
A103-24654M1	VALVE,RELAY
A103-24654M2	VALVE,RELAY
A103-24654M3	VALVE,RELAY
A104-24654	VALVE,RELAY
A105-24654	VALVE,RELAY
A108-24654	VALVE,RELAY
A108-24654-2	VALVE,RELAY
A108-24654M1	VALVE,RELAY
A109-24654	VALVE,RELAY
A109-24654-2	VALVE,RELAY
A109-24654M1	VALVE,RELAY
A110-24206	VALVE,CHECK
A110-24208	VALVE,CHECK
A110-24212	VALVE,CHECK
A110-24654	VALVE,RELAY
A110-24654-1	VALVE,RELAY
A111-24654	VALVE,RELAY
A111-24654-1	VALVE,RELAY
A1-23801-2	SWITCH,SELECTOR
A1-23801-2V1V2	SWITCH,SELECTOR
A1-23801M1	SWITCH,SELECTOR
A1-23801M1V1V2	SWITCH,SELECTOR
A1-23801V1V2	SWITCH,SELECTOR
A1-23802-2	SWITCH,SELECTOR
A1-23802M1	SWITCH,SELECTOR
A1-23870	SWITCH,SELECTOR

A1-23870-2	SWITCH,SELECTOR
A1-23870-M1	SWITCH,SELECTOR
A1600	INDICATOR,TURN & SLI
A1605	INDICATOR,TURN & SLI
A2-23801-2	SWITCH,SELECTOR
A2-23801M1	SWITCH,SELECTOR
A2-23802-2	SWITCH,SELECTOR
A23732-104	RH AIRBRAKE ACT.
A23801-101	SWITCH,SELECTOR
A23801-102	SWITCH,SELECTOR
A23801-103	SWITCH,SELECTOR
A23801-105	SWITCH,SELECTOR
A23802-101	SWITCH,SELECTOR
A23802-102	SWITCH,SELECTOR
A23802-103	SWITCH,SELECTOR
A23802-104	SWITCH,SELECTOR
A23802-105	SWITCH,SELECTOR
A23870-101	SWITCH,SELECTOR
A23870-102	SWITCH,SELECTOR
A24239-107	UNIT,UPLOCK
A24239-108	UNIT,UPLOCK
A-2X23801M1	SWITCH,SELECTOR
A2X23801V1V2M1	SWITCH,SELECTOR
A-2X23802-2	SWITCH,SELECTOR
A3090	INDICATOR,VERTICAL S
A3-23801	SWITCH,SELECTOR
A3-23801-2	SWITCH,SELECTOR
A3-23801M1	SWITCH,SELECTOR
A3-23801M1-2V1V2	SWITCH,SELECTOR
A3-23801M1A	SWITCH,SELECTOR
A3-23801M1V1V2	SWITCH,SELECTOR
A3-23801V1V2	SWITCH,SELECTOR
A3-23802	SWITCH,SELECTOR
A3-23802-2	SWITCH,SELECTOR
A3-23802M1	SWITCH,SELECTOR
A32437-10-001	INDICATOR,TACHOMETER
A32437-10-021	INDICATOR,TACHOMETER
A-3X23801	SWITCH,SELECTOR
A-3X23801M1	SWITCH,SELECTOR
A4-23802-2	SWITCH,SELECTOR
A4-23802M1	SWITCH,SELECTOR
A5015-24506	VALVE,RESTRICTOR
A5020-24506	VALVE,RESTRICTOR
A5020-24508	VALVE,NON-RETURN
A5030-24506	VALVE,RESTRICTOR

A5030-24506-1	VALVE,RESTRICTOR
A5040-24506	VALVE,RESTRICTOR
A5040-24506-1	VALVE,RESTRICTOR
A5040-24510	VALVE,RESTRICTOR
A5050-24806-1	VALVE,RESTRICTOR
A5060-24506	VALVE,RESTRICTOR
A5060-24506-1	VALVE,RESTRICTOR
A5060-24506-2	VALVE,RESTRICTOR
A5060-24506-3	VALVE,RESTRICTOR
A5060-24508	VALVE,RESTRICTOR
A5070-24506	VALVE,RESTRICTOR
A5070-24506-1	VALVE,RESTRICTOR
A5070-24806	VALVE,RESTRICTOR
A5070-24806-1	VALVE,RESTRICTOR
A5080-24508	VALVE,RESTRICTOR
A5080-24508-1	VALVE,RESTRICTOR
A5080-24806-1	VALVE,RESTRICTOR
A5090-24506	VALVE,RESTRICTOR
A5120-24506	VALVE,RESTRICTOR
A5120-24806	VALVE,RESTRICTOR
A5120-24806-1	VALVE,RESTRICTOR
A5140-24506	VALVE,RESTRICTOR
A5140-24508	VALVE,RESTRICTOR
A5150-24506	VALVE,RESTRICTOR
A5-23801-2	SWITCH,SELECTOR
A5-23801M1	SWITCH,SELECTOR
A5-23802-2	SWITCH,SELECTOR
A5-23802V2	SWITCH,SELECTOR
A5-23802V2-2	SWITCH,SELECTOR
A80-AAU-8/A	ALTIMETER,PRESSURE
A80-AAU-8A/A	ALTIMETER,PRESSURE
A80MA	ALTIMETER,PRESSURE
A80MA1	ALTIMETER,PRESSURE
A9542732	VALVE,ANTI-SKID CONT
A9542732-2	VALVE,ANTI-SKID CONT
AF200	INDICATOR,CABIN PRES
AF200A	INDICATOR,CABIN PRES
AF200AW	INDICATOR,CABIN PRES
AG1010AA02	BEACON,ANTI-COLLISIO
AG1010AA03	BEACON,ANTI-COLLISIO
AG1012AA03	CONTROL,RECOGNITION
AG1027AA01	LIGHT,RECOGNITION
AG1027AA05	LIGHT,RECOGNITION
AM2210A	AMPLIFIER,MIXING
AN3203V30	VOLTMETER,DC

AP2034C	AMPLIFIER,PUBLIC ADD
AR3-60000-150B	ACTUATOR,ROTARY
AU27A	ALTIMETER,PRESSURE
AV12-55-5-0600-30	REGULATOR,WINDSHIELD
AV12-55-8-0600-30	REGULATOR,WINDSHIELD
AV31-1	ACTUATOR
AV-31-1	ACTUATOR
AW-1-7/8-14	INDICATOR,OIL PRESSU
AW-1-7/8-14EL	INDICATOR,BLEED AIR
AW1821AC02	INDICATOR,DIFF.PRESS
AW2017AC01	INDICATOR,HYD.PRESSU
AW-2-17-A	INDICATOR,HYD.PRESSU
AW-2-17-A-13	INDICATOR,HYD.PRESSU
AW-2-17-A-15	INDICATOR,HYD.PRESSU
AW-2-17-G	INDICATOR,HYD.PRESSU
AW2835AE01	INDICATOR,ALT/DIFF.P
AW2835AE02	INDICATOR,ALT/DIFF.P
AW2835AF01	INDICATOR,ALT/DIFF.P
AW2835AF01-M1	INDICATOR,ALT/DIFF.P
AW2835AH01	INDICATOR,ALT/DIFF.P
AYLF50425	SENSOR,DUCT TEMPERAT
B0001-81103	ALTIMETER
B0090-81105	ALTIMETER
B0200-81104	INDICATOR,AIRSPEED M
B0200-81105	INDICATOR,AIRSPEED M
B0200-81108	INDICATOR,AIRSPEED M
B0200-81118	INDICATOR,AIRSPEED M
B0200-81119	INDICATOR,AIRSPEED M
B0200-81908	INDICATOR,AIRSPEED M
B0202-81114	INDICATOR,MACH AIRSP
B0243-71101	INDICATOR,MACH AIRSP
B0243-81102	INDICATOR,MACH AIRSP
B0243-81103	INDICATOR,MACH AIRSP
B0243-81108	INDICATOR,MACH AIRSP
B0243-81110	INDICATOR,MACH AIRSP
B0245-81104	INDICATOR,MACH AIRSP
B0245-81108	INDICATOR,MACH AIRSP
B0245-81110	INDICATOR,MACH AIRSP
B0704-10004	SENSOR,OVERSPEED LIM
B0704-10006	SENSOR,OVERSPEED LIM
B0704-10008	SENSOR,OVERSPEED LIM
B0704-10009	SENSOR,OVERSPEED LIM
B0704-10010	SENSOR,OVERSPEED LIM
B0704-10011	SENSOR,OVERSPEED LIM
B0704-10012	SENSOR,OVERSPEED LIM

B0704-10016	SENSOR,OVERSPEED LIM
B0704-10034	SENSOR,OVERSPEED LIM
B0704-10036	SENSOR,OVERSPEED LIM
B0704-10038	SENSOR,OVERSPEED LIM
B0706-10001	SENSOR,OVERSPEED LIM
B0706-10002	SENSOR,OVERSPEED LIM
B0706-10005	SENSOR,OVERSPEED LIM
B0706-10007	SENSOR,OVERSPEED LIM
B0709-10001	SENSOR,OVERSPEED LIM
B0709-10002	SENSOR,OVERSPEED LIM
B0709-10004	SENSOR,OVERSPEED LIM
B1047-1	UNIT,HYD.OIL CONTROL
B1077-1	INDICATOR,OIL QTY
B1077-2	INDICATOR,OIL QTY
B1077-3	INDICATOR,OIL QTY
B1077-3W	INDICATOR,OIL QTY
B1077-4	INDICATOR,OIL QTY
B1175-3069	TANK UNIT
B1175-3069M	TANK UNIT
B1175-3076	TANK UNIT
B1175-3076M	TANK UNIT
B1175-3589	TANK UNIT
B1175-3589M	TANK UNIT
B1175-3590	TANK UNIT
B1175-3603	TANK UNIT
B1176-3070	TANK UNIT
B1176-3070M	TANK UNIT
B1177-3071	TANK UNIT
B1177-3071M	TANK UNIT
B1177-3072	TANK UNIT
B1177-3072M	TANK UNIT
B1177-3073	TANK UNIT
B1177-3073M	TANK UNIT
B1177-3074	TANK UNIT
B1177-3074M	TANK UNIT
B1177-3075	TANK UNIT
B1177-3075M	TANK UNIT
B1177-3076	TANK UNIT
B1177-3078	TANK UNIT
B1177-3078M	TANK UNIT
B1177-3400	TRANSMITTER,FUEL QTY
B1177-3401	TRANSMITTER,FUEL QTY
B1177-3405	TRANSMITTER,FUEL QTY
B1177-3410	TRANSMITTER,FUEL QTY
B1177-3411	TRANSMITTER,FUEL QTY

B1177-3412	TRANSMITTER,FUEL QTY
B1177-3413	TRANSMITTER,FUEL QTY
B1177-3414	TRANSMITTER,FUEL QTY
B1177-3415	TRANSMITTER,FUEL QTY
B1177-3416	TRANSMITTER,FUEL QTY
B1177-3417	TRANSMITTER,FUEL QTY
B1177-3419	TRANSMITTER,FUEL QTY
B1177-3420	TRANSMITTER,FUEL QTY
B1177-3421	TRANSMITTER,FUEL QTY
B1177-3422	TRANSMITTER,FUEL QTY
B1177-3423	TRANSMITTER,FUEL QTY
B1177-3424	TRANSMITTER,FUEL QTY
B1177-3426	TRANSMITTER,FUEL QTY
B1177-3427	TRANSMITTER,FUEL QTY
B1177-3428	TRANSMITTER,FUEL QTY
B1177-3429	TRANSMITTER,FUEL QTY
B1177-3430	TRANSMITTER,FUEL QTY
B1177-3431	TRANSMITTER,FUEL QTY
B1177-3670	TRANSMITTER,FUEL QTY
B1177-3671	TRANSMITTER,FUEL QTY
B1178-3078	TANK UNIT
B1178-3078M	TANK UNIT
B1178-3402	TRANSMITTER,FUEL QTY
B1178-3418	TRANSMITTER,FUEL QTY
B1178-3425	TRANSMITTER,FUEL QTY
B1178-3432	TRANSMITTER,FUEL QTY
B1178-3552	TANK UNIT
B1178-3552M	TANK UNIT
B1178-3591	TANK UNIT
B1178-3591M	TANK UNIT
B1178-3592	TANK UNIT
B1178-3592M	TANK UNIT
B1178-3606	TANK UNIT
B1178-3606M	TANK UNIT
B1178-3637	TANK UNIT
B1178-3637M	TANK UNIT
B1178-3672	TRANSMITTER,FUEL QTY
B118-101	INDICATOR,REPEATER
B118-101W	INDICATOR,REPEATER
B118-101X	INDICATOR,REPEATER
B118-101XW	INDICATOR,REPEATER
B118-124	INDICATOR,FUEL QTY
B118-125	INDICATOR,REPEATER
B118-126	INDICATOR,FUEL QTY
B118-143	INDICATOR,FUEL QTY

B118-143W	INDICATOR,FUEL QTY
B118-143XW	INDICATOR,FUEL QTY
B118-144	INDICATOR,FUEL QTY
B118-145	INDICATOR,REPEATER
B118-145W	INDICATOR,REPEATER
B118-244	INDICATOR,FUEL QTY
B118-264	INDICATOR,FUEL QTY
B118-312	INDICATOR,FUEL QTY
B118-312W	INDICATOR,FUEL QTY
B118-313	INDICATOR,FUEL QTY
B118-313W	INDICATOR,FUEL QTY
B118-313XW	INDICATOR,FUEL QTY
B118-314	INDICATOR,FUEL QTY
B118-314W	INDICATOR,FUEL QTY
B118-314XW	INDICATOR,FUEL QTY
B118-315	INDICATOR,FUEL QTY
B118-315W	INDICATOR,FUEL QTY
B118-315XW	INDICATOR,FUEL QTY
B118-316	INDICATOR,FUEL QTY
B118-316W	INDICATOR,FUEL QTY
B118-316XW	INDICATOR,FUEL QTY
B118-317	INDICATOR,FUEL QTY
B118-324	INDICATOR,FUEL QTY
B118-324W	INDICATOR,FUEL QTY
B118-324XW	INDICATOR,FUEL QTY
B118-336	INDICATOR,FUEL QTY
B118-337	INDICATOR,FUEL QTY
B118-338	INDICATOR,FUEL QTY
B118-339	INDICATOR,FUEL QTY
B118-340	INDICATOR,FUEL QTY
B118-341	INDICATOR,FUEL QTY
B118-342	INDICATOR,FUEL QTY
B118-356	INDICATOR,FUEL QTY.
B118-357	INDICATOR,FUEL QTY.
B118-58	INDICATOR,FUEL QTY.
B118-59	INDICATOR,FUEL QTY.
B118-59W	INDICATOR,FUEL QTY.
B118-59XW	INDICATOR,FUEL QTY.
B118-60	INDICATOR,FUEL QTY.
B118-60W	INDICATOR,FUEL QTY.
B118-60XW	INDICATOR,FUEL QTY.
B118-61	INDICATOR,FUEL QTY.
B118-61W	INDICATOR,FUEL QTY.
B118-61XW	INDICATOR,FUEL QTY.
B118-62	INDICATOR,FUEL QTY

B118-62W	INDICATOR,FUEL QTY
B118-62XW	INDICATOR,FUEL QTY
B118-63	INDICATOR,FUEL QTY
B118-64	INDICATOR,FUEL QTY
B118-65	INDICATOR,FUEL QTY
B118-66	INDICATOR,FUEL QTY
B118-67	INDICATOR,FUEL QTY
B118-68	INDICATOR,REPEATER
B118-69	INDICATOR,REPEATER
B118-69X	INDICATOR,REPEATER
B118-69XW	INDICATOR,REPEATER
B118-70	INDICATOR,REPEATER
B118-70X	INDICATOR,REPEATER
B118-70XW	INDICATOR,REPEATER
B118-71	INDICATOR,REPEATER
B118-71X	INDICATOR,REPEATER
B118-71XW	INDICATOR,REPEATER
B118-72	INDICATOR,REPEATER
B118-72X	INDICATOR,REPEATER
B118-72XW	INDICATOR,REPEATER
B118-95	INDICATOR,FUEL QTY
B118-95W	INDICATOR,FUEL QTY
B118-95XW	INDICATOR,FUEL QTY
B118-97	INDICATOR,FUEL QTY
B1239-3196	TANK UNIT,OIL QTY
B1279	TRANSMITTER,APU OIL
B1279-3	TRANSMITTER,APU OIL
B1425-1	SELECTOR,FUEL LOAD
B1425-5	SELECTOR,FUEL LOAD
B14DE2031	VALVE,PRESSURE RELIE
B14DE2041	VALVE,PRESSURE RELIE
B14DE2050	VALVE,PRESSURE RELIE
B14DE2051	VALVE,PRESSURE RELIE
B14DE2080	VALVE,PRESSURE RELIE
B1564-10	INDICATOR,TOTAL TEMP
B16NE1010	VALVE,PRESSURE REDUC
B16NE1011	VALVE,PRESSURE REDUC
B16NE1110	VALVE,PRESSURE REDUC
B16NE1111	VALVE,PRESSURE REDUC
B16NE1120	VALVE,PRESSURE REDUC
B16NE1121	VALVE,PRESSURE REDUC
B175-12	INDICATOR,FUEL QTY.T
B175-12W	INDICATOR,FUEL QTY.T
B175-14	INDICATOR,FUEL QTY.T
B175-16	INDICATOR,FUEL QTY.T

B175-17	INDICATOR,FUEL QTY.T
B175-21	INDICATOR,FUEL QTY
B175-21W	INDICATOR,FUEL QTY
B175-22	INDICATOR,FUEL QTY
B175-22W	INDICATOR,FUEL QTY
B175-24	INDICATOR,FUEL QTY
B175-24W	INDICATOR,FUEL QTY
B175-25	INDICATOR,FUEL QTY
B175-25W	INDICATOR,FUEL QTY
B175-26	INDICATOR,FUEL QTY T
B175-26W	INDICATOR,FUEL QTY T
B175-27	INDICATOR,REPEATER/T
B175-27W	INDICATOR,REPEATER/T
B175-28	INDICATOR,FUEL QTY T
B175-28W	INDICATOR,FUEL QTY T
B175-29	INDICATOR,REPEATER/T
B175-29W	INDICATOR,REPEATER/T
B175-30	INDICATOR,FUEL QTY.T
B175-31	INDICATOR,FUEL QTY.T
B175-6	INDICATOR,FUEL QTY.T
B175-7	INDICATOR,FUEL QTY.T
B175-7M	INDICATOR,FUEL QTY.T
B175-8	INDICATOR,FUEL QTY.T
B175-9	INDICATOR,FUEL QTY.T
B175-9M	INDICATOR,FUEL QTY.T
B175-9MW	INDICATOR,FUEL QTY.T
B17DA1001	VALVE,REGULATING
B17DA1002	VALVE,REGULATING
B222-35	INDICATOR,FUEL.QTY.T
B222-38	INDICATOR,FUEL.QTY.T
B222-39	INDICATOR,FUEL QTY.T
B231-1	INDICATOR,WATER QTY
B231-1-1	INDICATOR,WATER QTY
B233-1	SENSOR,WATER QTY
B233-1M	SENSOR,WATER QTY
B274-13W	INDICATOR,TOTALIZER
B274G-1	INDICATOR,TOTALIZER
B274G-10	INDICATOR,TOTALIZER
B274G-12	INDICATOR,TOTALIZER
B274G-12W	INDICATOR,TOTALIZER
B274G-2	INDICATOR,TOTALIZER
B274G-5	INDICATOR,TOTALIZER
B274G-6	INDICATOR,TOTALIZER
B274G-9	INDICATOR,TOTALIZER
B277-1555	TANK UNIT

B277-1556	TANK UNIT
B277-1557	TANK UNIT
B277-1558	TANK UNIT
B277-1559	TANK UNIT
B277-1560	TANK UNIT
B277-1561	TANK UNIT
B277-1562	TANK UNIT
B277-1563	TANK UNIT
B277-1564	TANK UNIT
B277-1565	TANK UNIT
B277-1566	TANK UNIT
B277-1567	TANK UNIT
B277-1568	TANK UNIT
B277-1569	TANK UNIT
B277-1570	TANK UNIT
B277-1571	TANK UNIT
B277-1572	TANK UNIT
B277-1573	TANK UNIT
B277-1574	TANK UNIT
B277-1575	TANK UNIT
B277-1576	TANK UNIT
B277-1947	TANK UNIT
B277-1969	TANK UNIT
B277-2075	TANK UNIT
B277-2077	TANK UNIT
B277-2197	TANK UNIT
B277-2198	TANK UNIT
B294C-1	INDICATOR,OIL QTY.
B294C-2	INDICATOR,OIL QTY.
B294C-3	INDICATOR,OIL QTY.
B353-18	INDICATOR,FUEL QTY.R
B353-19	INDICATOR,FUEL QTY R
B36217-10-001	INDICATOR,TRUE AIRSP
B36217-10-021	INDICATOR,TRUE AIRSP
B3668910021	INDICATOR,ALT/DIFF.P
B372-1	BOX,FUEL QTY JUNCTIO
B372-2	BOX,FUEL QTY JUNCTIO
B372-3	BOX,FUEL QTY JUNCTIO
B372-4	BOX,FUEL QTY JUNCTIO
B4018710022	INDICATOR,RATE OF CL
B4018710033	INDICATOR,RATE OF CL
B4018710133	INDICATOR,RATE OF CL
B40CD0401	FAN
B40CF0401	FAN SMOKE DET
B4154210003	ALTIMETER,ENCODING

B42CA1000	VALVE,CHECK
B42CA1010	VALVE,CHECK
B42LA1040	VALVE,VACUUM RELIEF
B452-1	BOX,FUEL QTY JUNCTIO
B45CB1120	UNIT,DILATATION
B47AA1002	VALVE,HOT AIR
B47AA1003	VALVE,HOT AIR
B48CA1120	VALVE,BUTTERFLY
B48CA1121	VALVE,BUTTERFLY
B48CB1041	VALVE,BUTTERFLY
B701-1	INDICATOR,WATER QTY
B706-1	INDICATOR,WATER QTY
B706-2	INDICATOR,WATER QTY
B706-3	INDICATOR,WATER QTY
B711-1	INDICATOR,HYD.OIL QT
B711-1-1	INDICATOR,HYD.OIL QT
B711-3	INDICATOR,HYD.OIL QT
B711-4	INDICATOR,HYD.OIL QT
B711-5	INDICATOR,HYD.OIL QT
B711-6	INDICATOR,HYD.OIL QT
B711-7	INDICATOR,HYD.OIL QT
B712-1	INDICATOR,HYD.OIL QT
B712-2	INDICATOR,HYD.OIL QT
B712-6R	INDICATOR,HYD.OIL QT
B712-6W	INDICATOR,HYD.OIL QT
B712-7W	INDICATOR,HYD.OIL QT
B712-8W	INDICATOR,HYD.OIL QT
B8550-1-1385	FLOODLIGHT,UTILITY
B92-38-502	VALVE,MIXER
B92-38-503	VALVE,MIXER
B92-38-504	VALVE,MIXER
B94A13-202	VALVE,ELECT.PUMP CON
B94A13-203	VALVE,ELECT.PUMP CON
B94A13-205	VALVE,ELECT.PUMP CON
B94A13-251	VALVE,ELECT.PUMP CON
B94A13-256	VALVE,ELECT.PUMP CON
B94A13-256-1	VALVE,ELECT.PUMP CON
B94B09-201	SELECTOR,HYDRAULIC
B94B09-202	DISTRIBUTOR,HYDRAULI
B94B09-202-1	DISTRIBUTOR,HYDRAULI
B97-26-551	VALVE,ELECTRIC
B97-26-553	VALVE,ELECTRIC
B97-31-251	VALVE,ELECTRIC
B97-38-660	VALVE,ELECTRIC VENTI
B97-38-662	VALVE,ELECTRIC VENTI

B97E51-253	VALVE,ELECTRIC VENTI
B97E51-253-1	VALVE,ELECTRIC VENTI
B97E51-254	VALVE,ELECTRIC VENTI
B97E51-254-1	VALVE,ELECTRIC VENTI
B97E51-655	VALVE,2" LOW PRESSUR
B97F38-651	VALVE,ELECTRIC SHUT-
B97F38-653	VALVE,ELECTRIC SHUT-
B97H19-601	VALVE,2" FUEL
B97H19-601A	VALVE,2" FUEL
B97H19-601B	VALVE,2" FUEL
B97H19-602	VALVE,3/4" FUEL
B97H51-601B	VALVE,2" FUEL
B97J38-251	VALVE,ELECTRIC
B97J40-252	VALVE,ELECTRIC VENT
B97J40-254	VALVE,ELECTRIC VENT
B97L38-251	VALVE,ELECTRIC
B97L38-252	VALVE,ELECTRIC
B97M13-201	VALVE
B97M19-201	VALVE,SHUT OFF
B97M19-203	VALVE,SHUT OFF
B97M19-203-1	VALVE,SHUT OFF
B97M31-201	VALVE,GATE
B97W99-115A	ACTUATOR,SINGLE
B97W99-115B	ACTUATOR,SINGLE
B97W99-116A	ACTUATOR,TWIN
B97W99-116B	ACTUATOR,TWIN
B99-003	VALVE,ISOLATING
B99-004	VALVE,ISOLATING
B99-005	VALVE,CROSSFEED
B99-006	VALVE,CROSSFEED
B99-19-203	VALVE,FUEL SHUT OFF
B99-19-204	VALVE,FUEL SHUT OFF
B99-19-210	VALVE,SHUT OFF
B99-19-211	VALVE,SHUT OFF
B99-19-501	VALVE,METERING
B99-19-502	VALVE,METERING
B99-26-203	VALVE,SHUT OFF
B99-26-204	VALVE,SHUT OFF
B99-26-213	VALVE,ENGINE SHUT-OF
B99-26-214	VALVE,ENGINE SHUT-OF
B99-26-502	VALVE,HOT AIR
B99-31-206	VALVE,FUEL SHUT OFF
B99-31-207	VALVE,FUEL SHUT OFF
B99-31-208	VALVE,FUEL SHUT OFF
B99C20-501	VALVE,PRESSURIZATION

BCN592A	BOX,FUEL LEVEL CONTR
BJ100-30	CABIN PRESS.VALVE TE
BM10013	CONTINUITY TESTER
BTI600-101A	INDICATOR,BATTERY TE
BTI600-101U	INDICATOR,BATTERY TE
BTI600-102A	INDICATOR,BATTERY TE
BTI600-102U	INDICATOR,BATTERY TE
BTI600-103A	INDICATOR,BATTERY TE
BTI600-103U	INDICATOR,BATTERY TE
BTI600-104A	INDICATOR,BATTERY TE
BTI600-104U	INDICATOR,BATTERY TE
BTI600-105A	INDICATOR,BATTERY TE
BTI600-105U	INDICATOR,BATTERY TE
BTI600-106A	INDICATOR,BATTERY TE
BTI600-106U	INDICATOR,BATTERY TE
BTI600-107A	INDICATOR,BATTERY TE
BTI600-107U	INDICATOR,BATTERY TE
BTI600-1A	INDICATOR,BATTERY TE
BTI600-1U	INDICATOR,BATTERY TE
BTI600-2	INDICATOR,BATTERY TE
BTI600-200A	AMPLIFIER
BTI600-201M	INDICATOR,BATTERY TE
BTI600-202M	INDICATOR,BATTERY TE
BTI600-202M1	INDICATOR,BATTERY TE
BTI600-203M	INDICATOR,BATTERY TE
BTI600-204M	INDICATOR,BATTERY TE
BTI600-205M	INDICATOR,BATTERY TE
BTI600-206M	INDICATOR,BATTERY TE
BTI600-207M	INDICATOR,BATTERY TE
BTI600-2A	INDICATOR,BATTERY TE
BTI600-2U	INDICATOR,BATTERY TE
BTI600-300A	AMPLIFIER
BTI600-301M	INDICATOR,BATTERY TE
BTI600-302M	INDICATOR,BATTERY TE
BTI600-303M	INDICATOR,BATTERY TE
BTI600-304M	INDICATOR,BATTERY TE
BTI600-305M	INDICATOR,BATTERY TE
BTI600-306M	INDICATOR,BATTERY TE
BTI600-307M	INDICATOR,BATTERY TE
BTI600-3A	INDICATOR,BATTERY TE
BTI600-3U	INDICATOR,BATTERY TE
BTI600-4A	INDICATOR,BATTERY TE
BTI600-4U	INDICATOR,BATTERY TE
BTI600-5A	INDICATOR,BATTERY TE
BTI600-5U	INDICATOR,BATTERY TE

BTI600-6A	INDICATOR,BATTERY TE
BTI600-6U	INDICATOR,BATTERY TE
BTI600-7A	INDICATOR,BATTERY TE
BTI600-7U	INDICATOR,BATTERY TE
BYLB50423	VALVE,BUTTERFLY
BYLB50423-1	VALVE,BUTTERFLY
BYLB50423-3	VALVE,BUTTERFLY
C0001-81103	ALTIMETER
C0007-14101	ALTIMETER
C0007-81103	ALTIMETER
C030-14-1830	MOTOR,ACTUATOR
C1381A	BOARD,PRINTED CIRCUIT
C1389	BOARD,PRINTED CIRCUIT
C1391A	BOARD,PRINTED CIRCUIT
C1392-1	BOARD,PRINTED CIRCUIT
C1392-2	BOARD,PRINTED CIRCUIT
C1429-1	MODULE,AILERON MONITOR
C1430-2	MODULE,AOA CONTACT
C1431-1	MODULE,SLAT MONITORING
C1435-2	MODULE,NOT LOCKED LG
C1478-2	MODULE,AOA CONTACT
C20103300	VALVE,BRAKE SYSTEM S
C20177100	ADAPTING,TACHOMETER
C20188100	BOX,SPAD CONTROL
C20188101	BOX,SPAD CONTROL
C20188102	BOX,SPAD CONTROL
C20191000	ADAPTING,TACHOMETER
C20260000	GENERATOR,TACHOMETER
C21KL0012	VALVE,FLOAT
C21KL0013	VALVE,FLOAT
C21KL0014	VALVE,FLOAT
C21KL0014R	VALVE,FLOAT
C21KL0015	VALVE,FLOAT
C21LL0021	VALVE,FLOAT
C21LL0022	VALVE,FLOAT
C21LL0023	VALVE,FLOAT
C22137	FITTING,RESTRICTOR
C22137-1	FITTING,RESTRICTOR
C22137-101	FITTING,RESTRICTOR
C22137-2	FITTING,RESTRICTOR
C22137-3	FITTING,RESTRICTOR
C23802-105	SWITCH,SELECTOR
C24091	CONTACTOR,FOUR BREAK
C24160030	PUMP,SELF REGULATING
C24160-1401	PUMP,SELF REGULATING

C24166-1	SELECTOR
C24237	RESTRICTOR
C24242	AMPLIFIER,ELECTRONIC
C24242010	AMPLIFIER,ELECTRONIC
C24242-1	AMPLIFIER,ELECTRONIC
C24244007	UPLOCK
C24244007-1	UPLOCK
C24244-0-1	UPLOCK
C24245006	UPLOCK
C24245006-1	UPLOCK
C24245007	UPLOCK
C24245007-1	UPLOCK
C24245-0-1	UPLOCK
C24245-4-1	UPLOCK
C24248003	BLOCK,HYDRAULIC
C24248003-1	BLOCK,HYDRAULIC
C24248-1	BLOCK,HYDRAULIC
C24257002	UPLOCK
C24257-1	UPLOCK
C24257-1-1	UPLOCK
C24257-1-2	UPLOCK
C24257-1-3	UPLOCK
C24265	VALVE,PRESSURIZING
C24295313	DISTRIBUTOR,ELECTRO
C24295313-1	DISTRIBUTOR,ELECTRO
C24346004	VALVE,RESTRICTOR
C24346004-1	VALVE,RESTRICTOR
C24346004-2	VALVE,RESTRICTOR
C24346-1	VALVE,RESTRICTOR
C24346-101	VALVE,RESTRICTOR
C24346-102	VALVE,RESTRICTOR
C24346-2	VALVE,RESTRICTOR
C24346-3	VALVE,RESTRICTOR
C24346-301	VALVE,RESTRICTOR
C24346-302	VALVE,RESTRICTOR
C24370-1	RESTRICTOR
C24370-101	RESTRICTOR
C24370-102	RESTRICTOR
C24370-2	RESTRICTOR
C24370-201	RESTRICTOR
C24370-202	RESTRICTOR
C24370-3	RESTRICTOR
C24370-301	RESTRICTOR
C24370-302	RESTRICTOR
C24370-4	RESTRICTOR

C24370-401	RESTRICTOR
C24370-402	RESTRICTOR
C24539000	VALVE,RELIEF
C24541000	VALVE,RELIEF
C24561000	FILTER
C24594000	MANIFOLD
C24635000	FILTER
C24636000	FILTER
C24637000	FILTER
C24758140	RESTRICTOR
C24815000	VALVE,CHECK
C24816000	VALVE,CHECK
CG0380103391N00	ELEMENT,FILTER
CG1042AB03	MODE SELECT PANEL
CG1042AB04	MODE SELECT PANEL
CG7G0	DETECTOR,SMOKE
CG7G0-10	DETECTOR,SMOKE
CG7G0-11	DETECTOR,SMOKE
CG7P0	DETECTOR,SMOKE
CG8104013446N00	ELEMENT,FILTER
CG8106013356N00	ELEMENT,FILTER
CH0378103392N00	ELEMENT,FILTER
CI1017	CARD
CI1065A	CARD,FIRE DETECTION
CI1066-1	CARD,FIRE DETECTION
CI1066-2	CARD,FIRE DETECTION
CI1066A	CARD,FIRE DETECTION
CI1075	CARD,STANDBY APU
CI1082	CARD,ARTHUR BELLCRAN
CI1082A	CARD,ARTHUR BELLCRAN
CI1087	CARD,LIGHTING CONTRO
CI1087AAA	CARD,LIGHTING CONTRO
CI1087BAA	CARD,LIGHTING CONTRO
CI1169-11	CARD,LANDING GEAR WA
CI1171	CARD,24 COMPONENT
CI1172-15	CARD,24 COMPONENT
CI1173-11	CARD,24 COMPONENT
CI1174-11	CARD,24 COMPONENT
CI1175-14	CARD,25 COMPONENT
CI1183-5	CARD,24 COMPONENT
CI1194	CARD,ARTHUR BELLCRAN
CI1223-1	CARD,REFUELING LOGIC
CI1224-1	CARD,REFUELING
CI1285	CARD,25 COMPONENT
CI1285-1	CARD,25 COMPONENT

CI1285-2	CARD,25 COMPONENT
CI1285-3	CARD,25 COMPONENT
CI815A	CARD,FUEL LEVEL
CI816B	CARD,ARTHUR SYSTEM
CI817B1	CARD,TIME DELAY
CI818A	CARD,A.C.
CI819A	CARD,GROUND CONNECTI
CI820A	CARD,TAKE OFF WARNIN
CI820B	CARD,TAKE OFF WARNIN
CI821A	CARD
CI821A1	CARD
CI822A	CARD,LATERAL FILLING
CI823A	CARD
CI823B	CARD
CI845A	CARD,CENTRAL FILLING
CI849	CARD,TRANSFER
CI849A	CARD,TRANSFER
CI850	CARD
CI852A	CARD,24 COMPONENT
CI853B	CARD,24 COMPONENT
CI854A	CARD,24 COMPONENT
CI855B	CARD,24 COMPONENT
CI856A	CARD,HF & INTERCOMM
CI857	CARD,6 SINGLE DIODE
CI884	CARD,PRINTED CIRCUIT
CI905-1	CARD,RECORDER
CI905A	CARD,RECORDER
CI912A	CARD,PRINTED CIRCUIT
CI913	CARD,PRINTED CIRCUIT
CI914B	CARD,PRINTED CIRCUIT
CI915	CARD,6 SINGLE DIODE
CI952A	CARD,24 COMPONENT
CI954A	CARD,24 COMPONENT
CI955B	CARD,25 COMPONENT
CI955C	CARD,25 COMPONENT
CI958	CARD,PRINTED CIRCUIT
CI999-1	CARD,DE-ICING
CI999A	CARD,DE-ICING
CMF1153	MONITOR,CONTROL
CMT20	INDICATOR,PRESSURE
CN100	VALVE,SHUTTLE
CP2020A	MIXER UNIT
CP2020B	MIXER UNIT
CP2020C	MIXER UNIT
CP2020D	MIXER UNIT

CP2020E	MIXER UNIT
CP2020F	MIXER UNIT
CP2020G	MIXER UNIT
CP2020H	MIXER UNIT
CP2020J	UNIT,MIXER
CP2367A	UNIT,MIXER
CP2367AA	UNIT,MIXER
CP2367B	UNIT,MIXER
CP2367BA	UNIT,MIXER
CP2367C	UNIT,MIXER
CP2367CA	UNIT,MIXER
CP2367D	UNIT,MIXER
CP2367DA	UNIT,MIXER
CP2367E	UNIT,MIXER
CP2367EA	UNIT,MIXER
CP2367F	UNIT,MIXER
CP2367FA	UNIT,MIXER
CP2367G	UNIT,MIXER
CP2367GA	UNIT,MIXER
CP2367H	UNIT,MIXER
CP2367HA	UNIT,MIXER
CP2367I	UNIT,MIXER
CP2367IA	UNIT,MIXER
CP2367J	UNIT,MIXER
CP2367JA	UNIT,MIXER
CP2367K01	UNIT,MIXER
CP2367K02	UNIT,MIXER
CP2367K03	UNIT,MIXER
CP2367K04	UNIT,MIXER
CP2367L01	UNIT,MIXER
CP2367M01	UNIT,MIXER
CPS152	POWER SUPPLY
CYLB50414	VALVE,DUAL CHECK
CYLB50416	VALVE,DUAL CHECK
CYLB50417	VALVE,DUAL CHECK
CYLB50637-1	VALVE,DUAL CHECK
CYLB50712	VALVE,DUAL CHECK
CYLB50713-1	VALVE,DUAL CHECK
CYLB50852	VALVE,DUAL CHECK
CYLB51111	VALVE,CHECK
CYLB51161-1	VALVE,CHECK
CYLB51162	VALVE,CHECK
D07163-04-052-1	INDICATOR,VERTICAL S
D22-032	REGULATOR,PROTECTION
D22061-04-004	ALTIMETER,PRESSURE

D22061-04-010	ALTIMETER,PRESSURE
D22859000-1	UNIT,PROXIMITY SWITC
D25AB1310	VALVE,THERMAL
D25AB1700	VALVE,PRESSURE HOLDI
D25AB1702	VALVE,PRESSURE HOLDI
D97-001	ACTUATOR,REDUCTION G
D97C00-201	ACTUATOR,ROTARY
D97C00-201-1	ACTUATOR,ROTARY
D97C00-202	ACTUATOR,ROTARY
D97C00-203	ACTUATOR,ROTARY
D97C00-205	ACTUATOR,ROTARY
D97C00-206	ACTUATOR,ROTARY
D97C00-208	ACTUATOR,ROTARY
D97C00-209	ACTUATOR,ROTARY
D97C00-211	ACTUATOR,ROTARY
D97C00-212	ACTUATOR,ROTARY
D97C00-215	ACTUATOR,ROTARY
D97C00-217	ACTUATOR,ROTARY
D97C00-218	ACTUATOR,ROTARY
D97C00-219	ACTUATOR,ROTARY
D97C00-220	ACTUATOR,ROTARY
D97C00-501	ACTUATOR,SINGLE
D97D00-501	ACTUATOR,TWIN
D97D00-502	ACTUATOR,TWIN
D97D00-604	ACTUATOR,TWIN
D97D00-605	ACTUATOR,ROTARY
D97D00-605-1	ACTUATOR,ROTARY
D97D00-606	ACTUATOR,ROTARY
D97D00-606-1	ACTUATOR,ROTARY
D97D00-607	ACTUATOR,ROTARY
D97D00-607-1	ACTUATOR,ROTARY
D97E00-201	ACTUATOR,MECHANICAL
D97E00-202	ACTUATOR,MECHANICAL
D97F00-601	GEAR,BEVEL
D-981	METER
D98C202	SWITCH,PRESSURE
D98C204	SWITCH,PRESSURE
DECU3F	UNIT,ENTERTAIN CONTR
DKR130	VALVE,NON RETURN
DP371-JF3	INDICATOR,TEMPERATUR
DSF1152	INDICATOR,FUEL QTY
DSFG1718-1	INDICATOR,FUEL QTY
DSFG1718-2	INDICATOR,FUEL QTY
DSFG1718-3	INDICATOR,FUEL QTY.
DSFG1718-4	INDICATOR,FUEL QTY

DSFG1718-5	INDICATOR,FUEL QTY
DSFR1719-1	INDICATOR,REPEAT.FUE
DSFR1719-2	INDICATOR,REPEAT.FUE
DSFR1719-3	INDICATOR,REPEAT.FUE
DST-16	INDICATOR,TEMPERATUR
DST-29-1	INDICATOR,TEMPERATUR
DST-29-2	INDICATOR,TEMPERATUR
DST-29-3	INDICATOR,TEMPERATUR
DST-49	INDICATOR,TEMPERATUR
DYLM43401-35	MOTOR
E07241-04-003	INDICATOR,TRUE AIRSP
E16883AA	POWER SUPPLY
E22061-04-016	ALTIMETER,PRESSURE
EA100ANH-134H	INDICATOR,HYD.QTY
EA100ANH-141H	INDICATOR,HYD.QTY
EA100ANH-144	INDICATOR,OIL QTY
EA100ANH-153H	INDICATOR,HYD OIL QT
EA100ANH-153H-1	INDICATOR,HYD OIL QT
EA102ANH-135H	INDICATOR,OIL QTY
EA102ANH-149H	INDICATOR,HYD.OIL QT
EA102ANH-166H	INDICATOR,WATER QTY
EA1065-1615	TANK UNIT,HYD.OIL
EA1065A-1615	TANK UNIT,HYD.OIL
EA1065A-2371	TANK UNIT,HYD.OIL
EA1065A-2371M	TANK UNIT,HYD.OIL
EA1065A-2406	TANK UNIT,WATER QTY
EA1065A-2721	TANK UNIT,WATER QTY.
EA1065A-2745	TANK UNIT,WATER QTY.
EA1065A-3554	TANK UNIT,WATER
EA1065A-3675	TANK UNIT,HYD.OIL
EA1065AW-1827	TANK UNIT,HYD.OIL QT
EA1065AW-2315	TANK UNIT, OIL
EA1066A-1620	TANK UNIT,HYD.OIL
EA1066A-2183	TANK UNIT,HYD.OIL
EA1066AW-2183	TANK UNIT,HYD.OIL
EA1092A-2407	TANK UNIT,HYD OIL QT
EA1093A-2408	TANK UNIT,HYD.OIL QT
EA1093A-2408-1	TANK UNIT,HYD.OIL QT
EA1093A-3544	TANK UNIT
EA1093A-3679	TANK UNIT
EA1093AW-2865	TANK UNIT,HYD.OIL QT
EA1093AW-3679	TANK UNIT
EA308-1	INDICATOR,POSITION
EA308-10	INDICATOR,POSITION
EA308-11	INDICATOR,POSITION

EA321-1	INDICATOR,HORIZONTAL
EA321-10	INDICATOR,RUDDER POS
EA321-16	INDICATOR,FLAP POSIT
EA326-1	INDICATOR
EA326-13	INDICATOR
EA326-15	INDICATOR,POSITION
EA326-15A	INDICATOR,POSITION
EA326-2	INDICATOR,POSITION
EA326-3	INDICATOR,RUDDER POS
EA326-4	INDICATOR,ELEVATOR P
EA326-8	INDICATOR,POSITION
EA327-1	INDICATOR
EA327-2	INDICATOR,POSITION
EA327-3	INDICATOR,POSITION
EA401-1	INDICATOR,HYD.OIL QT
EA401-2	INDICATOR,HYD.OIL QT
EA401-3	INDICATOR,HYD.OIL QT
EA401-4	INDICATOR,HYD.OIL QT
EA401-5	INDICATOR,HYD.OIL QT
EA401-6	INDICATOR,HYD.OIL QT
EA401-7	INDICATOR,HYD.OIL QT
EA401-8	INDICATOR,HYD.OIL QT
EA401-8W	INDICATOR,HYD.OIL QT
EA573A-1	TRANSMITTER,POSITION
EA805FGP-1618	TANK UNIT
EA818-3406	TRANSMITTER,FUEL QTY
EA818-3407	TRANSMITTER,FUEL QTY
EA818-3408	TRANSMITTER,FUEL QTY
EA818-3409	TRANSMITTER,FUEL QTY
EG19A-1	POWER UNIT,TOTALIZIN
EG5B-1	POWER UNIT
EKCC-18043	INDICATOR,ANTI-ICING
EL124-00	BOX,OVERHEATING DETE
EL125-01	BOX,ANTI-ICING LOGIC
EL125-02	BOX,ANTI-ICING LOGIC
EL126-00	BOX,ANTI-ICING LOGIC
EL133-00	UNIT,THRESHOLD DETEC
EVCT0405C	FAN
EVS812B	FAN
EVS812C	FAN
EVT174-2E1	FAN,BRAKE COOLING
EVT174-2E2	FAN,BRAKE COOLING
EVT174-2E3	FAN,BRAKE COOLING
EVT174-2E31	FAN,BRAKE COOLING
EVT174-2E4	FAN,BRAKE COOLING

EVT174-2E41	FAN,BRAKE COOLING
EVT174-2E5	FAN,BRAKE COOLING
EVT174-2E51	FAN,BRAKE COOLING
EVT174-2E6	FAN,BRAKE COOLING
EVT174-2E7	FAN,BRAKE COOLING
EVT174-2E8	FAN,BRAKE COOLING
EVT174-500E	FAN,BRAKE COOLING
EVT205D	FAN
EVT3454G	COOLING FAN
EVT3454H	COOLING FAN
EVT3454HC	AVIONICS FAN
EVT3745	FAN
EVT3745A	FAN
EVT3745A1	FAN
EVT4160	FAN
EVT4160A	FAN
EVT608A	ELECTROFAN
EVT705	FAN
EVT902F	FAN
F1252766	DISPLAY LCD ASSY.
F33AT2211	ACTUATOR
F33BP2211	ACTUATOR
F50B621810A1	PANEL,REFUELING
F50B621810A2	PANEL,REFUELING
FG1006AA01	FUEL QTY. TANK UNIT
FG1006AA02	FUEL QTY. TANK UNIT
FG1006AA03	FUEL QTY. TANK UNIT
FG1006AA04	FUEL QTY. TANK UNIT
FG1006AA05	FUEL QTY. TANK UNIT
FG1006AA06	FUEL QTY. TANK UNIT
FG1006AA07	FUEL QTY. TANK UNIT
FG1006AA08	FUEL QTY. TANK UNIT
FG1006AA09	FUEL QTY. TANK UNIT
FG1006AA10	FUEL QTY. TANK UNIT
FG1006AA11	FUEL QTY. TANK UNIT
FG1006AA12	FUEL QTY. TANK UNIT
FG1006AA13	FUEL QTY. TANK UNIT
FG1006AA14	FUEL QTY. TANK UNIT
FG1006AA15	FUEL QTY. TANK UNIT
FG1006AA16	FUEL QTY. TANK UNIT
FG1006AA17	FUEL QTY. TANK UNIT
FG102H-13	TANK UNIT
FG120A-10	TANK UNIT
FG120A-11	TANK UNIT
FG120A-12	TANK UNIT

FG120A-15	TANK UNIT
FG120A-17	TANK UNIT
FG120A-18	TANK UNIT
FG120A-19	TANK UNIT
FG120A-2	TANK UNIT
FG120A-20	TANK UNIT
FG120A-21	TANK UNIT
FG120A-22	TANK UNIT
FG120A-23	TANK UNIT
FG120A-24	TANK UNIT
FG120A-4	TANK UNIT
FG120A-8	TANK UNIT
FG120A-9	TANK UNIT
FG120C-1	TANK UNIT
FG120C-15	TANK UNIT
FG120C-16	TANK UNIT
FG120C-17	TANK UNIT
FG120C-18	TANK UNIT
FG120C-2	TANK UNIT
FG120C-20	TANK UNIT
FG120C-22	TANK UNIT
FG120C-23	TANK UNIT
FG120C-3	TANK UNIT
FG120C-4	TANK UNIT
FG120C-5	TANK UNIT
FG120C-6	TANK UNIT
FG120C-7	TANK UNIT
FG120P1	TANK UNIT
FG120P10	TANK UNIT
FG120P11	TANK UNIT
FG120P12	TANK UNIT
FG120P13	TANK UNIT
FG120P14	TANK UNIT
FG120P15	TANK UNIT
FG120P16	TANK UNIT
FG120P17	TANK UNIT
FG120P18	TANK UNIT
FG120P19	TANK UNIT
FG120P2	TANK UNIT
FG120P20	TANK UNIT
FG120P21	TANK UNIT
FG120P22	TANK UNIT
FG120P23	TANK UNIT
FG120P24	TANK UNIT
FG120P25	TANK UNIT

FG120P26	TANK UNIT
FG120P27	TANK UNIT
FG120P28	TANK UNIT
FG120P29	TANK UNIT
FG120P3	TANK UNIT
FG120P30	TANK UNIT
FG120P31	TANK UNIT
FG120P32	TANK UNIT
FG120P33	TANK UNIT
FG120P34	TANK UNIT
FG120P35	TANK UNIT
FG120P36	TANK UNIT
FG120P37	TANK UNIT
FG120P38	TANK UNIT
FG120P39	TANK UNIT
FG120P4	TANK UNIT
FG120P40	TANK UNIT
FG120P41	TANK UNIT
FG120P42	TANK UNIT
FG120P43	TANK UNIT
FG120P5	TANK UNIT
FG120P6	TANK UNIT
FG120P7	TANK UNIT
FG120P8	TANK UNIT
FG120P9	TANK UNIT
FG131A-1	TANK UNIT
FG150J-10	TANK UNIT
FG150J-11	TANK UNIT
FG150J-12	TANK UNIT
FG150J-13	TANK UNIT
FG150J-14	TANK UNIT
FG150J-18	TANK UNIT
FG150J-19	TANK UNIT
FG150J-20	TANK UNIT
FG150J-22	TANK UNIT
FG150J-23	TANK UNIT
FG150J-24	TANK UNIT
FG150J-25	TANK UNIT
FG150J-26	TANK UNIT
FG150J-27	TANK UNIT
FG150J-28	TANK UNIT
FG150J-29	TANK UNIT
FG150J-30	TANK UNIT
FG150J-31	TANK UNIT
FG150J-32	TANK UNIT

FG150J-33	TANK UNIT
FG150J-34	TANK UNIT
FG150J-35	TANK UNIT
FG150J-36	TANK UNIT
FG150J-37	TANK UNIT
FG150J-38	TANK UNIT
FG150J-39	TANK UNIT
FG150J-9	TANK UNIT
FG150L-1	TANK UNIT
FG150L-10	TANK UNIT
FG150L-11	TANK UNIT
FG150L-13	TANK UNIT
FG1A-1	COMPENSATOR
FG1A-4	COMPENSATOR
FG200B-10	TANK UNIT
FG200B-11	TANK UNIT
FG200B-12	TANK UNIT
FG200B-13	TANK UNIT
FG200B-14	TANK UNIT
FG200B-15	TANK UNIT
FG200B-16	TANK UNIT
FG200B-17	TANK UNIT
FG200B-18	TANK UNIT
FG200B-19	TANK UNIT
FG200B-2	TANK UNIT
FG200B-20	TANK UNIT
FG200B-21	TANK UNIT
FG200B-22	TANK UNIT
FG200B-23	TANK UNIT
FG200B-24	TANK UNIT
FG200B-29	TANK UNIT
FG200B-3	TANK UNIT
FG200B-30	TANK UNIT
FG200B-31	TANK UNIT
FG200B-32	TANK UNIT
FG200B-4	TANK UNIT
FG200B-5	TANK UNIT
FG200B-6	TANK UNIT
FG200B-7	TANK UNIT
FG200B-8	TANK UNIT
FG200B-9	TANK UNIT
FG220A-10	TANK UNIT
FG220A-100	TANK UNIT
FG220A-101	TANK UNIT
FG220A-102	TANK UNIT

FG220A-103	TANK UNIT
FG220A-104	TANK UNIT
FG220A-105	TANK UNIT
FG220A-106	TANK UNIT
FG220A-107	TANK UNIT
FG220A-108	TANK UNIT
FG220A-109	TANK UNIT
FG220A-11	TANK UNIT
FG220A-110	TANK UNIT
FG220A-111	TANK UNIT
FG220A-112	TANK UNIT
FG220A-113	TANK UNIT
FG220A-114	TANK UNIT
FG220A-115	TANK UNIT
FG220A-12	TANK UNIT
FG220A-127	TANK UNIT
FG220A-14	TANK UNIT
FG220A-15	TANK UNIT
FG220A-155	TANK UNIT
FG220A-156	TANK UNIT
FG220A-16	TANK UNIT
FG220A-17	TANK UNIT
FG220A-175	TANK UNIT
FG220A-176	TANK UNIT
FG220A-177	TANK UNIT
FG220A-178	TANK UNIT
FG220A-179	TANK UNIT
FG220A-18	TANK UNIT
FG220A-19	TANK UNIT
FG220A-192	TANK UNIT
FG220A-193	TANK UNIT
FG220A-194	TANK UNIT
FG220A-195	TANK UNIT
FG220A-196	TANK UNIT
FG220A-197	TANK UNIT
FG220A-198	TANK UNIT
FG220A-199	TANK UNIT
FG220A-2	TANK UNIT
FG220A-20	TANK UNIT
FG220A-200	TANK UNIT
FG220A-201	TANK UNIT
FG220A-202	TANK UNIT
FG220A-203	TANK UNIT
FG220A-204	TANK UNIT
FG220A-205	TANK UNIT

FG220A-206	TANK UNIT
FG220A-207	TANK UNIT
FG220A-208	TANK UNIT
FG220A-209	TANK UNIT
FG220A-21	TANK UNIT
FG220A-210	TANK UNIT
FG220A-211	TANK UNIT
FG220A-212	TANK UNIT
FG220A-213	TANK UNIT
FG220A-214	TANK UNIT
FG220A-215	TANK UNIT
FG220A-216	TANK UNIT
FG220A-23	TANK UNIT
FG220A-237	TANK UNIT
FG220A-238	TANK UNIT
FG220A-239	TANK UNIT
FG220A-24	TANK UNIT
FG220A-240	TANK UNIT
FG220A-241	TANK UNIT
FG220A-242	TANK UNIT
FG220A-243	TANK UNIT
FG220A-244	TANK UNIT
FG220A-245	TANK UNIT
FG220A-246	TANK UNIT
FG220A-247	TANK UNIT
FG220A-248	TANK UNIT
FG220A-249	TANK UNIT
FG220A-25	TANK UNIT
FG220A-250	TANK UNIT
FG220A-251	TANK UNIT
FG220A-252	TANK UNIT
FG220A-253	TANK UNIT
FG220A-254	TANK UNIT
FG220A-255	TANK UNIT
FG220A-256	TANK UNIT
FG220A-257	TANK UNIT
FG220A-258	TANK UNIT
FG220A-259	TANK UNIT
FG220A-26	TANK UNIT
FG220A-260	TANK UNIT
FG220A-261	TANK UNIT
FG220A-27	TANK UNIT
FG220A-28	TANK UNIT
FG220A-29	TANK UNIT
FG220A-3	TANK UNIT

FG220A-30	TANK UNIT
FG220A-31	TANK UNIT
FG220A-32	TANK UNIT
FG220A-33	TANK UNIT
FG220A-34	TANK UNIT
FG220A-35	TANK UNIT
FG220A-36	TANK UNIT
FG220A-37	TANK UNIT
FG220A-38	TANK UNIT
FG220A-39	TANK UNIT
FG220A-4	TANK UNIT
FG220A-40	TANK UNIT
FG220A-41	TANK UNIT
FG220A-42	TANK UNIT
FG220A-43	TANK UNIT
FG220A-44	TANK UNIT
FG220A-45	TANK UNIT
FG220A-46	TANK UNIT
FG220A-47	TANK UNIT
FG220A-48	TANK UNIT
FG220A-49	TANK UNIT
FG220A-5	TANK UNIT
FG220A-53	TANK UNIT
FG220A-54	TANK UNIT
FG220A-55	TANK UNIT
FG220A-56	TANK UNIT
FG220A-57	TANK UNIT
FG220A-58	TANK UNIT
FG220A-59	TANK UNIT
FG220A-6	TANK UNIT
FG220A-60	TANK UNIT
FG220A-61	TANK UNIT
FG220A-62	TANK UNIT
FG220A-63	TANK UNIT
FG220A-64	TANK UNIT
FG220A-65	TANK UNIT
FG220A-66	TANK UNIT
FG220A-67	TANK UNIT
FG220A-68	TANK UNIT
FG220A-7	TANK UNIT
FG220A-72	TANK UNIT
FG220A-73	TANK UNIT
FG220A-74	TANK UNIT
FG220A-75	TANK UNIT
FG220A-76	TANK UNIT

FG220A-78	TANK UNIT
FG220A-79	TANK UNIT
FG220A-8	TANK UNIT
FG220A-80	TANK UNIT
FG220A-81	TANK UNIT
FG220A-82	TANK UNIT
FG220A-83	TANK UNIT
FG220A-84	TANK UNIT
FG220A-85	TANK UNIT
FG220A-86	TANK UNIT
FG220A-9	TANK UNIT
FG220A-95	TANK UNIT
FG220A-96	TANK UNIT
FG220A-97	TANK UNIT
FG220A-98	TANK UNIT
FG220A-99	TANK UNIT
FG243A-1	TANK UNIT,OIL
FG243A-2	TANK UNIT,OIL
FG243A-3	TANK UNIT,OIL
FG243A-4	TANK UNIT,OIL
FG250A-11	TANK UNIT
FG250A-36	TANK UNIT
FG250A-37	TANK UNIT
FG250A-38	TANK UNIT
FG250A-4	TANK UNIT
FG250A-40	TANK UNIT
FG250A-42	TANK UNIT
FG250A-43	TANK UNIT
FG250A-44	TANK UNIT
FG250A-46	TANK UNIT
FG250A-6	TANK UNIT
FG250A-7	TANK UNIT
FG250A-8	TANK UNIT
FG272A-1	TANK UNIT
FG420A-10	TANK UNIT
FG420A-40	TANK UNIT
FG420A-41	TANK UNIT
FG420A-64	TANK UNIT
FG420A-65	TANK UNIT
FG420A-66	TANK UNIT
FG420A-72	TANK UNIT
FG420A-8	TANK UNIT
FG420A-9	TANK UNIT
FG430A-237	TANK UNIT
FG430A-238	TANK UNIT

FG430A-239	TANK UNIT
FG430A-240	TANK UNIT
FG430A-241	TANK UNIT
FG430A-242	TANK UNIT
FG430A-243	TANK UNIT
FG430A-244	TANK UNIT
FG430A-245	TANK UNIT
FG430A-246	TANK UNIT
FG430A-247	TANK UNIT
FG430A-248	TANK UNIT
FG430A-249	TANK UNIT
FG430A-250	TANK UNIT
FG430A-251	TANK UNIT
FG430A-252	TANK UNIT
FG430A-253	TANK UNIT
FG430A-254	TANK UNIT
FG430A-255	TANK UNIT
FG430A-256	TANK UNIT
FG430A-257	TANK UNIT
FG430A-258	TANK UNIT
FG430A-259	TANK UNIT
FG430A-260	TANK UNIT
FG430A-261	TANK UNIT
FG6B-1	COMPENSATOR,FUEL QTY
FG6B-2	COMPENSATOR,FUEL QTY
FG6C-1	COMPENSATOR,FUEL QTY
FG6C-2	COMPENSATOR,FUEL QTY
FG6C-4	COMPENSATOR,FUEL QTY
FJS-4102	FILTER,FUEL
FJS-DASH12-A-AA	FILTER,FUEL
FR2210-2	DETECTOR,SMOKE
G-1444	PANEL,AUDIO CONTROL
G-1956	PANEL,AUDIO SELECTOR
G3600A-1	LIGHT,LANDING
G3600A-2	LIGHT,LANDING
G3600A-3	LIGHT,LANDING
G3600A-5	LIGHT,LANDING
G3600A-7	LIGHT,LANDING
G3600A-9	LIGHT,LANDING
G3602A-1	LIGHT,LANDING
G3602A-2	LIGHT,LANDING
G3602A-3	LIGHT,LANDING
G3602A-5	LIGHT,LANDING
G3602A-7	LIGHT,LANDING
G3603A-1	LIGHT,LANDING

G3603A-2	LIGHT, LANDING
G3603A-3	LIGHT, LANDING
G3603A-5	LIGHT, LANDING
G-37731	PANEL, NAV/DME CONTROL
G-3869C	INDICATOR, HYD. PRESSURE
G-4037	INDICATOR, PRESSURE
G5515	SPEAKER, COCKPIT
G5515J	SPEAKER, COCKPIT
G5515R	SPEAKER, COCKPIT
G-6965-6	LIGHT, ROTATING NAVIGATION
G-803	AMPLIFIER, ISOLATION
G9325A1	LIGHT, NAVIGATION
G9325A2	LIGHT, NAVIGATION
G9325A3	LIGHT, NAVIGATION
G9325A4	LIGHT, NAVIGATION
G9325A5	LIGHT, NAVIGATION
G9325A6	LIGHT, NAVIGATION
G9950-1	LIGHT, TANDEM OSC.A/C
G9950-11	LIGHT, TANDEM OSC.A/C
G9950-13	LIGHT, TANDEM OSC.A/C
G9950-15	LIGHT, TANDEM OSC.A/C
G9950-17	LIGHT, TANDEM OSC.A/C
G9950-19	LIGHT, TANDEM OSC.A/C
G9950-2	LIGHT, TANDEM OSC.A/C
G9950-21	LIGHT, TANDEM OSC.A/C
G9950-23	LIGHT, TANDEM OSC.A/C
G9950-25	LIGHT, TANDEM OSC.A/C
G9950-27	LIGHT, TANDEM OSC.A/C
G9950-31	LIGHT, TANDEM OSC.A/C
G9950-33	LIGHT, TANDEM OSC.A/C
G9950-35	LIGHT, TANDEM OSC.A/C
G9950-36	LIGHT, TANDEM OSC.A/C
G9950-5	LIGHT, TANDEM OSC.A/C
G9950-7	LIGHT, TANDEM OSC.A/C
G9950-9	LIGHT, TANDEM OSC.A/C
GA3090MS	INDICATOR, VERTICAL SCALE
GA-4070	ALTIMETER, PRESSURE
GA-4088	ALTIMETER, PRESSURE
GA-41036	ALTIMETER, PRESSURE
GA70050	ELEMENT, FILTER
H301ABM1	INDICATOR, GYRO HORIZONTAL
H301AFM	INDICATOR, GYRO HORIZONTAL
H301AGM1	INDICATOR, GYRO HORIZONTAL
H301AKM1	INDICATOR, GYRO HORIZONTAL
H301APM1	INDICATOR, GYRO HORIZONTAL

H301ATM	INDICATOR,GYRO HORIZ
H301AZM1	INDICATOR,GYRO HORIZ
H301BAM	INDICATOR,GYRO HORIZ
H301BDM1	INDICATOR,GYRO HORIZ
HDA17026	FILTER
HDA17028	FILTER
HK45	CONTROLLER,AC VOLTAG
HMA70050	FILTER
HYLZ50422	CONTROLLER,CABIN TEM
HYLZ50426	CONTROL,WINDSHIELD T
HYLZ50426-1	CONTROL,WINDSHIELD T
HYLZ50514-031	CONTROLLER,CABIN TEM
HYLZ50514-11	CONTROLLER,CABIN TEM
HYLZ51112	CONTROLLER,CABIN TEM
JG130A-68	INDICATOR,FUEL QTY
JG131A-35	INDICATOR,FUEL QTY
JG131A-36	INDICATOR,FUEL QTY
JG131A-37	INDICATOR,FUEL QTY
JG131A-38	INDICATOR,FUEL QTY
JG131A-40	INDICATOR,FUEL QTY
JG131A-41	INDICATOR,FUEL QTY
JG131A-42	INDICATOR,FUEL QTY
JG131A-43	INDICATOR,FUEL QTY
JG131A-44	INDICATOR,FUEL QTY
JG131A-45	INDICATOR,FUEL QTY
JG131A-51	INDICATOR,FUEL QTY
JG131A-53	INDICATOR,FUEL QTY
JG131A-54	INDICATOR,FUEL QTY
JG131A-55	INDICATOR,FUEL QTY
JG131A-56	INDICATOR,FUEL QTY
JG131A-57	INDICATOR,FUEL QTY
JG131A-58	INDICATOR,FUEL QTY
JG131A-59	INDICATOR,FUEL QTY
JG131A-60	INDICATOR,FUEL QTY
JG131A-61	INDICATOR,FUEL QTY
JG131A-67	INDICATOR,FUEL QTY
JG131A-68	INDICATOR,FUEL QTY
JG131A-69	INDICATOR,FUEL QTY
JG131A-70	INDICATOR,FUEL QTY
JG131A-71	INDICATOR,FUEL QTY
JG131A-73	INDICATOR,FUEL QTY
JG131A-74	INDICATOR,FUEL QTY
JG131A-75	INDICATOR,FUEL QTY
JG131A-76	INDICATOR,FUEL QTY
JG131A-77	INDICATOR,FUEL QTY

JG131A-79	INDICATOR,FUEL QTY
JG131A-80	INDICATOR,FUEL QTY
JG131A-83	INDICATOR,FUEL QTY
JG140A-11	INDICATOR,FUEL QTY
JG140A-12	INDICATOR,FUEL QTY
JG140A-13	INDICATOR,FUEL QTY
JG140A-17	INDICATOR,FUEL QTY
JG141A-11	INDICATOR,FUEL QTY
JG141A-12	INDICATOR,FUEL QTY
JG141A-16	INDICATOR,FUEL QTY
JG141A-17	INDICATOR,FUEL QTY
JG141A-18	INDICATOR,FUEL QTY
JG141A-22	INDICATOR,FUEL QTY
JG141A-23	INDICATOR,FUEL QTY
JG141A-3	INDICATOR,FUEL QTY
JG141A-8	INDICATOR,FUEL QTY
JG141A-9	INDICATOR,FUEL QTY
JG288A-2	INDICATOR,EPR
JG288A-3	INDICATOR,EPR
JG288A-4	INDICATOR,EPR
JG288C2	INDICATOR,EPR
JG298A-1	INDICATOR,PRESSURE R
JG298A-2	INDICATOR,PRESSURE R
JG298A-3	INDICATOR,PRESSURE R
JG298A-4	INDICATOR,PRESSURE R
JG298A-5	INDICATOR,PRESSURE R
JG298A-6	INDICATOR,PRESSURE R
JG298A-7	INDICATOR,PRESSURE R
JG298A-8	INDICATOR,PRESSURE R
JG298B-1	INDICATOR,PRESSURE R
JG298H1	INDICATOR,PRESSURE R
JG298H2	INDICATOR,PRESSURE R
JG3B-10	INDICATOR,FUEL QTY
JG3B-11	INDICATOR,FUEL QTY
JG3B-12	INDICATOR,FUEL QTY
JG3B-9	INDICATOR,FUEL QTY
JG402A-2	INDICATOR,FUEL QTY
JG402A-3	INDICATOR,FUEL QTY
JG402A-32	INDICATOR,FUEL QTY
JG402A-38	INDICATOR,FUEL QTY
JG402A-4	INDICATOR,FUEL QTY
JG402A-52	INDICATOR,FUEL QTY
JG402A-53	INDICATOR,FUEL QTY
JG402A-54	INDICATOR,FUEL QTY
JG402A-55	INDICATOR,FUEL QTY

JG403A-10	INDICATOR,FUEL QTY
JG403A-30	INDICATOR,FUEL QTY
JG403B-1	INDICATOR,FUEL QTY
JG403B-10	INDICATOR,FUEL QTY
JG403B-11	INDICATOR,FUEL QTY
JG403B-12	INDICATOR,FUEL QTY
JG403B-13	INDICATOR,FUEL QTY
JG403B-14	INDICATOR,FUEL QTY
JG403B-2	INDICATOR,FUEL QTY
JG403B-3	INDICATOR,FUEL QTY
JG403B-4	INDICATOR,FUEL QTY
JG403B-5	INDICATOR,FUEL QTY
JG403B-6	INDICATOR,FUEL QTY
JG403B-7	INDICATOR,FUEL QTY
JG403B-9	INDICATOR,FUEL QTY
JG403C-1	INDICATOR,FUEL QTY
JG403C-10	INDICATOR,FUEL QTY
JG403C-11	INDICATOR,FUEL QTY
JG403C-12	INDICATOR,FUEL QTY
JG403C-13	INDICATOR,FUEL QTY
JG403C-14	INDICATOR,FUEL QTY
JG403C-15	INDICATOR,FUEL QTY
JG403C-16	INDICATOR,FUEL QTY
JG403C-17	INDICATOR,FUEL QTY
JG403C-2	INDICATOR,FUEL QTY
JG403C-3	INDICATOR,FUEL QTY
JG403C-4	INDICATOR,FUEL QTY
JG403C-5	INDICATOR,FUEL QTY
JG403C-6	INDICATOR,FUEL QTY
JG403C-8	INDICATOR,FUEL QTY
JG403C-9	INDICATOR,FUEL QTY
JG412A-1	INDICATOR,FUEL QTY
JG412A-10	INDICATOR,FUEL QTY
JG412A-11	INDICATOR,FUEL QTY
JG412A-2	INDICATOR,FUEL QTY
JG412A-3	INDICATOR,FUEL QTY
JG412A-4	INDICATOR,FUEL QTY
JG412A-5	INDICATOR,FUEL QTY
JG412A-52	INDICATOR,FUEL QTY
JG412A-53	INDICATOR,FUEL QTY
JG412A-54	INDICATOR,FUEL QTY
JG412A-55	INDICATOR,FUEL QTY
JG412A-56	INDICATOR,FUEL QTY
JG413G-1	INDICATOR,FUEL QTY
JG413G-2	INDICATOR,FUEL QTY

JG413G-7	INDICATOR,FUEL QTY
JG413G-8	INDICATOR,FUEL QTY
JG433A-3	INDICATOR,OIL QTY.
JG433A-4	INDICATOR,OIL QTY.
JG4B-9	INDICATOR,FUEL TOTAL
JG603C-2	INDICATOR,FUEL QTY
JG603C-3	INDICATOR,FUEL QTY
JG603C-4	INDICATOR,FUEL QTY
JG603C-42	INDICATOR,FUEL QTY
JG603C-43	INDICATOR,FUEL QTY
JG603C-44	INDICATOR,FUEL QTY
JG603C-51	INDICATOR,FUEL QTY
JG603C-52	INDICATOR,FUEL QTY
JG603C-67	INDICATOR,FUEL QTY
JG603C-70	INDICATOR,FUEL QTY
JG603C-73	INDICATOR,FUEL QTY
JG603C-78	INDICATOR,FUEL QTY
JG603C-80	INDICATOR,FUEL QTY
JG603C-81	INDICATOR,FUEL QTY
JG603D46	INDICATOR,FUEL QTY.R
JG603D47	INDICATOR,FUEL QTY.R
JG603D48	INDICATOR,FUEL QTY.R
JG603D49	INDICATOR,FUEL QTY.R
JG603D60	INDICATOR,FUEL QTY.R
JG603D61	INDICATOR,FUEL QTY.R
JG603D69	INDICATOR,FUEL QTY.R
JG603D77	INDICATOR,FUEL QTY.R
JG603D83	INDICATOR,FUEL QTY.R
JG603D84	INDICATOR,FUEL QTY.R
JG613C-1	INDICATOR,FUEL QTY.T
JG613C-45	INDICATOR,FUEL QTY.T
JG613C-53	INDICATOR,FUEL QTY.T
JG613C-54	INDICATOR,FUEL QTY.T
JG613C-68	INDICATOR,FUEL QTY.T
JG613C-71	INDICATOR,FUEL QTY.T
JG613C-72	INDICATOR,FUEL QTY.T
JG613C-74	INDICATOR,FUEL QTY.T
JG613C-75	INDICATOR,FUEL QTY.T
JG613C-76	INDICATOR,FUEL QTY.T
JG613C-79	INDICATOR,FUEL QTY.T
JG613C-82	INDICATOR,FUEL QTY.T
JG7019A-24	INDICATOR,FUEL QTY.
JG7019A-25	INDICATOR,FUEL QTY.
JG7019A-26	INDICATOR,FUEL QTY.
JG7019A-27	INDICATOR,FUEL QTY.

JG7040F-1	TANK UNIT
JG7040F-2	TANK UNIT
JG7040F-3	TANK UNIT
JG7040F-4	TANK UNIT
JG7040G-1	TANK UNIT
JG7040G-2	TANK UNIT
JG7040G-3	TANK UNIT
JG7040G-4	TANK UNIT
JG7041A-10	INDICATOR,FUEL TOTAL
JG873A-1	INDICATOR,TRUE AIRSP
JG873A-4	INDICATOR,TRUE AIRSP
JG873B1	INDICATOR,TRUE AIRSP
JG908A1	INDICATOR,TEMP/EPR
JG908A10	INDICATOR,TEMP/EPR
JG908A11	INDICATOR,TEMP/EPR
JG908A12	INDICATOR,TEMP/EPR
JG908A13	INDICATOR,TEMP/EPR
JG908A14	INDICATOR,TEMP/EPR
JG908A15	INDICATOR,TEMP/EPR
JG908A16	INDICATOR,TEMP/EPR
JG908A17	INDICATOR,TEMP/EPR
JG908A18	INDICATOR,TEMP/EPR
JG908A19	INDICATOR,TEMP/EPR
JG908A21	INDICATOR,TEMP/EPR
JG908A25	INDICATOR,TEMP/EPR
JG908A27	INDICATOR,TEMP/EPR
JG908A29	INDICATOR,TEMP/EPR
JG908A3	INDICATOR,TEMP/EPR
JG908A30	INDICATOR,TEMP/EPR
JG908A33	INDICATOR,TEMP/EPR
JG908A4	INDICATOR,TEMP/EPR
JG908A41	INDICATOR,TEMP/EPR
JG908A5	INDICATOR,TEMP/EPR
JG908A57	INDICATOR,TEMP/EPR
JG908A58	INDICATOR,TEMP/EPR
JG908A6	INDICATOR,TEMP/EPR
JG908A7	INDICATOR,TEMP/EPR
JG908A8	INDICATOR,TEMP/EPR
JG908A9	INDICATOR,TEMP/EPR
K97-31-201	CONNECTOR,FILLER
K97-51-201	CONNECTOR,REFUEL/DRA
K97-63-206	CONNECTOR,FILLING
K97Z63-204	CONNECTOR,FILLING
K99-001	VALVE,DRAIN
K99-002	VALVE,DRAIN

K99-38-203	VALVE,DRAIN
K99-38-204	VALVE,DRAIN
L83A13-609	VALVE,WATER DRAIN
L83A13-610	VALVE,WATER DRAIN
L83A13-611	VALVE,WATER DRAIN
L83A13-616	VALVE,WATER DRAIN
L83A601	VALVE,WATER DRAIN
L83A602	VALVE,WATER DRAIN
L83A603	VALVE,WATER DRAIN
L84-003	VALVE,NON RETURN
L84-005	VALVE,NON-RETURN
L84-006	VALVE,NON-RETURN
L84-006A	VALVE,NON-RETURN
L84-008	VALVE,NON-RETURN
L84-19-602	VALVE,NON-RETURN
L84A13-603	VALVE,NON-RETURN
L84A19-601	VALVE,NON-RETURN
L84A19-602	VALVE,NON-RETURN
L84A19-606	VALVE,NON-RETURN
L84B31-001	VALVE,NON-RETURN
L85D38-001	VALVE,NON RETURN FLA
L85Z13-201	VALVE,CHECK
L87-13-001	VALVE,FLOAT
L87A19-204	VALVE,FLOAT
L87A19-206	VALVE,WING FILLER
L87A19-207	VALVE,WING FILLER
L87B63-202	VALVE,CROSSFEED
L87B63-653	VALVE,CROSSFEED
L87D06-001	VALVE,FLOAT
L88A19-203	DISTRIBUTOR,FUEL SUP
L88A19-205	DISTRIBUTOR,FUEL SUP
L88A19-207	DISTRIBUTOR,FUEL SUP
L88A19-208	DISTRIBUTOR,FUEL SUP
L88A19-209	DISTRIBUTOR,FUEL SUP
L88A203	CONTROL,L.H.
L88A203-1	CONTROL,L.H.
L88A205	CONTROL,L.H.
L88A206	RIGHT HAND CONTROL V
L88A25-202	MANIFOLD,FUEL SUPPLY
L88A25-203	DISTRIBUTOR,FUEL SUP
L88A25-205	MANIFOLD,FUEL SUPPLY
L88A31-201	UNIT,FUEL TRANSFER
L88A31-203	MANIFOLD,FUEL TRANSF
L88A31-205	UNIT,FUEL TRANSFER
L88A31-206	UNIT,PUMP

L88A31-206-1	UNIT,PUMP
L88A31-207	UNIT,FUEL TRANSFER
L88A31-208	MANIFOLD,FUEL TRANSF
L88A31-662	UNIT,LOW PRESS.CROSS
L88A31-662-1	UNIT,LOW PRESS.CROSS
L88A31-663	UNIT,LOW PRESS.CROSS
L88A31-664	UNIT,LOW PRESS.CROSS
L88A31-664-1	UNIT,LOW PRESS.CROSS
L88A31-665	UNIT,NOZZLE CROSSFEE
L88A31-665-1	UNIT,NOZZLE CROSSFEE
L88A31-665-2	UNIT,NOZZLE CROSSFEE
L88A31-666	UNIT,NOZZLE CROSSFEE
L88A31-666-1	UNIT,NOZZLE CROSSFEE
L88A31-666-2	UNIT,NOZZLE CROSSFEE
L89A203	VALVE,FLOAT
L92A07-501	VALVE,SOLENOID
L92A07-502	VALVE,SOLENOID
L92B07-203	VALVE,SOLENOID
L92C07-001	VALVE,TEST SOLENOID
L94D26-203	VALVE,FILLER
L95-001	VALVE,DEFOGGING
L95B13-401	VALVE,PRESSURE RELIE
L95F100-601	PROTECTOR,OVERPRESSU
L95F100-602	PROTECTOR,OVERPRESSU
L95H07-202	VALVE,HYDRAULIC CHEC
L96-001	TRANSMITTER,PRESSURE
L96-002	TRANSMITTER,PRESSURE
L96-19-004	VALVE,CHECK
L96-19-005	VALVE,CHECK
L96-26-205	VALVE,CHECK
L96-31-202	VALVE,CHECK
L96A26-203	TRANSMITTER,PRESSURE
L96A26-204	TRANSMITTER,PRESSURE
L96A26-209	TRANSMITTER,PRESSURE
L96Z19-003	VALVE,CHECK
L96Z19-203	VALVE,CHECK
L96Z31-201	VALVE,CHECK
L98A201	INDICATOR,MAGNETIC L
L98A202	INDICATOR,MAGNETIC L
L98A602	INDICATOR,MAGNETIC L
L98A603	INDICATOR,MAGNETIC L
L98A604	INDICATOR,MAGNETIC L
L98A605	INDICATOR,MAGNETIC L
L98A606	INDICATOR,MAGNETIC L
L98A608	INDICATOR,MAGNETIC L

L98A609	INDICATOR,MAGNETIC L
L98A611	INDICATOR,MAGNETIC L
L98A612	INDICATOR,MAGNETIC L
L98A613	INDICATOR,MAGNETIC L
L98A614	INDICATOR,MAGNETIC L
L98A615	INDICATOR,MAGNETIC L
L98A616	INDICATOR,MAGNETIC L
L98A617	INDICATOR,MAGNETIC L
L98A618	INDICATOR,MAGNETIC L
L98A619	INDICATOR,MAGNETIC L
L98A620	INDICATOR,MAGNETIC L
L98A621	INDICATOR,MAGNETIC L
L98A622	INDICATOR,MAGNETIC L
L98A623	INDICATOR,MAGNETIC L
L98A624	INDICATOR,MAGNETIC L
L98A625	INDICATOR,MAGNETIC L
L98A626	INDICATOR,MAGNETIC L
L98A627	INDICATOR,MAGNETIC L
L98A628	INDICATOR,MAGNETIC L
L98A629	INDICATOR,MAGNETIC L
L98A630	INDICATOR,MAGNETIC L
L98A631	INDICATOR,MAGNETIC L
L98A632	INDICATOR,MAGNETIC L
L98A633	INDICATOR,MAGNETIC L
L98A634	INDICATOR,MAGNETIC L
L98A636	INDICATOR,MAGNETIC L
L98A637	INDICATOR,MAGNETIC L
L98A638	INDICATOR,MAGNETIC L
L98A639	INDICATOR,MAGNETIC L
L98A640	INDICATOR,MAGNETIC L
L98A641	INDICATOR,MAGNETIC L
L98A642	INDICATOR,MAGNETIC L
L98A643	INDICATOR,MAGNETIC L
L98A644	INDICATOR,MAGNETIC L
L98A645	INDICATOR,MAGNETIC L
L98A646	INDICATOR,MAGNETIC L
L98A647	INDICATOR,MAGNETIC L
L98A648	INDICATOR,MAGNETIC L
L98A649	INDICATOR,MAGNETIC L
L98A650	INDICATOR,MAGNETIC L
L98A651	INDICATOR,MAGNETIC L
L98A652	INDICATOR,MAGNETIC L
L98A653	INDICATOR,MAGNETIC L
L98A654	INDICATOR,MAGNETIC L
L98A655	INDICATOR,MAGNETIC L

L98A656	INDICATOR,MAGNETIC L
L98A657	INDICATOR,MAGNETIC L
L98A658	INDICATOR,MAGNETIC L
L98A659	INDICATOR,MAGNETIC L
L98A660	INDICATOR,MAGNETIC L
L98A661	INDICATOR,MAGNETIC L
L98A662	INDICATOR,MAGNETIC L
L99D202	SENSOR,FUEL LEVEL
LKCB-8027	AMMETER,AC
M1035()	PANEL,AUDIO
M1035A	PANEL,AUDIO
M1035B	PANEL,AUDIO
M1035C	PANEL,AUDIO
M1035CE1	PANEL,AUDIO
M1035-CEH-1	PANEL,AUDIO
M1035CEK1	PANEL,AUDIO
M1035-CEK-1B	PANEL,AUDIO
M-1035CEKR5B	PANEL,AUDIO
M1035CH1	PANEL,AUDIO
M1035CK1	PANEL,AUDIO
M1035CM1	PANEL,AUDIO
M1035D1	PANEL,AUDIO
M1035D1A	PANEL,AUDIO
M1035DF1	PANEL,AUDIO
M1035DFJ1	PANEL,AUDIO
M1035DFL1	PANEL,AUDIO
M1035DJ1	PANEL,AUDIO
M1035DL1	PANEL,AUDIO
M1035DN1	PANEL,AUDIO
M1035E1	PANEL,AUDIO
M1035EH1	PANEL,AUDIO
M1035EK1	PANEL,AUDIO
M1035F1	PANEL,AUDIO
M1035FJ1	PANEL,AUDIO
M1035FL1	PANEL,AUDIO
M1035H1	PANEL,AUDIO
M1035J1	PANEL,AUDIO
M1035J-2A/B	PANEL,AUDIO
M1035K1	PANEL,AUDIO
M1035L1	PANEL,AUDIO
M1035M1	PANEL,AUDIO
M1035N1	PANEL,AUDIO
M1045A1	PANEL,AUDIO
M1045B1	PANEL,AUDIO
M1045C1	PANEL,AUDIO

M1045CE1	PANEL,AUDIO
M1045CEH1	PANEL,AUDIO
M1045CEK1	PANEL,AUDIO
M1045CH1	PANEL,AUDIO
M1045CK1	PANEL,AUDIO
M1045CM1	PANEL,AUDIO
M1045D1	PANEL,AUDIO
M1045DF1	PANEL,AUDIO
M1045DFJ1	PANEL,AUDIO
M1045DFL1	PANEL,AUDIO
M1045DJ1	PANEL,AUDIO
M1045DL1	PANEL,AUDIO
M1045DN1	PANEL,AUDIO
M1045E1	PANEL,AUDIO
M1045EH1	PANEL,AUDIO
M1045EK1	PANEL,AUDIO
M1045F1	PANEL,AUDIO
M1045-FBAA-HJB7	PANEL,AUDIO CONTROL
M1045FJ1	PANEL,AUDIO
M1045FL1	PANEL,AUDIO
M1045H1	PANEL,AUDIO
M1045K1	PANEL,AUDIO
M1045L1	PANEL,AUDIO
M1045M1	PANEL,AUDIO
M1045N1	PANEL,AUDIO
M3520-1	INDICATOR,TURN & SLI
M3520-2	INDICATOR,TURN & SLI
M3520-3	INDICATOR,TURN & SLI
M3520-4	INDICATOR,TURN & SLI
M3520-5	INDICATOR,TURN & SLI
M3520-6	INDICATOR,TURN & SLI
M4151G-7C-43	SWITCH,ABS.PRESS.ACT
M811B	CLOCK
MA11A1179	ACTUATOR,MOTOR OPERA
MA-750190	ELEMENT,FILTER
MD-1	ALTIMETER
MGH182-100A	GENERATOR,MOTOR
MR5-73000	GEAR,MOTOR REDUCTION
MS28005-8	TRANSMITTER,HYD.PRES
MY20-632-18	BOX,HP CONTROL
MY20632-18-1	BOX,RELAY
MY20-632-18-11	BOX,HP CONTROL
MY20-632-77	BOX,HP CONTROL
NV101AMS7	INDICATOR,ALT/AIRSPE
NYLC50439	ACTUATOR

NYLC50439-1	ACTUATOR
NYLC50717	ACTUATOR
NYLC50717-1	ACTUATOR
NYLC50724-1	ACTUATOR
NYLC50727	ACTUATOR
NYLC51114	ACTUATOR
NYLC51114-1	ACTUATOR
NYLC51120	ACTUATOR,ROTARY
P177-526	VALVE,AUTOMATIC DRAI
P8106	ELEMENT,FILTER
P8157	FILTER,FUEL
P85-533	VALVE,RELIEF
PAA1717	TANK UNIT
PAA1720-1	TANK UNIT
PAA1720-2	TANK UNIT
PBA1154-1	SENSOR,FUEL INBOARD
PBA1154-2	SENSOR,FUEL OUTBOARD
PBA1155	SENSOR,WING
PBA1155-1	SENSOR,WING
PBB1118	SENSOR,FUEL
PBB1118-1	SENSOR,FUEL
PC-17	INVERTER,STATIC
PC-17-1	INVERTER,STATIC
PC-17-2	INVERTER,STATIC
PC-17-3	INVERTER,STATIC
PC-17A	INVERTER,STATIC
PC-17A-1	INVERTER,STATIC
PC-17A-2	INVERTER,STATIC
PE450	LIGHT,RETRACTABLE LA
PF150	LIGHT,FIXED TAXIING
PFS36D6150	LIGHT,TAXI
PFS46D7Q450	LIGHT,LANDING
RC-60	INDICATOR,VERTICAL S
RC-60-10-DE1	INDICATOR,VERTICAL S
RC-60-10-DE2	INDICATOR,VERTICAL S
RC-60-10-DE3	INDICATOR,VERTICAL S
RC-60MS	INDICATOR,VERTICAL S
RCA41-01	INDICATOR,TACHOMETER
RCM-10-3	INDICATOR,RATE OF CL
RCM-10-4	INDICATOR,RATE OF CL
RCS-60-1L	INDICATOR,RATE OF CL
RCS-60-AAU-18/A	INDICATOR,VERTICAL V
RG1007AA03	UNIT,FLASHER TIMING
RG14D3	INDICATOR,FUEL TOTAL
RG14D7	INDICATOR,FUEL TOTAL

RG15A-1	RELAY,TOTALIZER
RG7041A-1	POWER UNIT,TOTALIZIN
RG7041A-2	POWER UNIT
RVA71	VALVE,ALTIMETRIC
RVA71-01	VALVE,ALTIMETRIC
SEDL-0C7P	INDICATOR, BRAKE PRESSURE
SEDLOC7P	INDICATOR,BRAKE PRES
SEL-0C19AG	INDICATOR,EGT
SEL-0C19D	INDICATOR,EGT
SEL-0C19E	INDICATOR,EGT
SEL-0C19F	INDICATOR,EGT
SEL-0C19G	INDICATOR,EGT
SEL-0C4G	INDICATOR,OIL PRESSU
SEL-0C4H	INDICATOR,OIL PRESSU
SEL-0C4J	INDICATOR,OIL PRESSU
SEL-0C4K	INDICATOR,OIL PRESSU
SELD-0C7P	IND. BRAKE PRESSURE
SETL-0C420M	CABIN PRESSURE IND.
SIC5054-5	FQIS COMPUTER
SIC5055-3	FQIS COMPUTER
SIC5055-4	FQIS COMPUTER
SIC5055-5	FQIS COMPUTER
SIC5070-4	FQIS COMPUTER
SIC5076-2	FQIS COMPUTER
SIC5076-3	FQIS COMPUTER
SIC5077-2	FQIS COMPUTER
SIC5077-3	FQIS COMPUTER
SIC5077-4	FQIS COMPUTER
SIC5082-1	FQIS COMPUTER
SIC5082-2	FQIS COMPUTER
SIC5083-1	FUEL QTY. COMPUTER
SLZ9123	INDICATOR,VERTICAL S
SLZ9127	INDICATOR,VERTICAL S
SLZ9140	INDICATOR,VERTICAL S
SLZ9141	INDICATOR,VERTICAL S
SLZ9145	INDICATOR,VERTICAL S
SLZ9157	INDICATOR,VERTICAL S
SLZ9157-1	INDICATOR,VERTICAL S
SLZ9157A1	INDICATOR,VERTICAL S
SLZ9158	INDICATOR,VERTICAL S
SLZ9190	INDICATOR,VERTICAL S
SLZ9200	INDICATOR,VERTICAL S
SLZ9200A	INDICATOR,VERTICAL S
SLZ9200A-1	INDICATOR,VERTICAL S
SLZ9244	INDICATOR,VERTICAL S

SLZ9244A	INDICATOR,VERTICAL S
SLZ9247	INDICATOR,VERTICAL S
SLZ9248	INDICATOR,VERTICAL S
SLZ9464A	INDICATOR,VERTICAL S
SLZ9504A	INDICATOR,VERTICAL S
SLZ9688A	INDICATOR,VERTICAL S
SP16-1B-CA	VALVE,SHUT OFF
SP16-1B-DA	VALVE,SHUT OFF
SR-3A	INDICATOR,FUEL PRESS
SR-3C	INDICATOR,FUEL PRESS
SR-4A	INDICATOR,OIL PRESSU
SR-4B	INDICATOR,OIL PRESSU
SR-4C	INDICATOR,OIL PRESSU
SR-4D	INDICATOR,OIL PRESSU
SR-5A	INDICATOR,MANIFOLD P
SR-6A	INDICATOR,FUEL PRESS
SR-7A	INDICATOR,HYD.PRESSU
SRD-4B	INDICATOR,HYD.PRESSU
SRDL-12C	INDICATOR,FLAP POSIT
SRDL-6D	INDICATOR,DUAL PRESS
SRL-015C	INDICATOR,EPR
SRL-027A	INDICATOR,OXYGEN PRE
SRL-04L	INDICATOR, OIL PRESS
SRL-07AG	INDICATOR,PRESSURE
SRL-07AM	INDICATOR,BRAKE PRES
SRL-07AN	INDICATOR,HYD.BRAKE
SRL-07AW	INDICATOR,HYD.PRESSU
SRL-07AZ	INDICATOR,HYD.BRAKE
SRL-07BC	INDICATOR,RUDDER HYD
SRL-07BG	INDICATOR,RUDDER HYD
SRL-07BH	INDICATOR,RUDDER HYD
SRL-07BM	INDICATOR,SPOIL.HYD.
SRL-07BS	INDICATOR,HYD.PRESSU
SRL-07BW	INDICATOR,HYD.PRESSU
SRL-07BZ	INDICATOR,PRESSURE
SRL-07C	INDICATOR,HYD.BRAKE
SRL-07CD	INDICATOR,HYD.PRESSU
SRL-07CL	INDICATOR,AIR BRAKE
SRL-07CM	INDICATOR,HYD.PRESSU
SRL-07CN	INDICATOR,HYD.BRAKE
SRL-07CP	INDICATOR,SPOIL.HYD.
SRL-07CR	INDICATOR,REVER.HYD.
SRL-07D	INDICATOR,START AIR
SRL-07DA	INDICATOR,HYD.BRAKE
SRL-07DB	INDICATOR,START AIR

SRL-07J	INDICATOR,HYD.PRESSU
SRL-07L	INDICATOR,BRAKE PRES
SRL-07M	INDICATOR,HYD.PRESSU
SRL-07P	INDICATOR,HYDR. BRAK
SRL-07R	INDICATOR,HYD.PRESSU
SRL-07S	INDICATOR,HYD.PRESSU
SRL-09C	INDICATOR,DUCT PRESS
SRL-7F	INDICATOR,HYD.PRESSU
SRL-92E	INDICATOR,AIR PRESSU
SRL-92G	INDICATOR,VALVE POSI
SRL-92H	INDICATOR,PRESSURE
SRL-92P	INDICATOR,PRESSURE
SRL-C7J	INDICATOR,HYD.PRESSU
SRL-C7L	INDICATOR,HYD.PRESSU
ST0109C	TRANSMITTER,DIFF.PRE
ST-104A	TRANSMITTER,OIL PRES
ST-104AC	TRANSMITTER,SYNCHRO
ST-104D	TRANSMITTER,OIL PRES
ST-104E	TRANSMITTER,OIL PRES
ST-104F	TRANSMITTER,OIL PRES
ST-104H	TRANSMITTER,OIL PRES
ST-104P	TRANSMITTER,OIL PRES
ST-104Y	TRANSMITTER,OIL PRES
ST-104Z	TRANSMITTER,OIL PRES
ST-104ZM1	TRANSMITTER,OIL PRES
ST-106AB	TRANSMITTER,DUCT PRE
ST-107Q	TRANSMITTER,HYDRAULI
ST-107Q-M1	TRANSMITTER,HYDRAULI
ST-12AF	TRANSMITTER,FLAP POS
ST-12AF-1	TRANSMITTER,FLAP POS
ST-12AF-1-M2	TRANSMITTER,FLAP POS
ST-12BC	TRANSMITTER,FLAP POS
ST-12BC-M2	TRANSMITTER,FLAP POS
ST-12BD	TRANSMITTER,FLAP POS
ST-12BD1	TRANSMITTER,FLAP POS
ST-12BH	TRANSMITTER,FLAP POS
ST-12S	TRANSMITTER,FLAP POS
ST-12U-1	TRANSMITTER,FLAP POS
ST-12W-1	TRANSMITTER,FLAP POS
ST-207A	TRANSMITTER,HYD.PRES
ST-24B	TRANSFORMER
ST-3A	TRANSMITTER,FUEL PRE
ST-3B	TRANSMITTER,FUEL PRE
ST-4B	TRANSMITTER,OIL PRES
ST-4E	TRANSMITTER,OIL PRES

ST-4H	TRANSMITTER,OIL PRES
ST-4J	TRANSMITTER,OIL PRES
ST-4T	TRANSMITTER,OIL PRES
ST-5A	TRANSMITTER,MANIFOLD
ST-6B	TRANSMITTER,PRESSURE
ST-6C	TRANSMITTER,PRESSURE
ST-7C	TRANSMITTER,HYD.PRES
ST-7D	TRANSMITTER,HYD.PRES
ST-7R	TRANSMITTER,HYD.PRES
ST-7R-M1	TRANSMITTER,HYD.PRES
ST-7T	TRANSMITTER,HYD/AIR
SY2972	MOTOR,WINDSHIELD WIP
SY-7531	GEAR BOX
SYLZ50141-3	CONTROLLER,TEMPERATU
SYLZ51767	CONTROLLER
SYLZ51855	CONTROLLER,WINDOW DE
VA0906XXA	FAN,BATTERY
VIL-0C3B	INDICATOR,FUEL PRESS
VIL-0C3C	INDICATOR,FUEL PRESS
VIL-0C3F	INDICATOR,FUEL PRESS
VIL-0C3J	INDICATOR,FUEL PRESS
VIL-0C4A	INDICATOR,OIL PRESS
VIL-0C4C	INDICATOR,OIL PRESS
VIL-0C4E	INDICATOR,OIL PRESS
VIL-0C4F	INDICATOR,OIL PRESS
VIL-0C4K	INDICATOR,OIL PRESS
VIL-0C7B	INDICATOR,HYD.PRESSU
VT-0107F	TRANSMITTER,HYD.PRES
VT-0107K	TRANSMITTER,HYD.PRES
VT-0303C	TRANSMITTER,FUEL PRE
VT-0304C	TRANSMITTER,OIL PRES
VT-0306D	TRANSMITTER,FUEL/OIL
VT-0306D-03	TRANSMITTER,FUEL/OIL
VT-0306D-1	TRANSMITTER,FUEL/OIL
VT-0306D-2	TRANSMITTER,FUEL/OIL
VT-0306D-3	TRANSMITTER,OIL-FUEL PRESS
VTS431	LATCH,DOOR
VTS442	LATCH,DOOR
VTS4422	LATCH,DOOR
VTS4423	LATCH,DOOR
VTS4424	LATCH,DOOR
VTS4424W1	LATCH,DOOR
VTS443	LATCH,DOOR
WL/820AM/MS/1	ALTIMETER,COUNTER PO
WL/820AM/MS/5	ALTIMETER,COUNTER PO

WL/852AM/MS/1	ALTIMETER,COUNTER PO
WL101AMS2	INDICATOR,ALT/AIRSPE
WL101AMS5	INDICATOR,ALT/AIRSPE
WL101AMS6	INDICATOR,ALT/AIRSPE
WL-113AMA-JA-1	INDICATOR,MACH/AIRSP
WL-113AMA-JA-2	INDICATOR,MACH/AIRSP
WL-118AMA-JA-1	INDICATOR,MACH/AIRSP
WL-118AMA-JA-4	INDICATOR,MACH/AIRSP
WL-120AMA-JA-1	INDICATOR,MACH/AIRSP
WL-120AMA-JA-3	INDICATOR,MACH/AIRSP
WL-120AMA-JA-4	INDICATOR,MACH/AIRSP
WL-120AMA-JA-5	INDICATOR,MACH/AIRSP
WL246ASMS1	INDICATOR,AIRSPEED
WL246ASMS3	INDICATOR,AIRSPEED
WL246ASMS6	INDICATOR,AIRSPEED
WL246ASMS7	INDICATOR,AIRSPEED
WL290AS2	INDICATOR,AIRSPEED
WL301EED2	INDICATOR, N1
WL301EED3	INDICATOR, N1
WL301EED4	INDICATOR, N1
WL-301-XXX	INDICATOR,VIBRATION
WL302EED2	INDICATOR,EPR
WL302EED3	INDICATOR,EPR
WL-302-XXX	INDICATOR,VIBRATION
WL-303-XXX	INDICATOR,VIBRATION
WL-323-045	INDICATOR,VIBRATION
WL-323-XXX	INDICATOR,VIBRATION
WL-331-XXX	INDICATOR,VIBRATION
WL-332-XXX	INDICATOR,VIBRATION
WL-333-XXX	INDICATOR,VIBRATION
WL351EED3	INDICATOR,N2
WL351EED4	INDICATOR,N2
WL351EED5	INDICATOR,N2
WL351EED6	INDICATOR,N2
WL351EED8	INDICATOR,N2
WL352EED10	INDICATOR,EGT
WL352EED3	INDICATOR,EGT
WL352EED4	INDICATOR,EGT
WL352EED5	INDICATOR,EGT
WL352EED6	INDICATOR,EGT
WL353EED2	INDICATOR,FUEL FLOW/
WL353EED3	INDICATOR,FUEL FLOW/
WL353EED3-1	INDICATOR,FUEL FLOW/
WL353EED4	INDICATOR,FUEL FLOW/
WL353EED4-1	INDICATOR,FUEL FLOW/

WL353EED5	INDICATOR,FUEL FLOW/
WL353EED5-1	INDICATOR,FUEL FLOW/
WL353EED6-1	INDICATOR,FUEL FLOW/
WL354EED2	INDICATOR,N1
WL354EED3	INDICATOR,N1
WTMT356	TRANSFORMER
XW20173-G1	MOTOR,ELECTRIC
XW20345-342-110-1	CONVERTER
Z723	SWITCH,ABS.PRESS.ACT